

REMOVAL AND INSTALLATION > FRONT DOOR SPEAKER RH > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > GLOBAL POSITIONING SYSTEM MODULE (GPSM)

Special Tool(s) / General Equipment

Interior Trim Remover

REMOVAL AND INSTALLATION > GLOBAL POSITIONING SYSTEM MODULE (GPSM) > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

1.



NOTE: If installing a new module, it is necessary to upload the module configuration information to the scan tool prior to removing the module. This information must be downloaded into the new module after installation.

Using a diagnostic scan tool, begin the PMI process for the GPSM following the on-screen instructions.

2.



NOTE: Upper instrument panel storage tray with speaker shown, others similar.

Release the clips and remove the instrument panel speaker grille. Use the General Equipment: Interior Trim Remover