

1.

Remove the rear door trim panel. Refer to: Rear Door Trim Panel - SuperCab . Refer to: Rear Door Trim Panel - SuperCrew .

2.

Remove the bolts and the door speaker.

Disconnect the electrical connector.

Torque

: 22 lb.in (2.5 Nm)



REMOVAL AND INSTALLATION > REAR DOOR SPEAKER LH > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > REAR DOOR SPEAKER RH > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

1.

Remove the rear door trim panel. Refer to: Rear Door Trim Panel - SuperCab . Refer to: Rear Door Trim Panel - SuperCrew .

2.

Remove the bolts and the door speaker.

Disconnect the electrical connector.

Torque

: 22 lb.in (2.5 Nm)