

REMOVAL AND INSTALLATION > SYNC MODULE [APIM] > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

1.

Remove the FCDIM. Refer to: Front Control/Display Interface Module (FCDIM) .


2.

Remove the two bolts and the APIM.

Disconnect the electrical connectors.

Torque

: 22 lb.in (2.5 Nm)

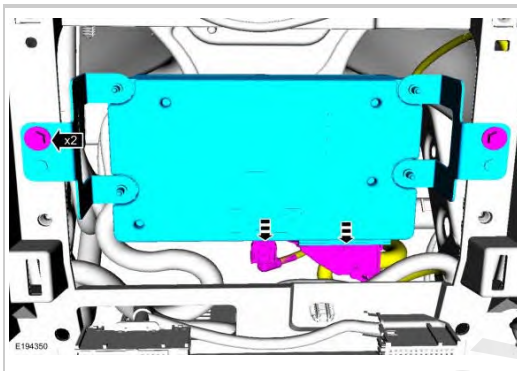

REMOVAL AND INSTALLATION > SYNC MODULE [APIM] > INSTALLATION

1.

To install, reverse the removal procedure.

2.

If a new APIM is being installed, program the APIM to the correct software level. Refer to: SYNC Module [APIM] Programming .

REMOVAL AND INSTALLATION > SYNC MODULE [APIM] TO UNIVERSAL SERIAL BUS (USB) PORT CABLE > REMOVAL

Vehicles with floor console

1.