


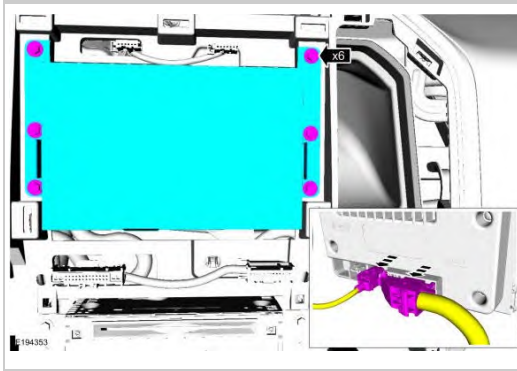

3.

Remove the screws and separate the APIM from the FDIM.

Torque

: 9 lb.in (1 Nm)



REMOVAL AND INSTALLATION > FRONT DISPLAY INTERFACE MODULE (FDIM) > INSTALLATION

1.

To install, reverse the removal procedure.

2.

Calibrate the touchscreen. Refer to: Touchscreen Calibration .

REMOVAL AND INSTALLATION > FRONT DOOR SPEAKER LH > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

1.

Remove the front door trim panel. Refer to: Front Door Trim Panel .