

About this Manual

Introduction

 **WARNING:** Before beginning any service procedure in this manual, refer to health and safety warnings in section 100-00 General Information. Failure to follow this instruction may result in serious personal injury.

For additional information, refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

This manual describes and directs repair procedures specified by Ford Motor Company for the vehicle. Critical health and safety precautions are included. Anyone who deviates from these instructions risks compromising personal safety or vehicle integrity.

SECTION CONTENT

This manual is divided into groups, each containing sections numbered based on the component part number. Section contents may include:

- Specifications
 - Fluid capacities, component specifications and torque values not covered in other procedures
- Description and Operation
 - Overview of the system, component locations, and system operation
- Diagnosis and Testing
 - Symptom charts, DTC charts and diagnostic tests
 - See the Diagnosis and Testing Information in this document
- General Procedures
 - Service adjustments, electronic programming and other special procedures
- Removal and Installation
 - Component removal and installation instructions
- Removal
 - Component removal instructions