

Front Toe Adjustment - Raptor


Special Tool(s) / General Equipment

Wheel Alignment System

Adjustment

1. **NOTE:** Make sure that the vehicle is standing on a level surface.

Steering wheel in straight ahead position.

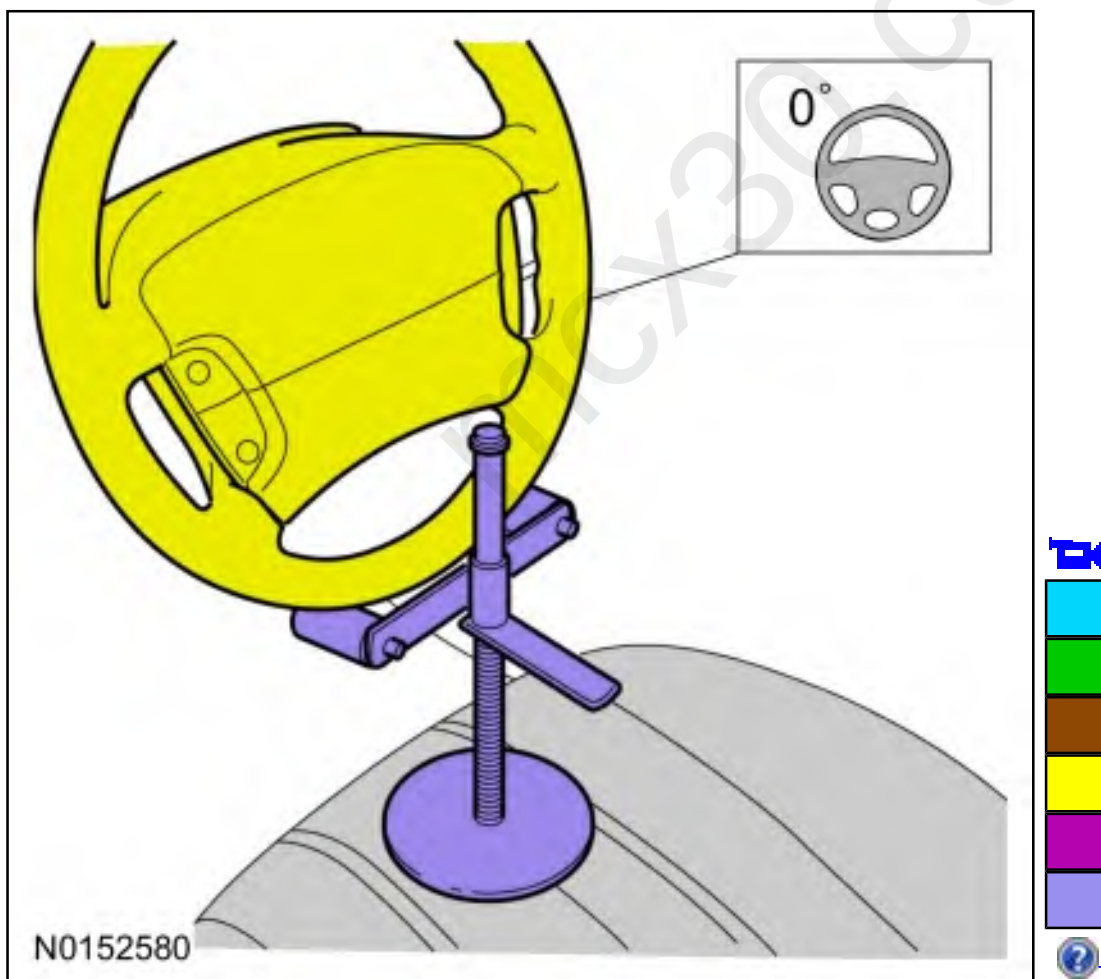


2. Using alignment equipment and the manufacturer's instructions, check the front toe setting on both

sides.

Use the General Equipment: Wheel Alignment System

1. On both sides. Loosen the outer tie rod end jamb nut.
Torque: 76 lb.ft (103 Nm)
2. On both sides. Position aside the steering gear boot clamp.
3. **NOTE:** *Do not allow the steering gear bellows to twist when the inner tie rod is rotated.*

Rotate the inner tie rods until the toe reading is within specifications.

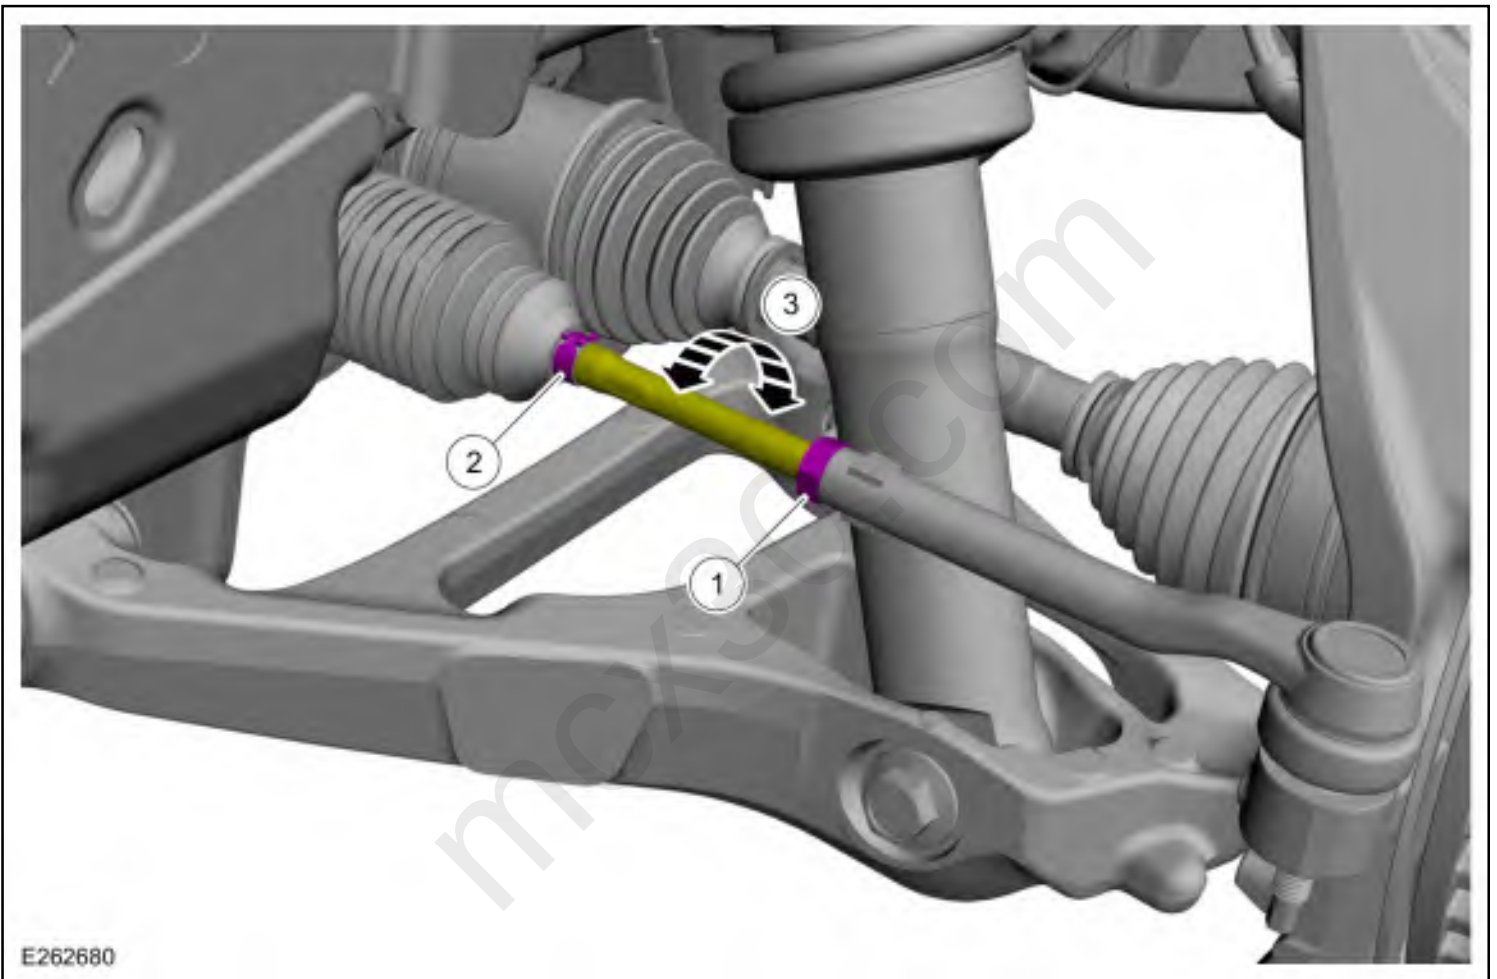

4. Recheck the toe settings and adjust as necessary.