

Front Wheel Bearing and Wheel Hub


Base Part Number: Base Part Number: 1104

Removal

NOTICE: Suspension fasteners are critical parts that affect the performance of vital components and systems. Failure of these fasteners may result in major service expense. Use the same or equivalent parts if replacement is necessary. Do not use a replacement part of lesser quality or substitute design. Tighten fasteners as specified.

1. **NOTE:** The wheel speed sensor electrical connector is located in the engine compartment secured to the fender apron.


Disconnect the wheel speed sensor electrical connector.

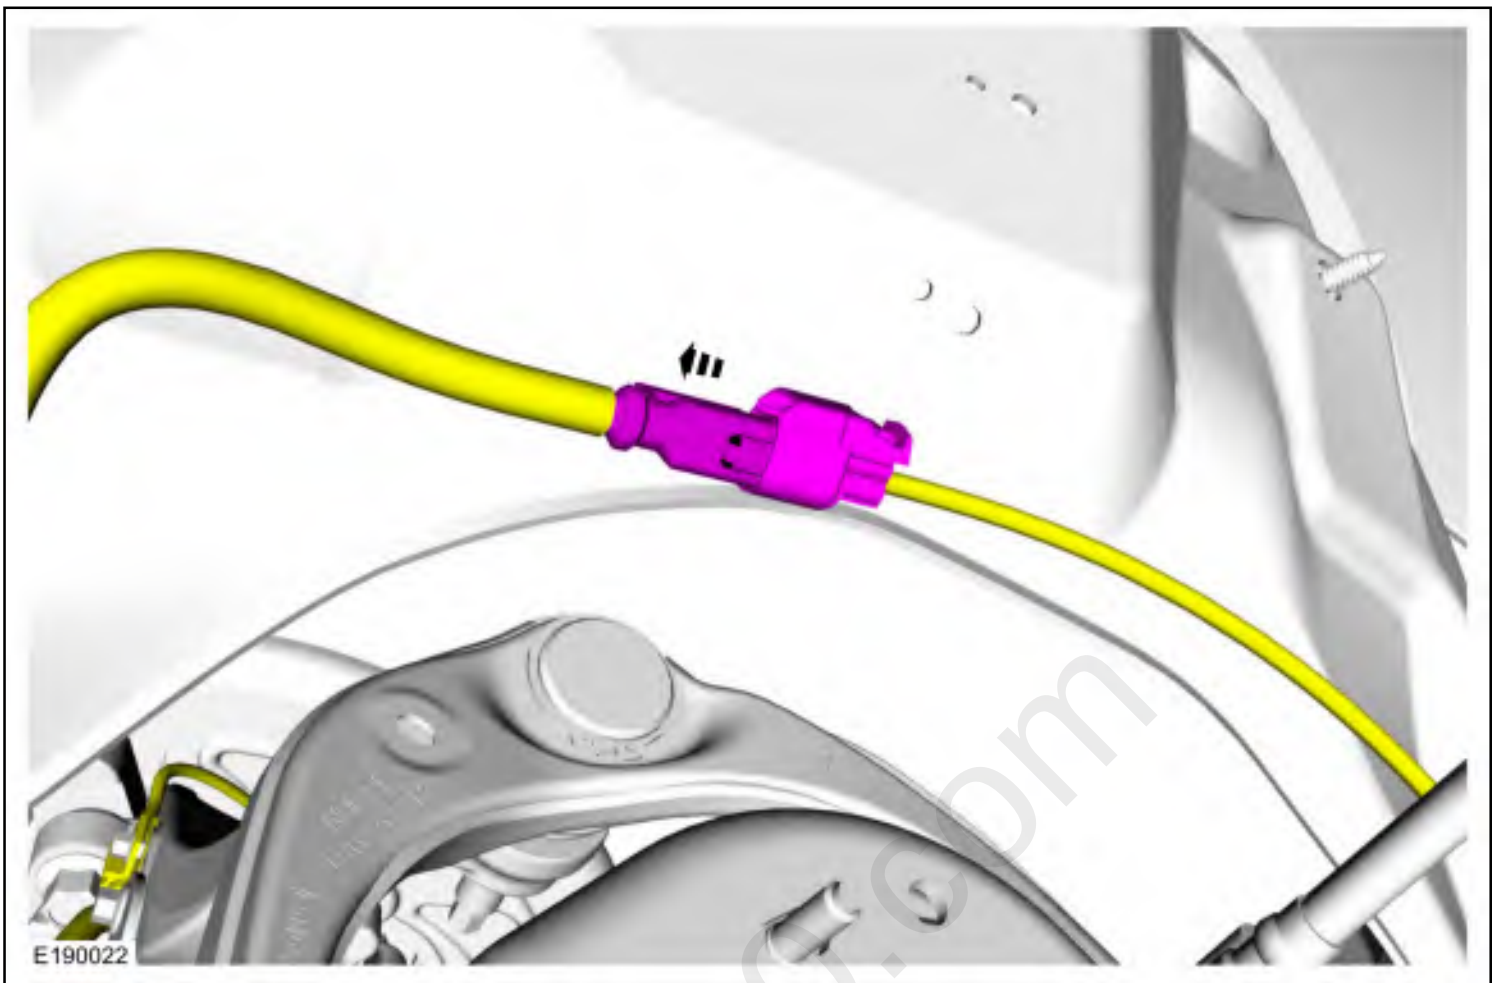


2. Remove the brake disc.

Refer to: [Brake Disc](#) (206-03 Front Disc Brake, Removal and Installation).

1. Remove the wheel speed sensor wire bracket bolt.
2. Unclip the wheel speed sensor wire from the brake hose.
3. Unclip the 2 wheel speed sensor wire retainers and position aside the wheel speed sensor wire.

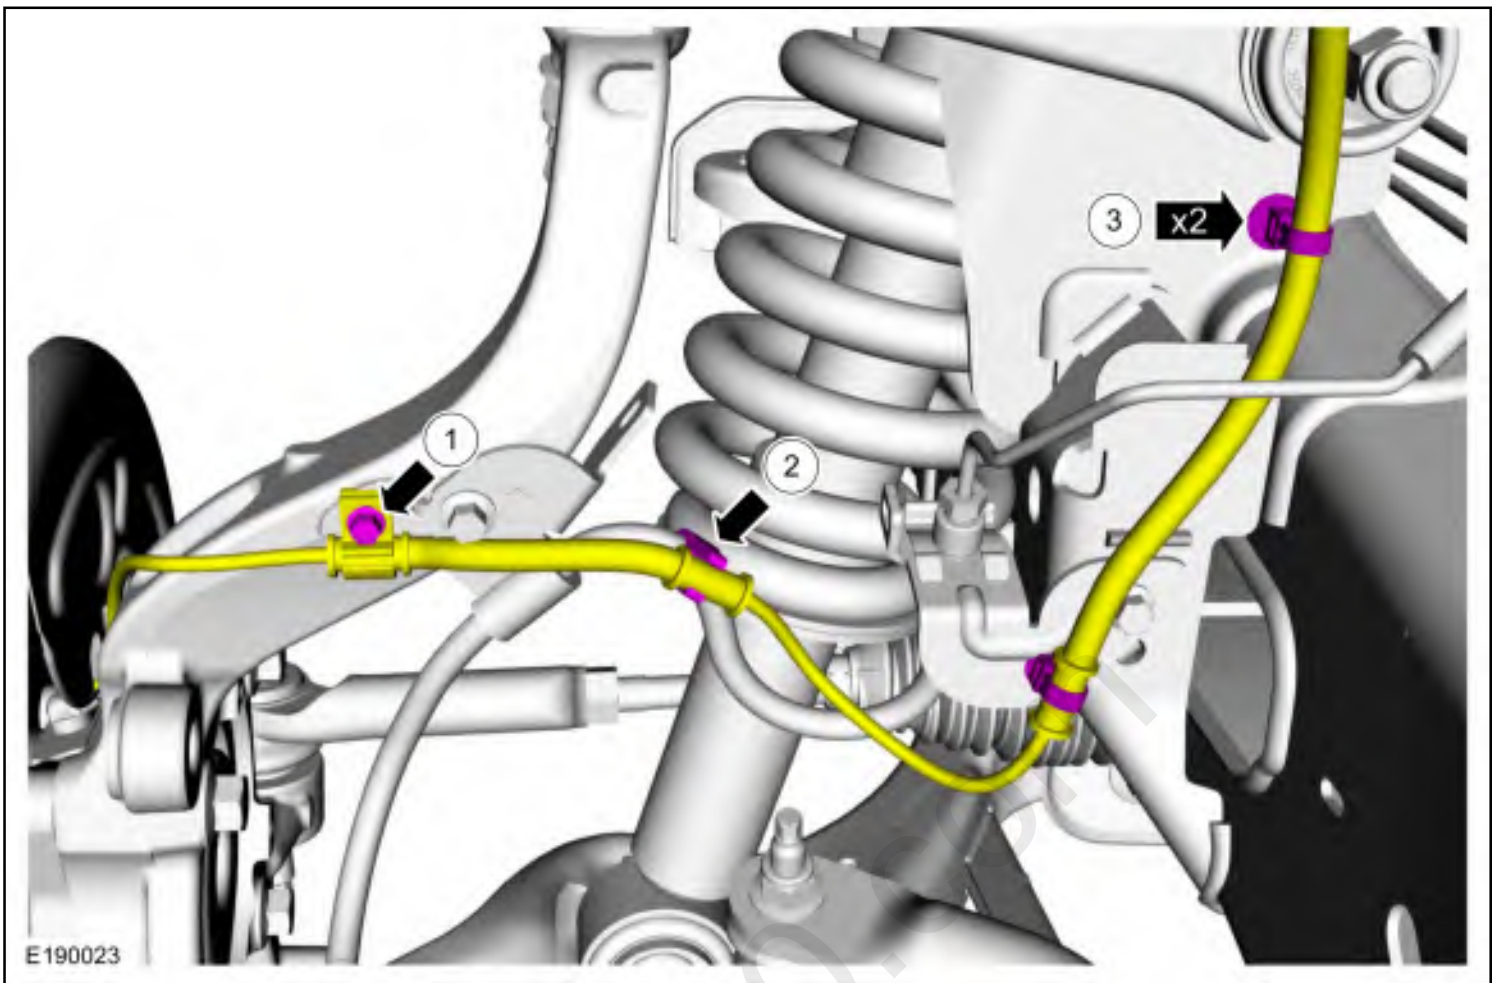

4. Remove and discard the 4 front wheel bearing and wheel hub bolts. Remove the front wheel bearing and wheel hub.

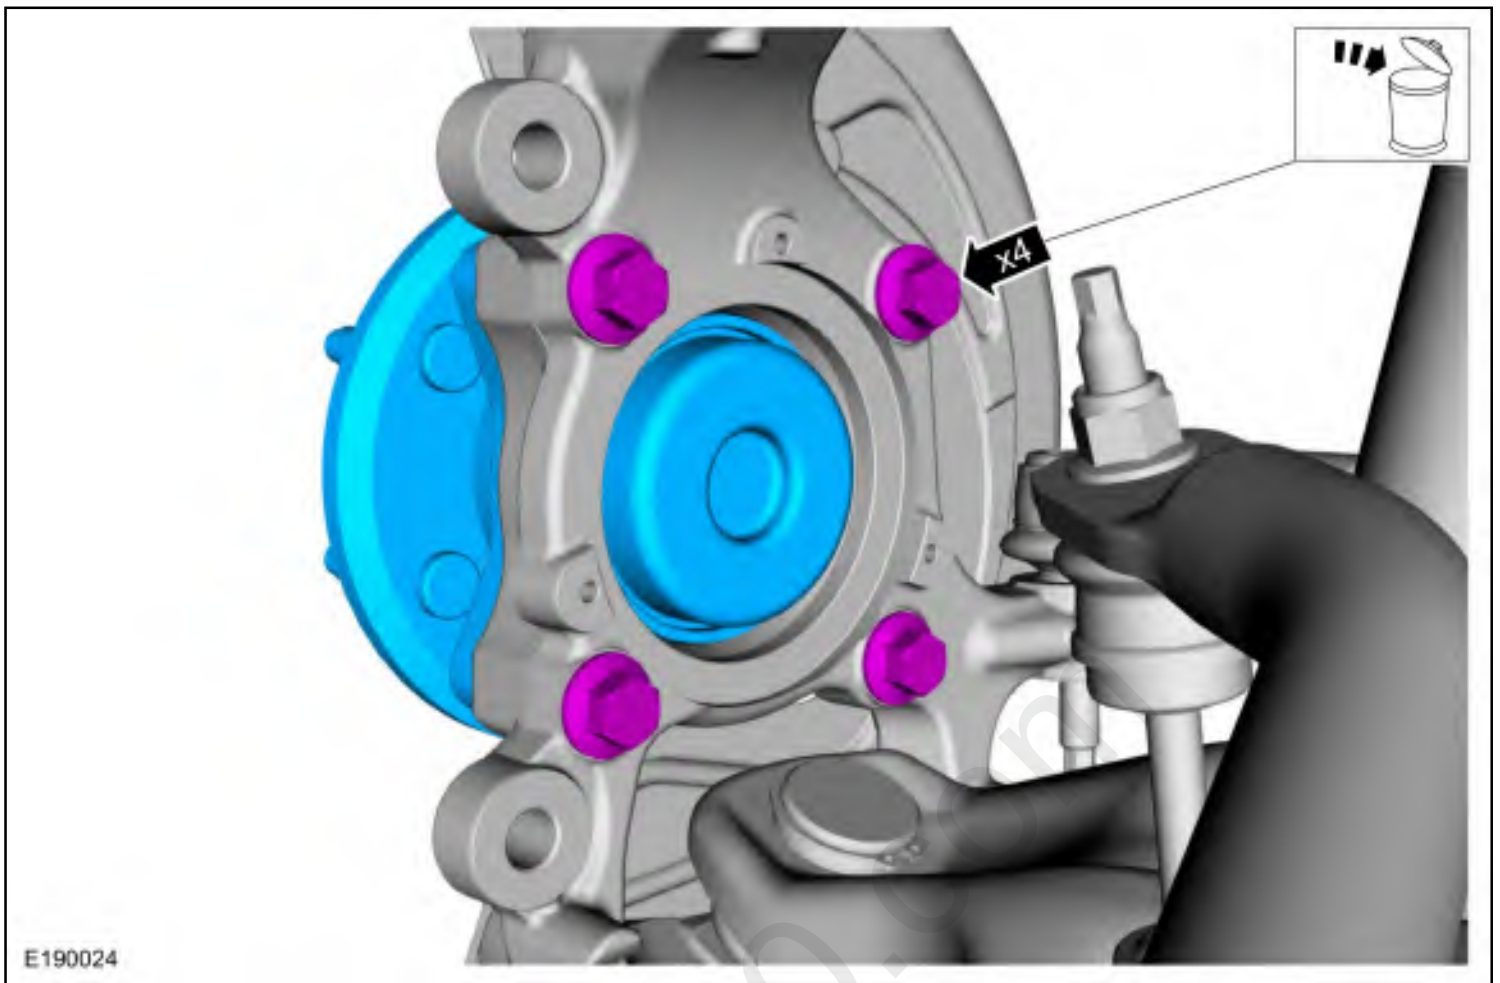


Installation

1. **NOTE:** *Tighten the bolts in a cross pattern.*

Install the front wheel bearing and wheel hub and install the 4 front wheel bearing and wheel hub bolts.

Torque: 129 lb.ft (175 Nm)

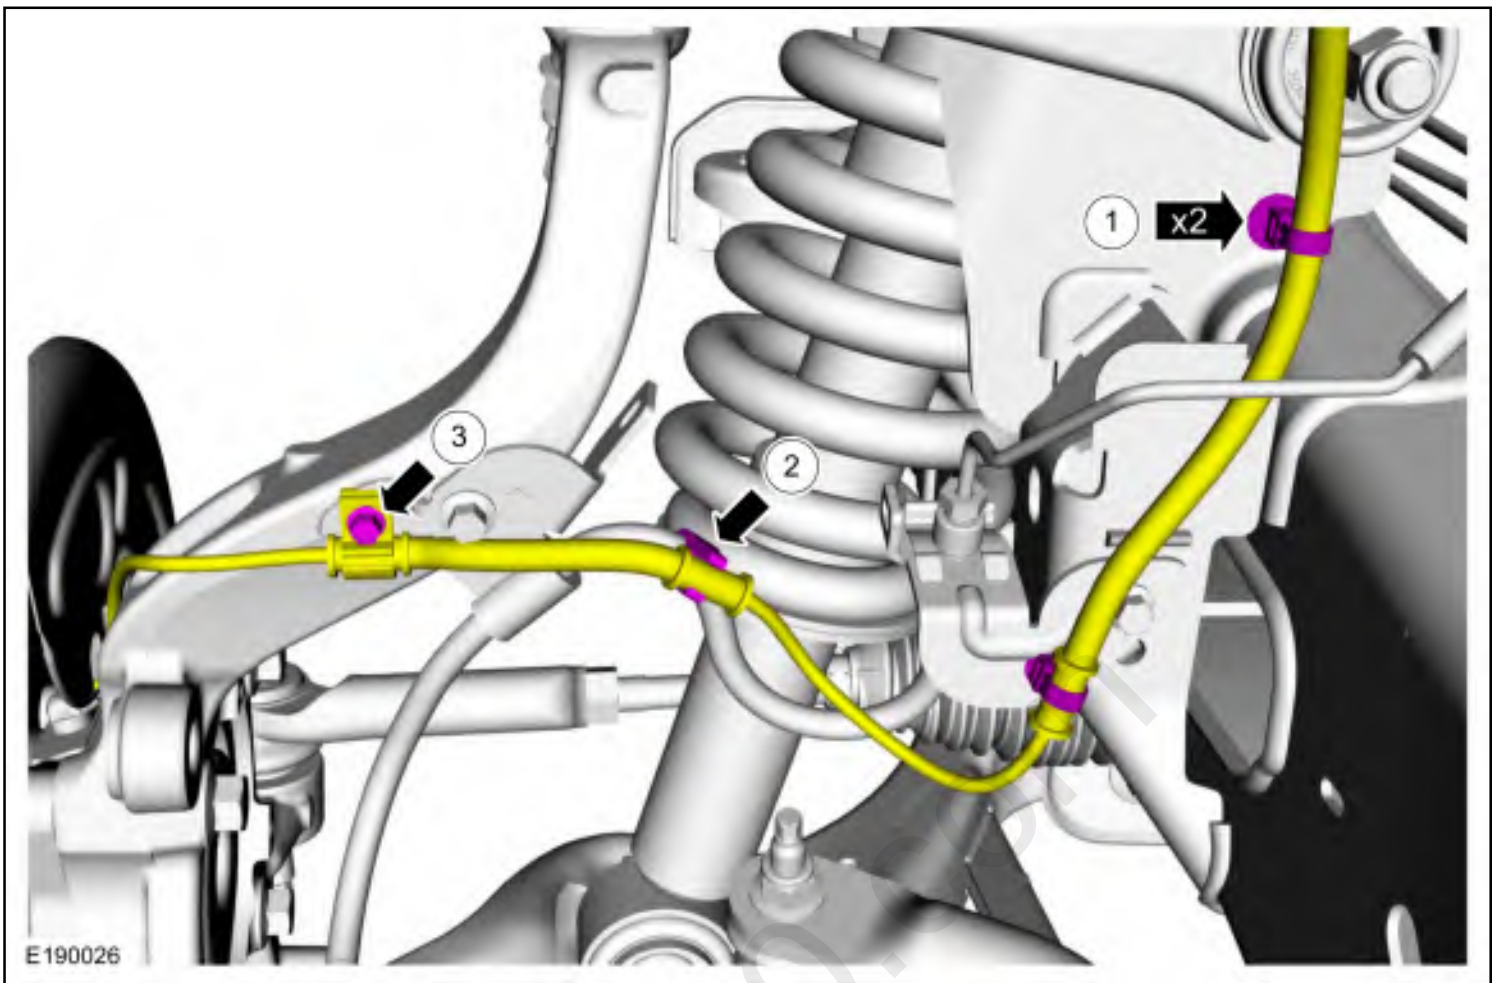


3. Install the brake disc.

Refer to: [Brake Disc](#) (206-03 Front Disc Brake, Removal and Installation).

4. **NOTE:** *The wheel speed sensor electrical connector is located in the engine compartment secured to the fender apron.*

Connect the wheel speed sensor electrical connector.

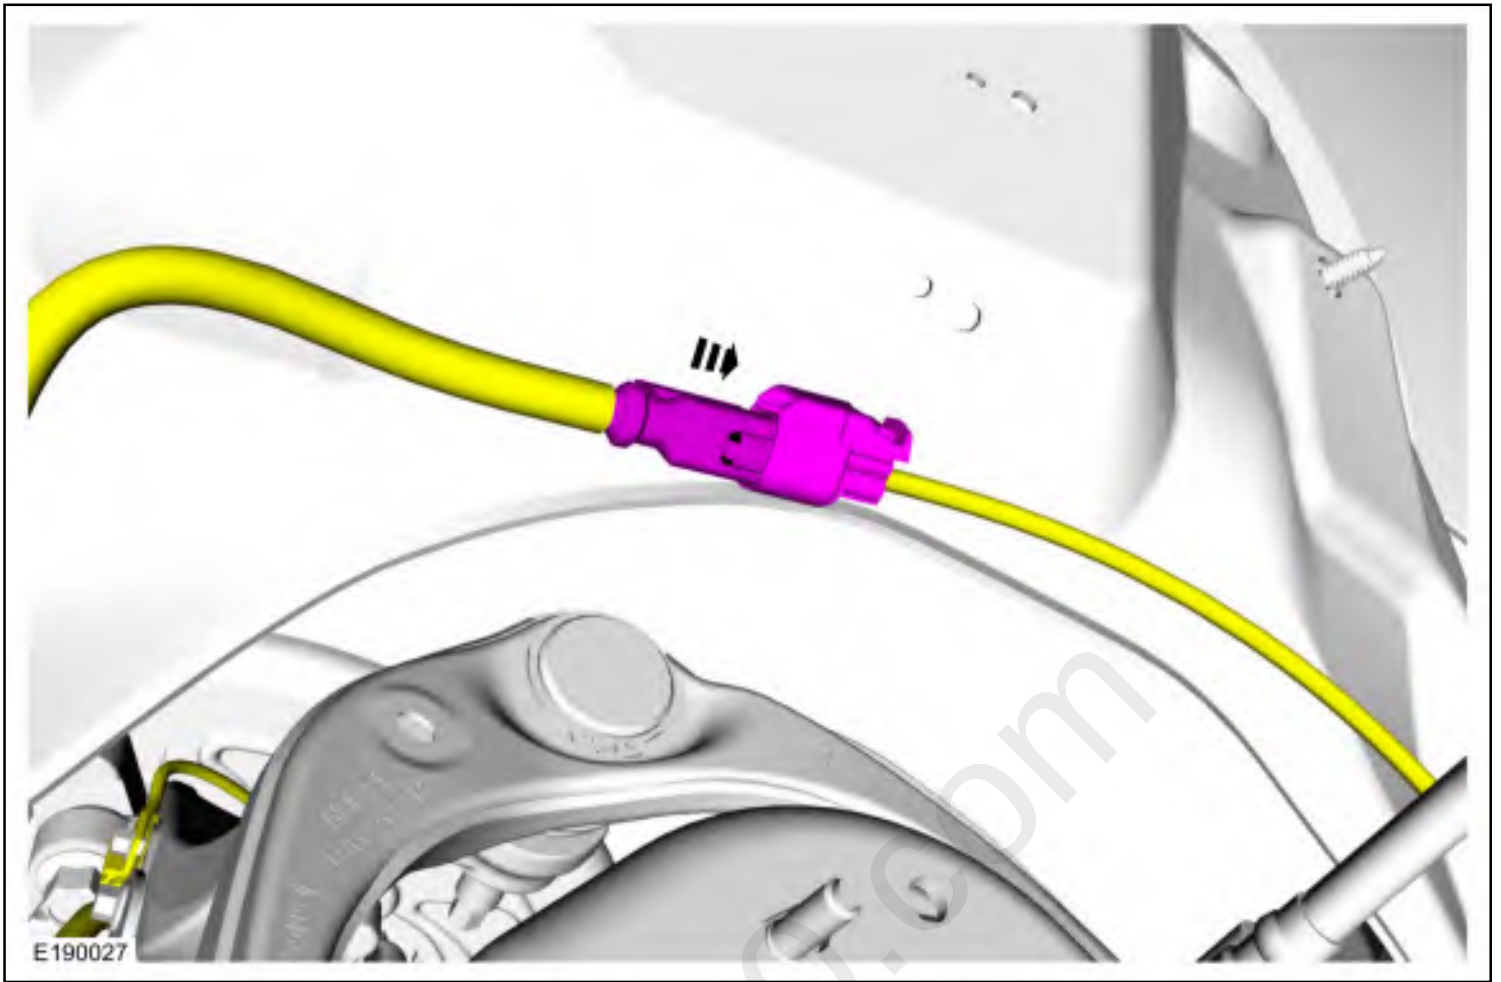

Copyright © 2018 Ford Motor Company