

Lower Ball Joint


Base Part Number: Base Part Number: 3395

Special Tool(s) / General Equipment

	204-358 Remover/Installer, Ball Joint TKIT-2005P-F TKIT-2005P-ROW
	205-086 (T74P-4635-C) Installer/Remover, C-Frame and Screw

Removal


1. Remove the wheel knuckle.
Refer to: [Wheel Knuckle](#) (204-01B Front Suspension - 4WD, Removal and Installation).
2. Remove and discard the lower ball joint snap ring.

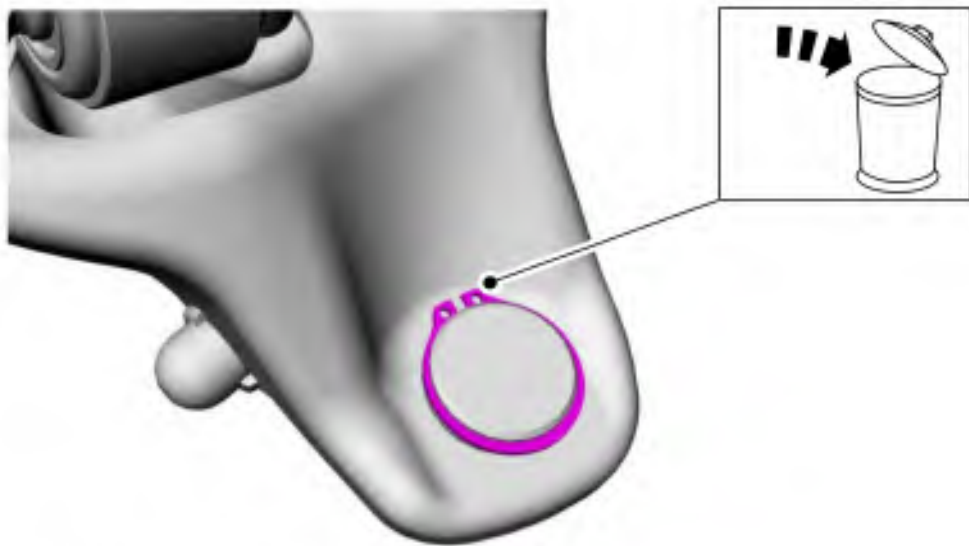

E190081

3. Remove the ball joint from the lower arm.

Use Special Service Tool: 204-358 Remover/Installer, Ball Joint. , 205-086 (T74P-4635-C) Installer/Remover, C-Frame and Screw.

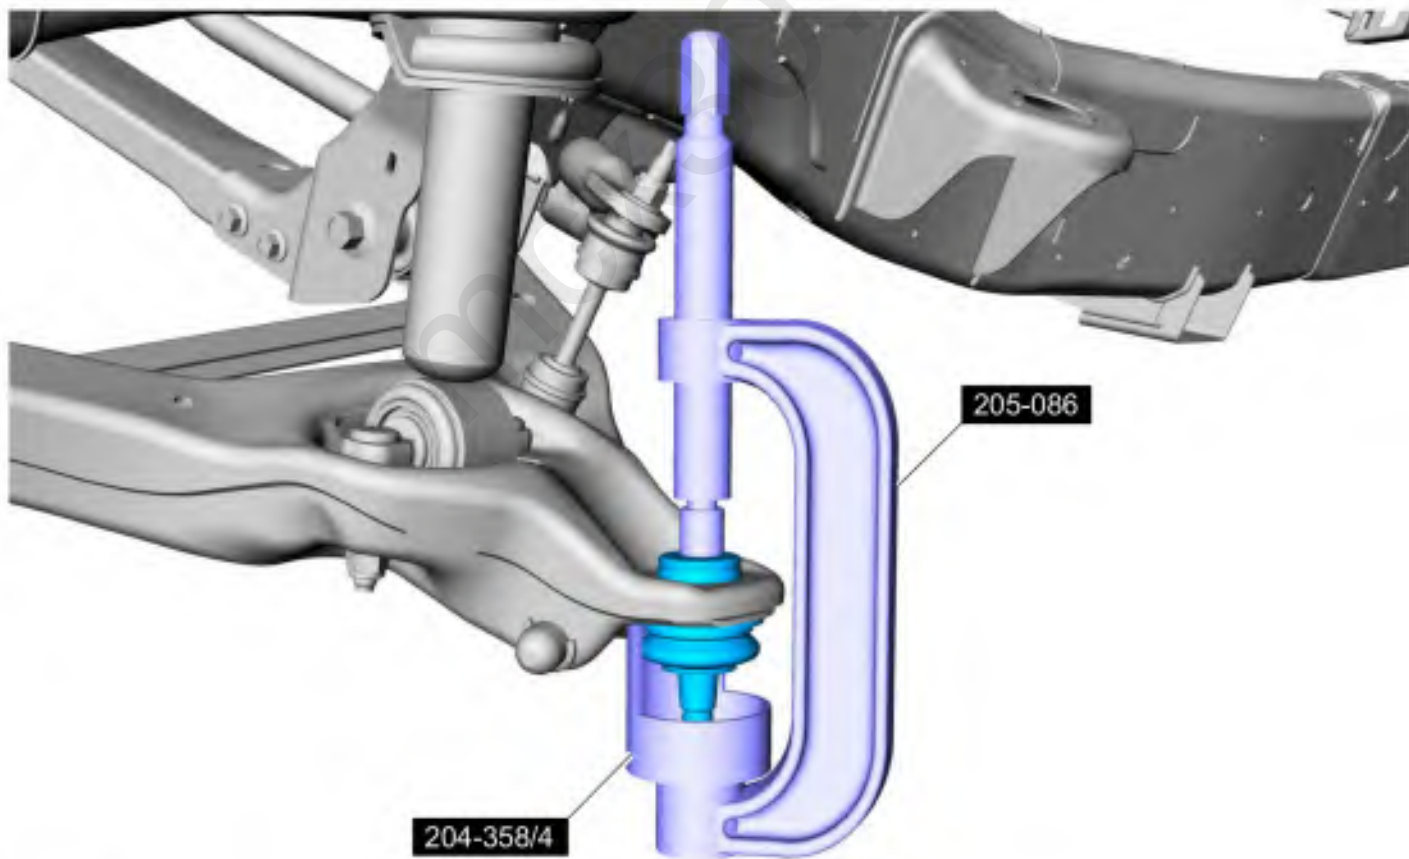


E190082

Installation

1. Install the ball joint into the lower arm.

Use Special Service Tool: 204-358 Remover/Installer, Ball Joint. , 205-086 (T74P-4635-C) Installer/Remover, C-Frame and Screw.

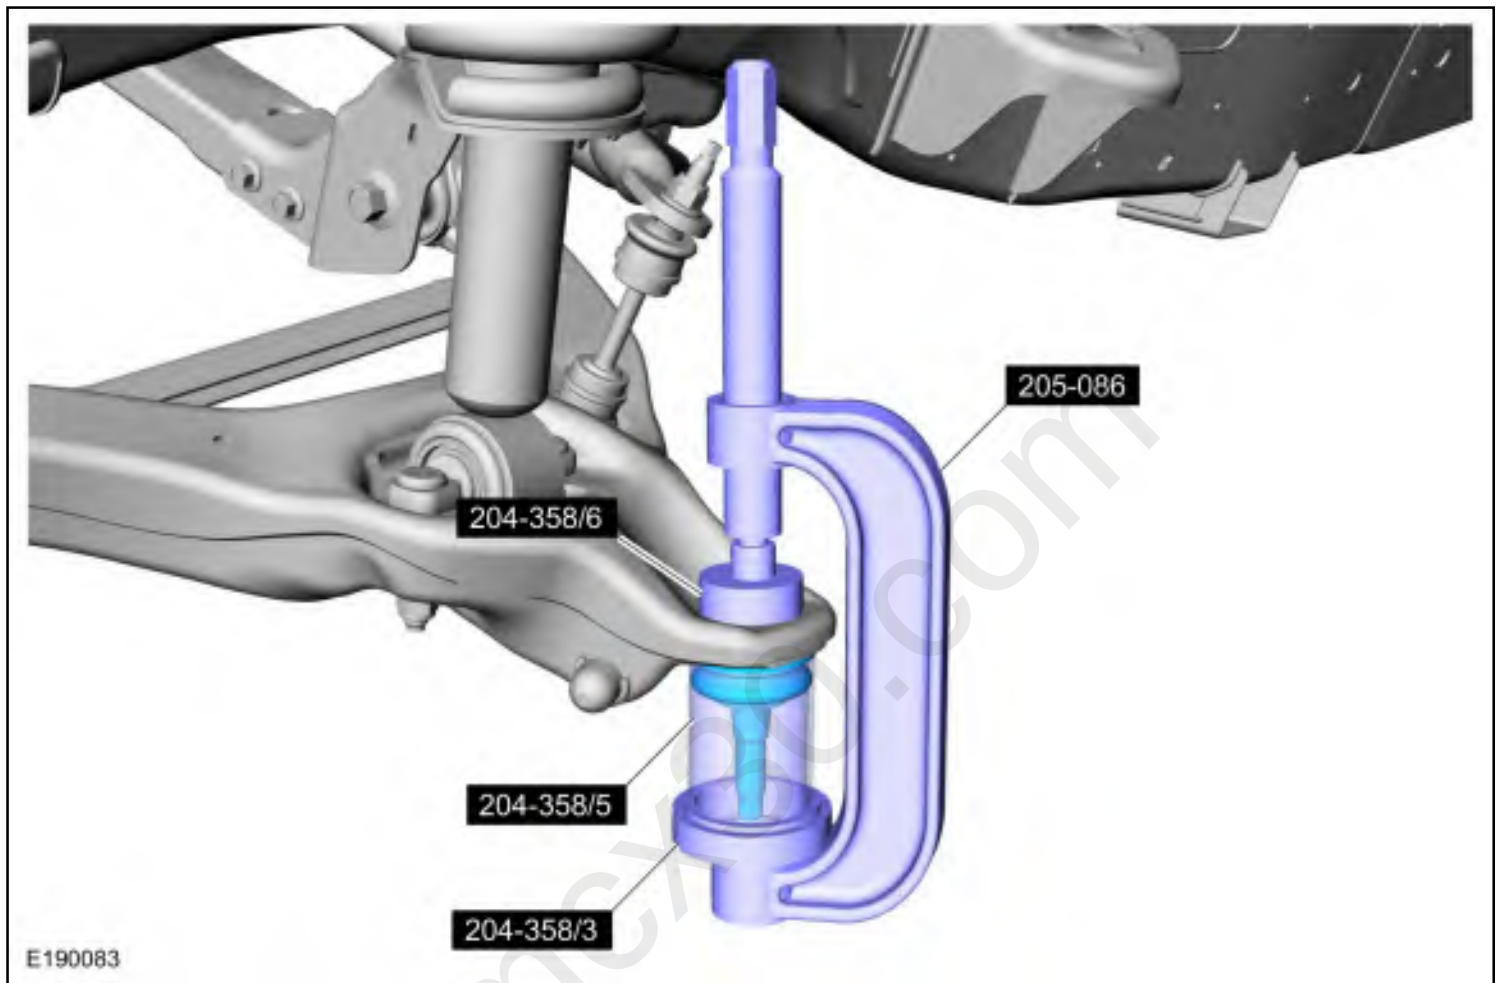

2. **NOTE:** Make sure the ball joint snap ring is fully seated.

Install the new lower ball joint snap ring.



3. Install the wheel knuckle.

Refer to: [Wheel Knuckle](#) (204-01B Front Suspension - 4WD, Removal and Installation).

Copyright © 2018 Ford Motor Company