

Axle Bump Stop


Removal

NOTICE: Suspension fasteners are critical parts that affect the performance of vital components and systems. Failure of these fasteners may result in major service expense. Use the same or equivalent parts if replacement is necessary. Do not use a replacement part of lesser quality or substitute design. Tighten fasteners as specified.

NOTE: Removal steps in this procedure may contain installation details.

NOTE: RWD vehicle shown, 4WD vehicle similar.

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: [Jacking and Lifting - Overview](#) (100-02 Jacking and Lifting, Description and Operation).
2. **NOTICE: Do not use power tools to remove or install the axle bump stop bolt. Damage to the axle bump stop may occur.**
 1. Remove and discard the axle bump stop bolt.
 2. Remove the axle bump stop.

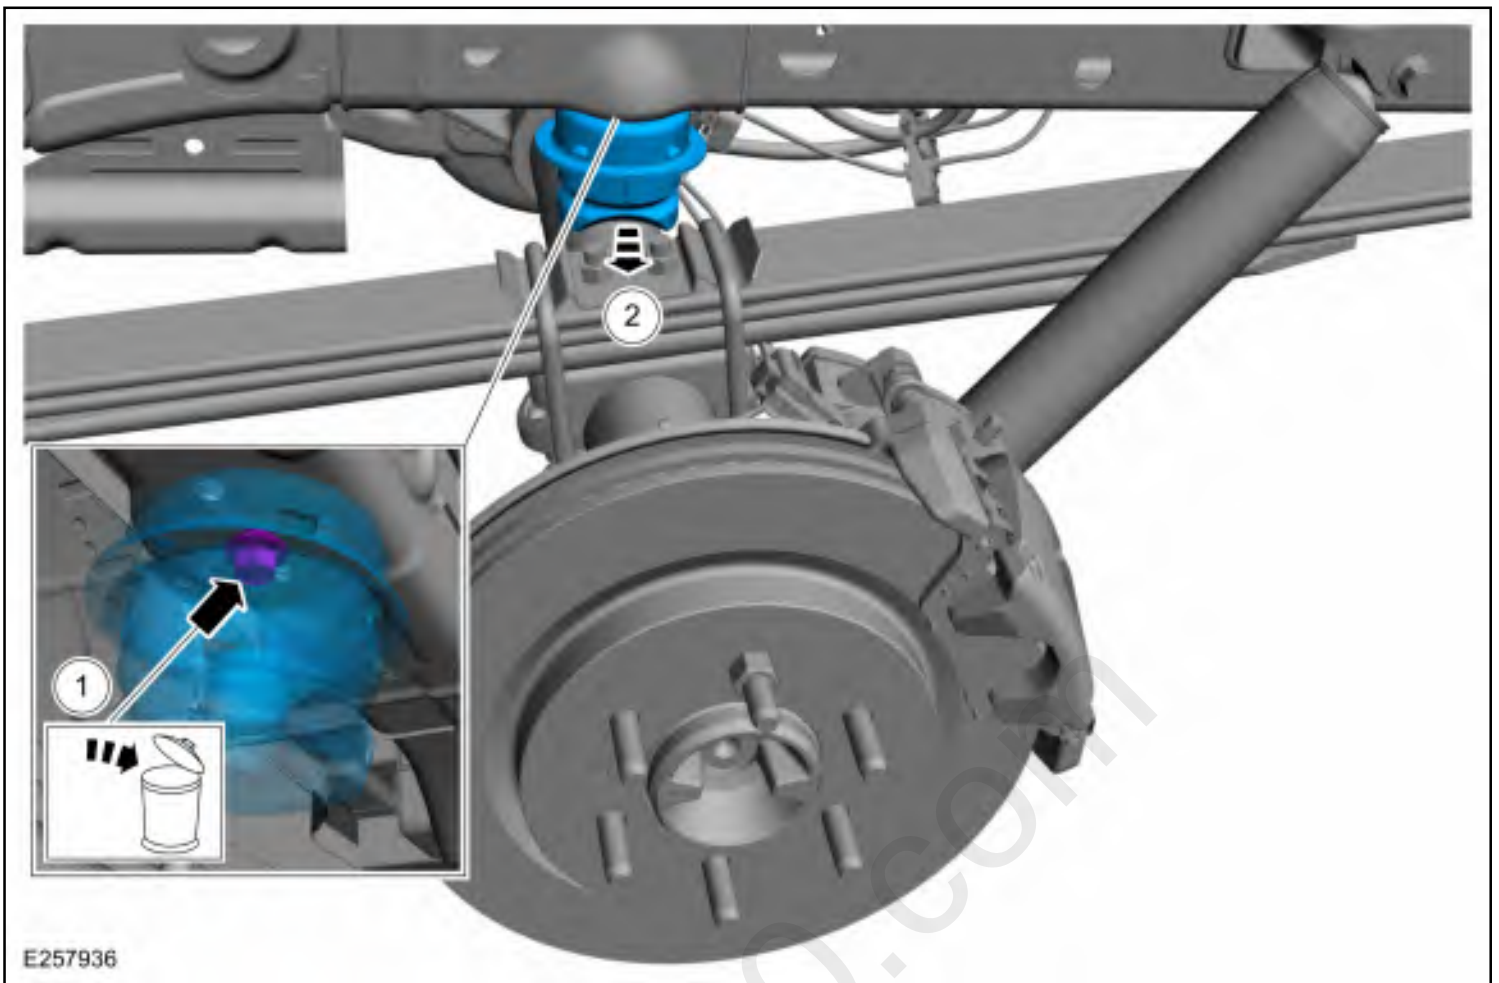


Installation

1. To install, reverse the removal procedure.
2. **NOTICE:** Do not use any lubrication on the axle bump stop or damage to the axle bump stop may occur.

NOTE: If installing a new Axle Bump Stop, make sure the yellow dot on the Axle Bump Stop is pointed toward the rear of the vehicle.


- Inspect and, if necessary, install new axle bump stop.

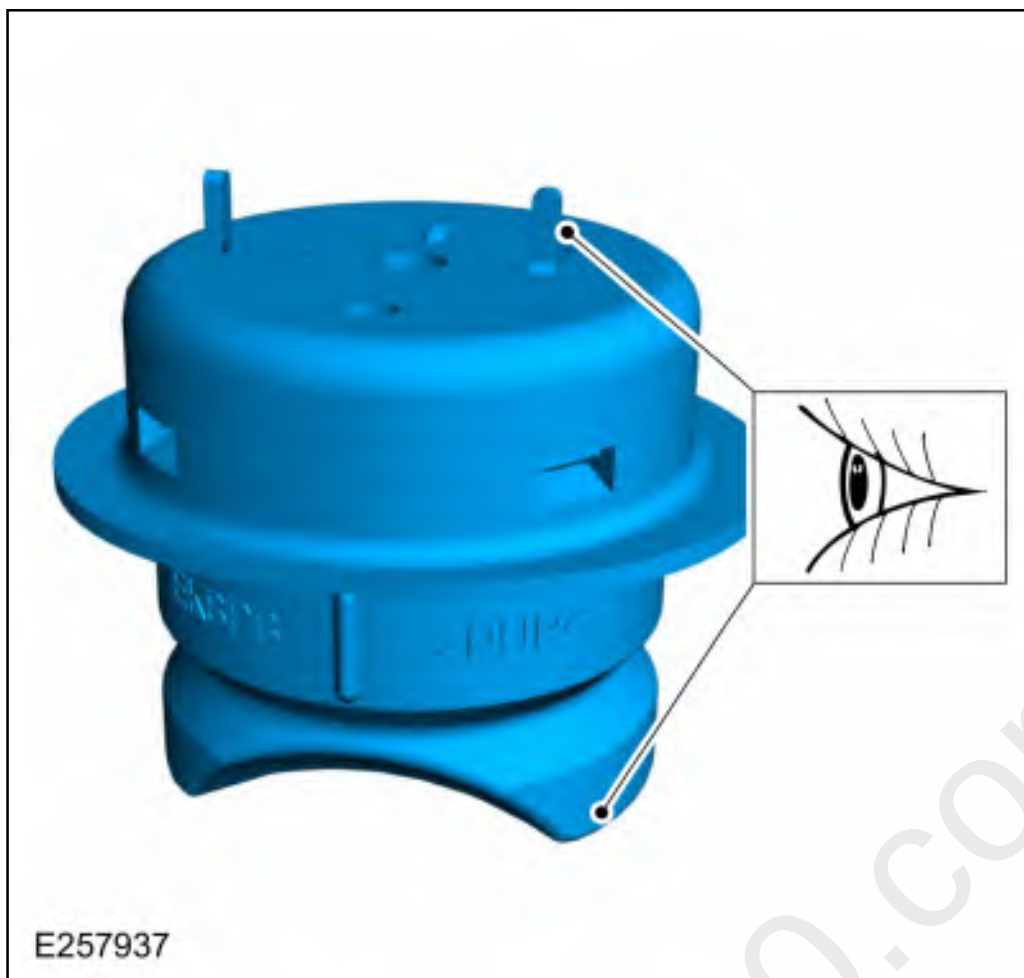

3. **NOTICE:** Do not use power tools to remove or install the axle bump stop bolt. Damage to the axle bump stop may occur.

NOTE: Make sure the yellow dot on the Axle Bump Stop is pointed toward the rear of the vehicle.

1. Inspect the yellow paint dot on axle bump stop.
2. Install the axle bump stop.
Torque: 41 lb.ft (55 Nm)

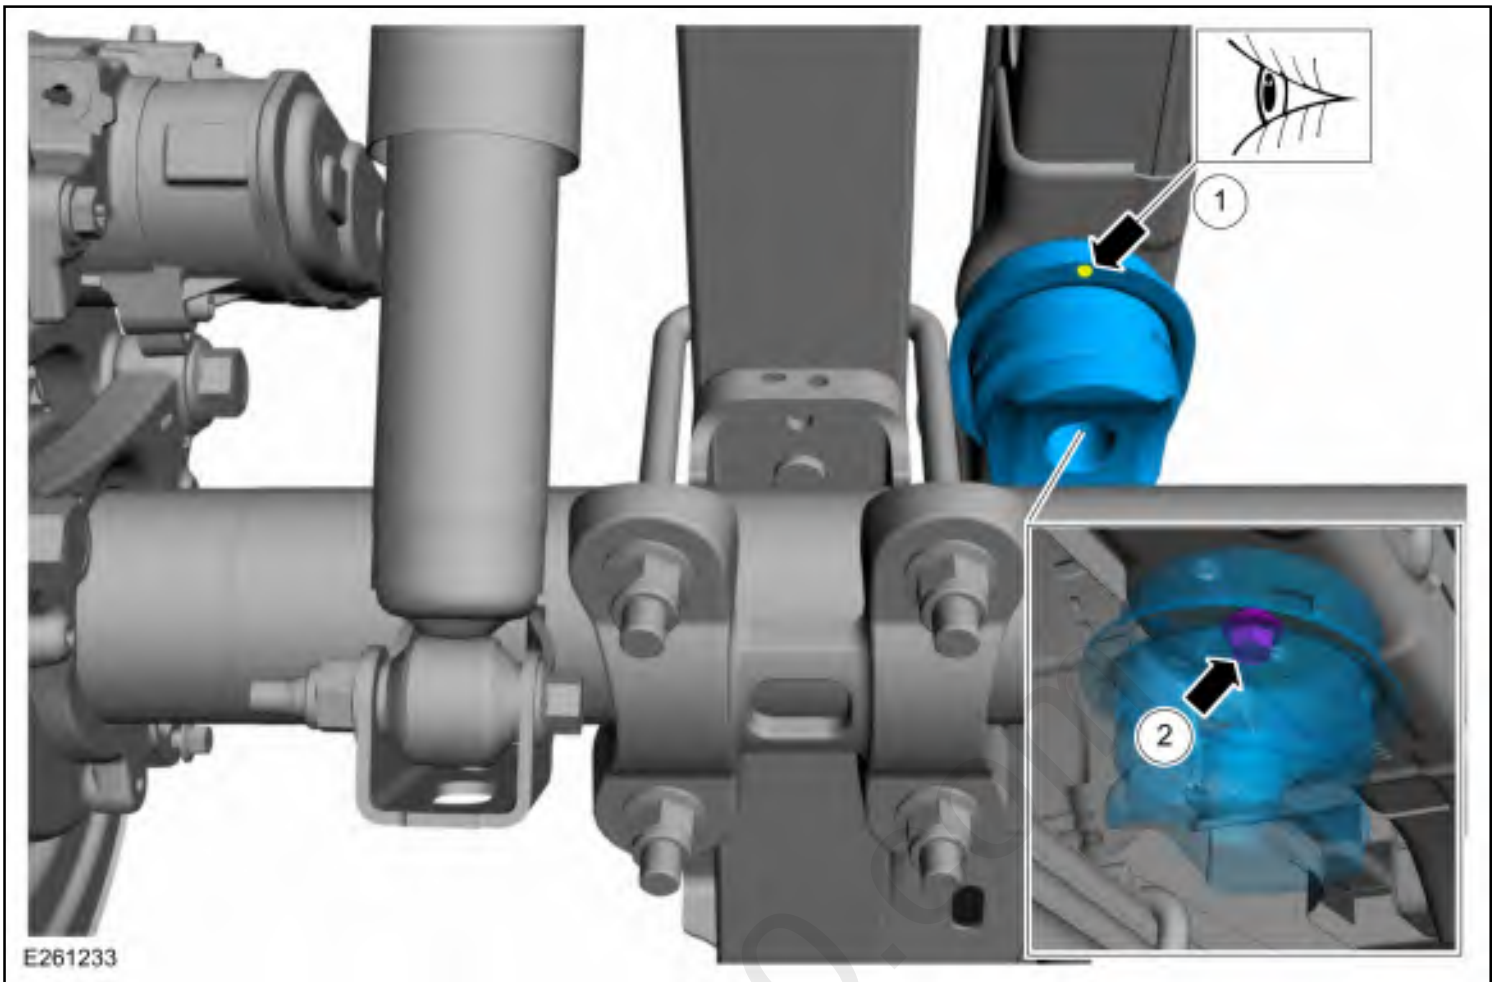

Copyright © 2018 Ford Motor Company