


Wheel Trim Ring


Removal

1. Remove the bolts and remove the wheel trim ring.

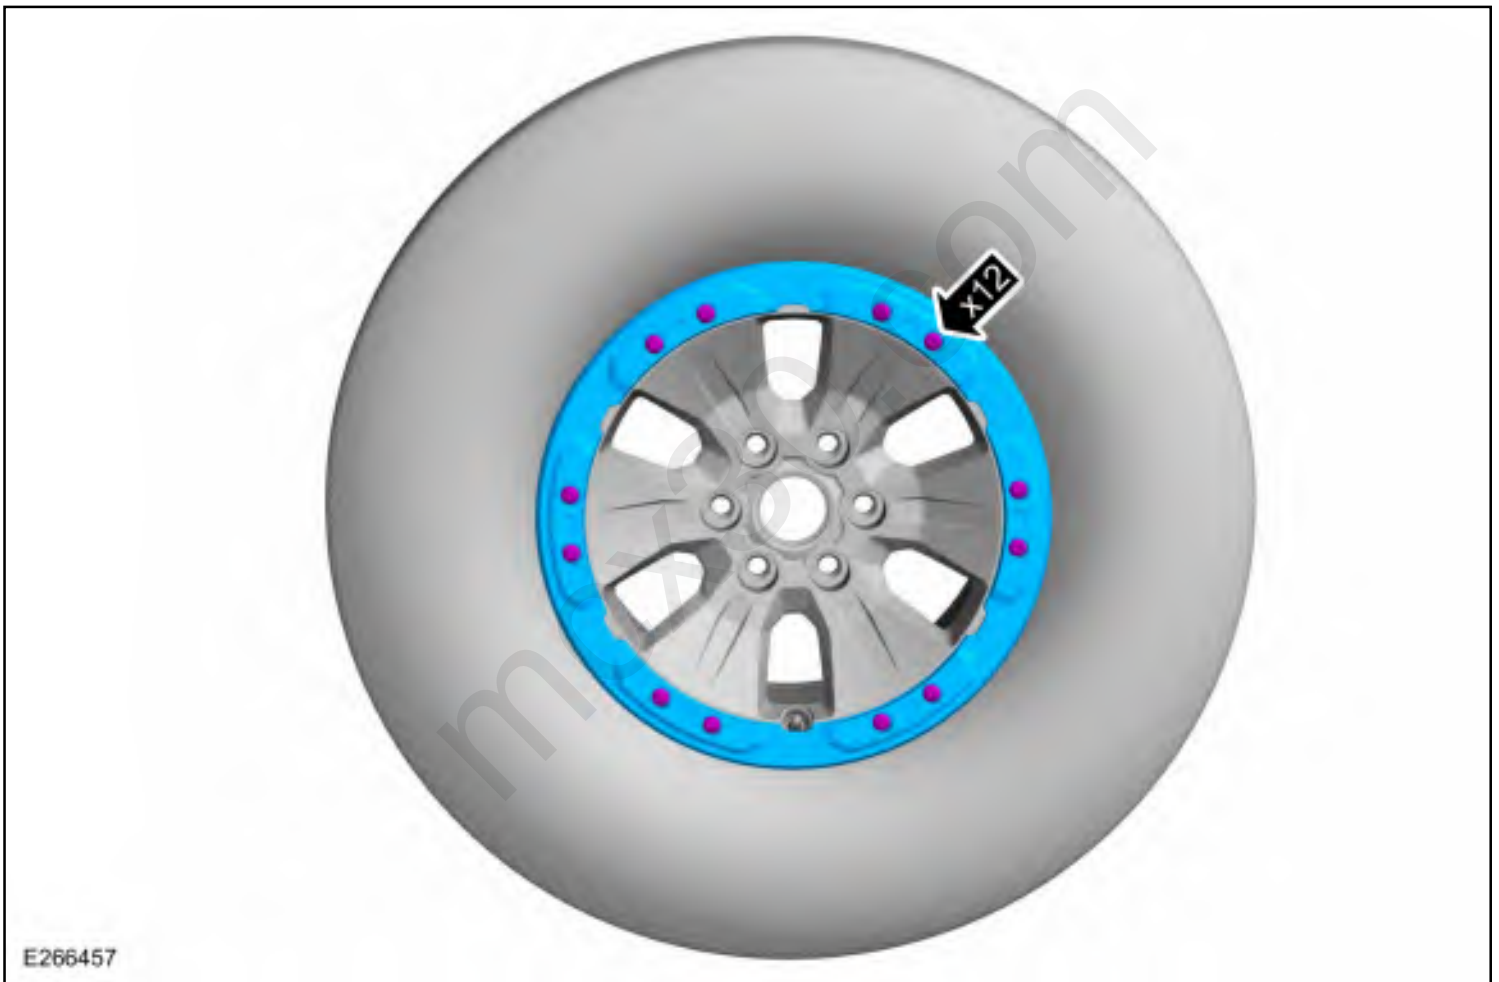

Installation

1. **NOTE:** Make sure that the wheel trim ring aligns with the valve stem position of the wheel.
 - Install the wheel trim ring and finger tighten the bolts.
 - Tighten the bolts in following sequence.
Torque: 159 lb.in (18 Nm)

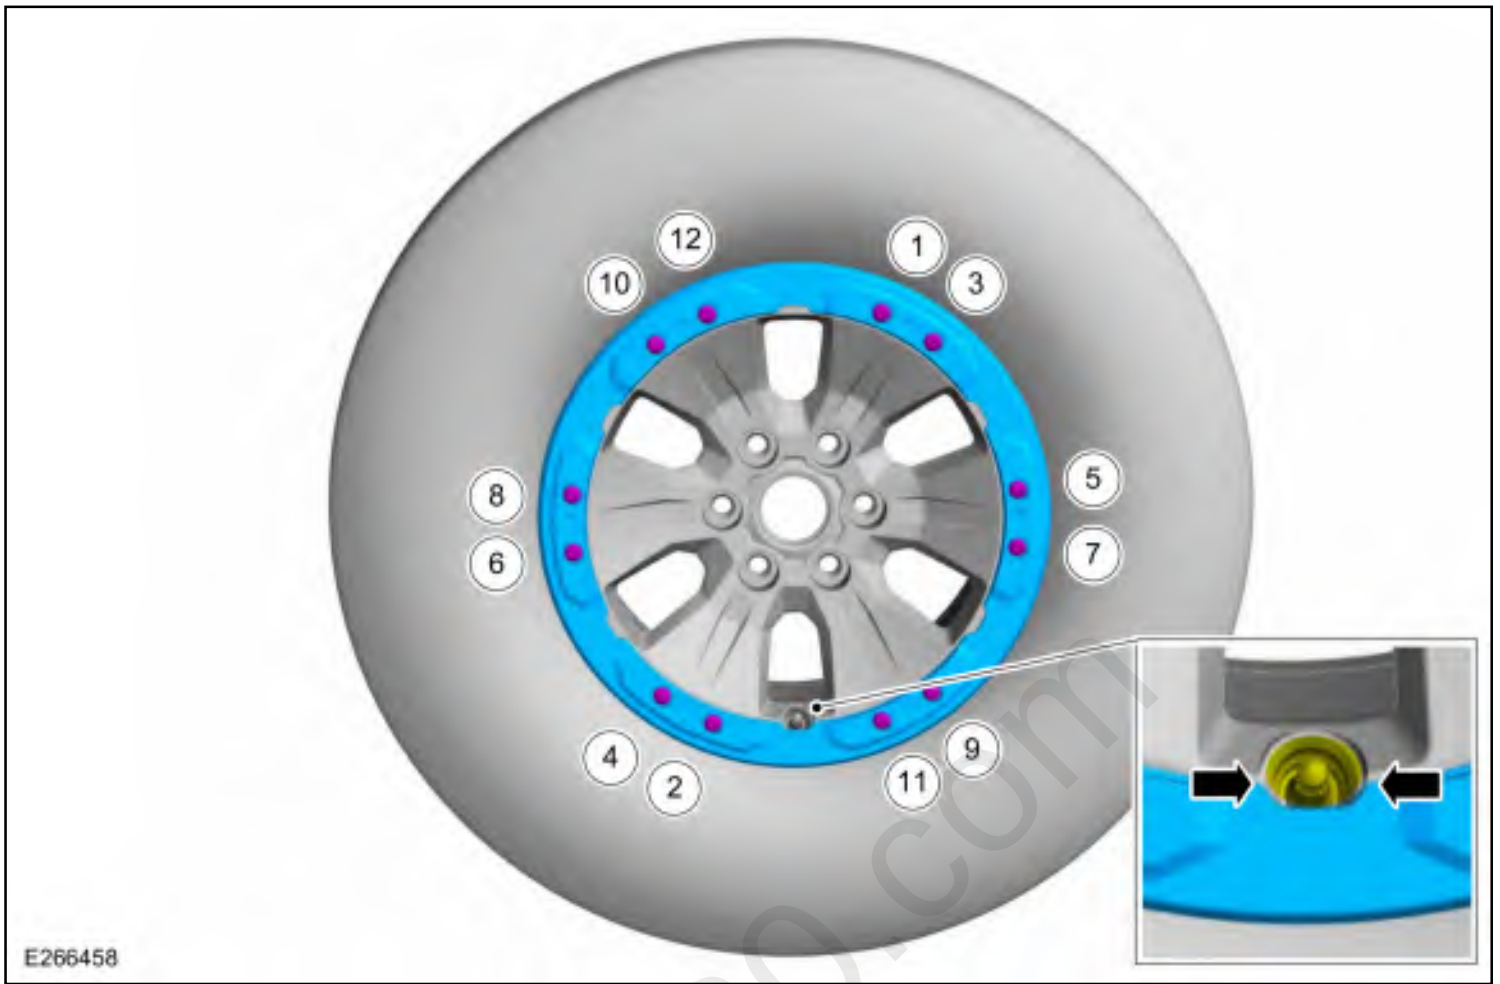

E266458

Copyright © 2018 Ford Motor Company