


Tire Pressure Monitoring System (TPMS) - Component Location

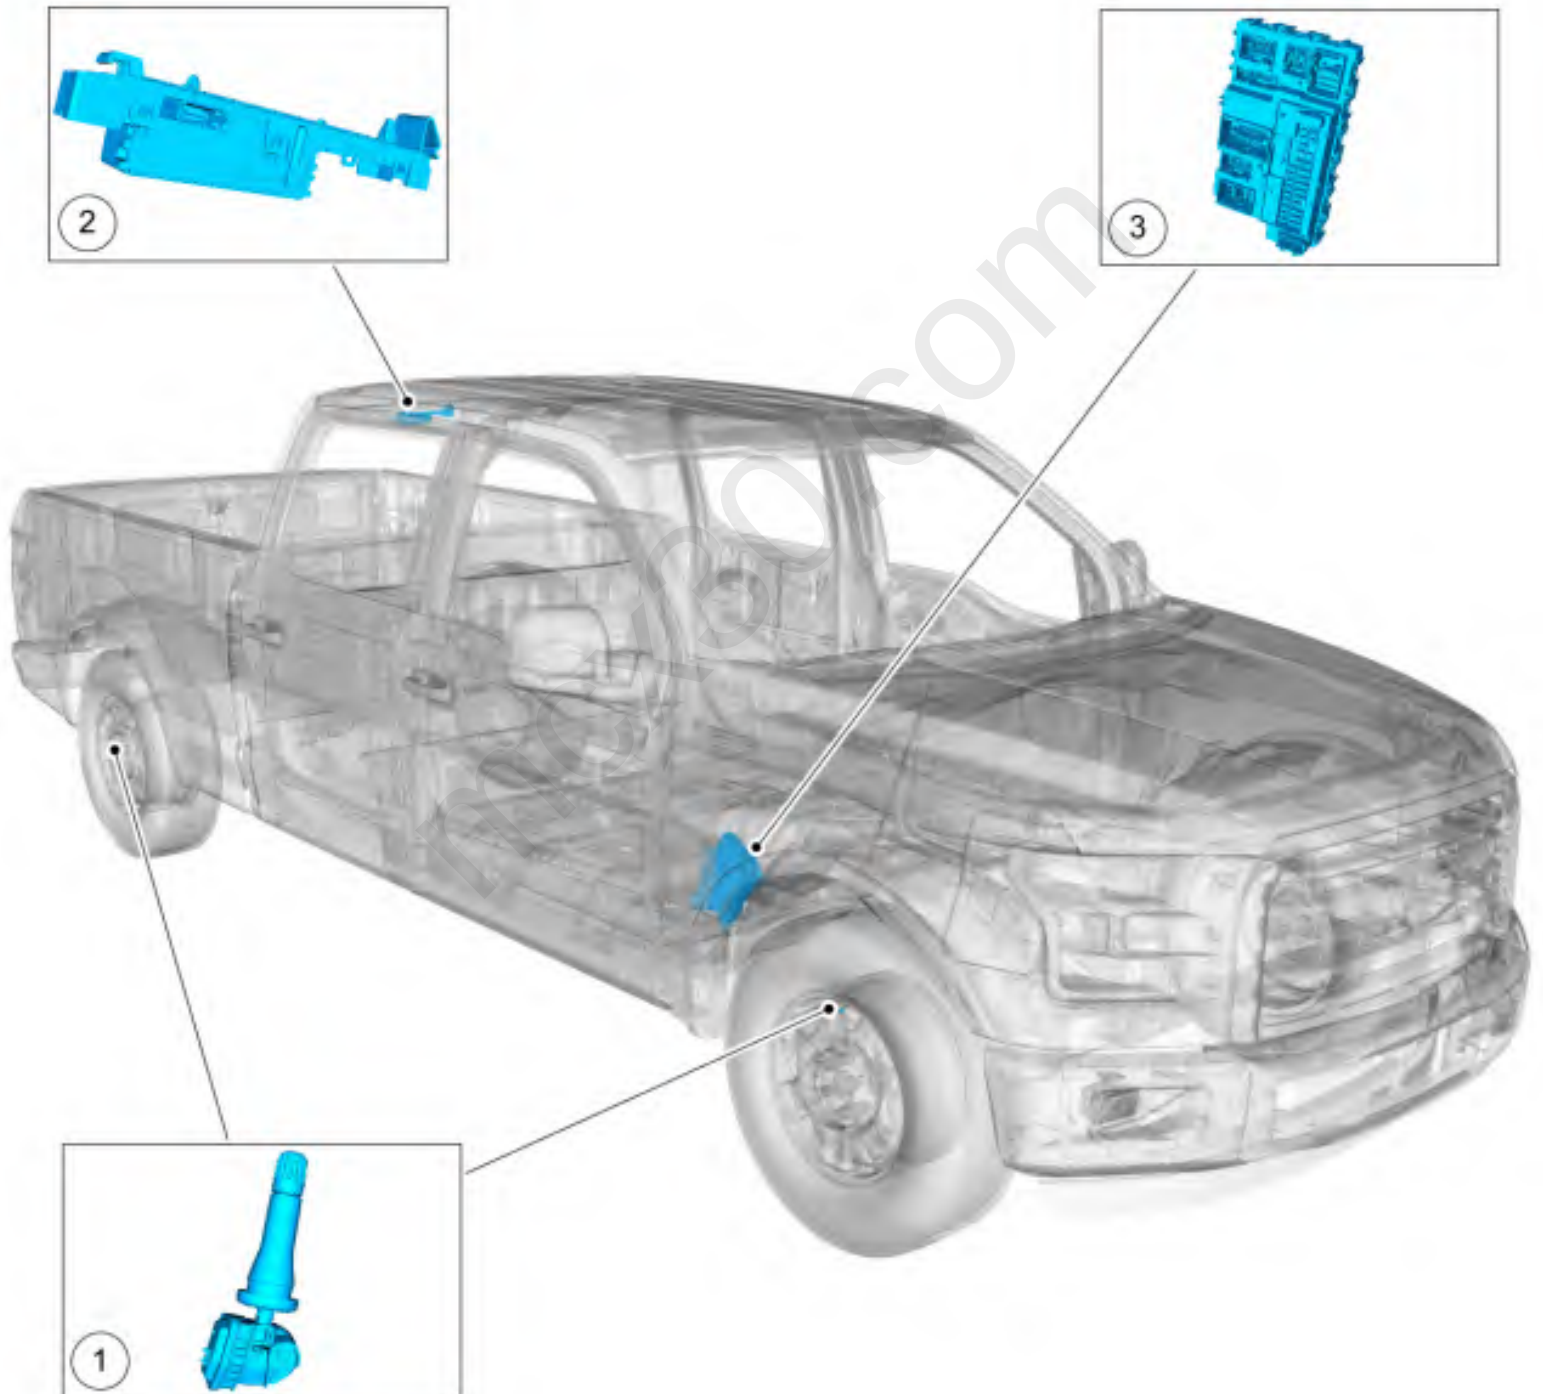

Item	Description
1	TPMS sensor assembly (4 required)
2	RTM
3	BCM

Tire Pressure Monitoring System (TPMS) - Overview

Overview

The BCM uses tire pressure sensors to monitor tire pressure. The sensors use radio signals to transmit the tire pressure to the RTM. The RTM sends the information to the BCM over a LIN. The tire pressure sensors are battery operated and mounted to the valve stems. The IPC illuminates the TPMS warning indicator and the message center displays a message when a fault is present or when the tire pressure falls below the low pressure limit.

Copyright © 2018 Ford Motor Company
