

A-Pillar Trim Panel

Special Tool(s) / General Equipment

Interior Trim Remover

Removal

NOTE: *LH side shown, RH side similar.*

NOTE: *Removal steps in this procedure may contain installation details.*

1. Position the assist handle covers aside.
Use the General Equipment: Interior Trim Remover




2. Remove the A-pillar trim panel.

1. Remove the bolts.

Torque: 55 lb.in (6.2 Nm)

2. Release the retainer.
3. If equipped, disconnect the speaker electrical connector.
4. Release the clips and remove the A-pillar trim panel.

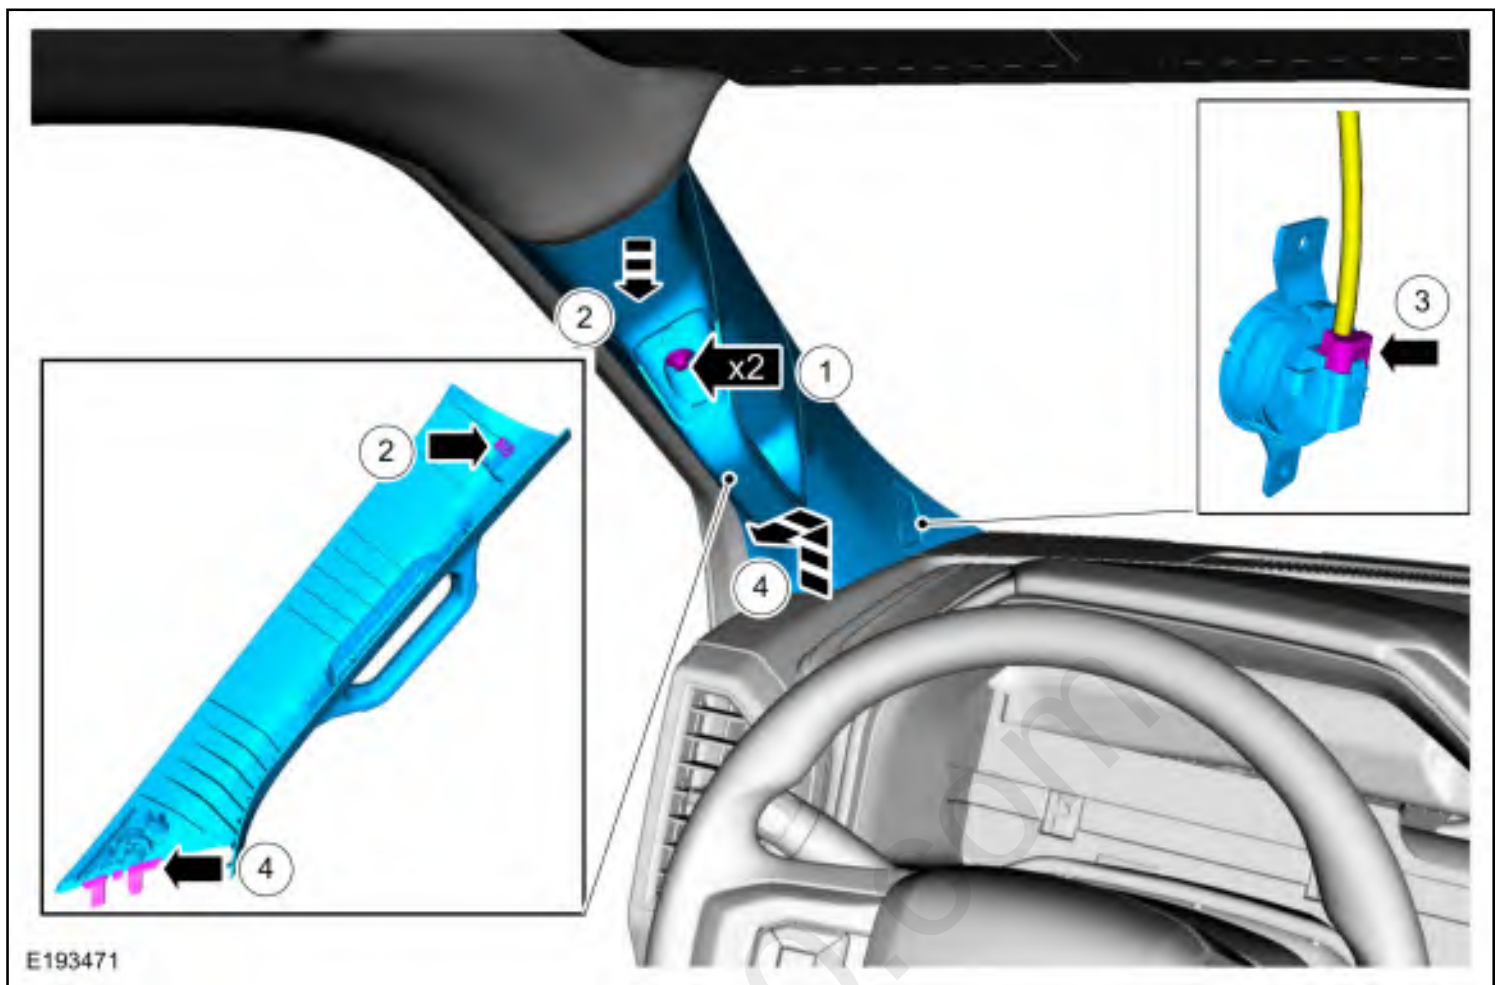

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company