

Headliner - Lowering - Regular Cab

Base Part Number: Base Part Number: 5451916

1. Remove the following items:

1. On both sides, remove the A-pillar trim panels.

Refer to: [A-Pillar Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).


2. On both sides, remove the B-pillar trim panels.

Refer to: [B-Pillar Trim Panel - Regular Cab](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

2. **NOTE:** *LH side shown, RH side similar.*


On both sides, remove the sun visor.

1. Remove the retainer cover.
2. Remove the retainer.
3. Remove the sun visor.
4. If equipped, disconnect the electrical connector.

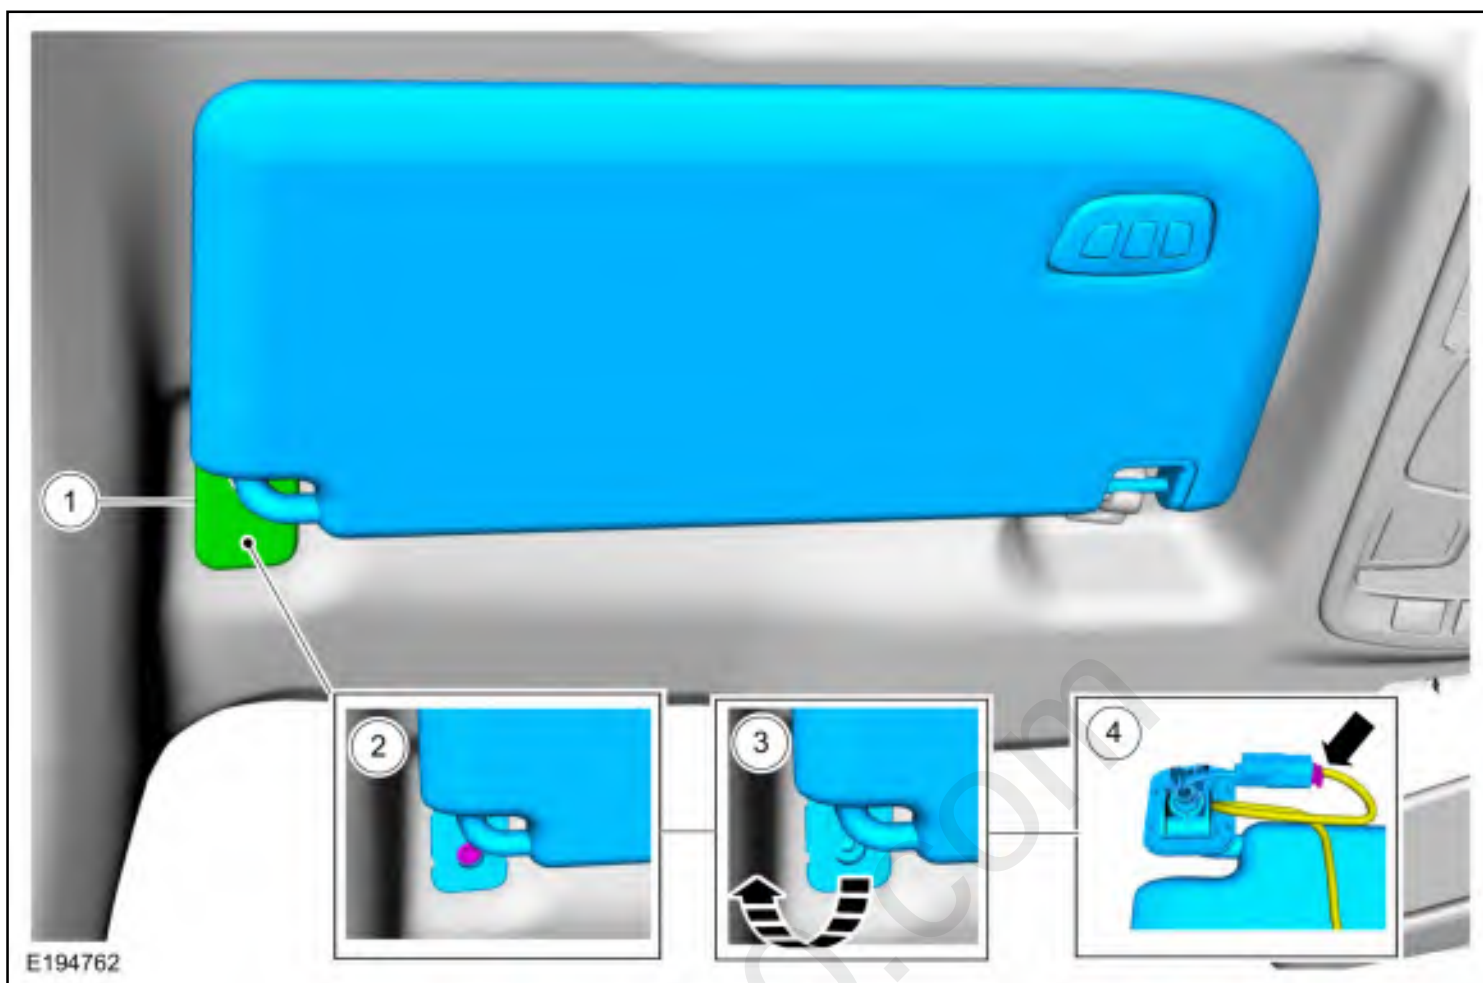

3. **NOTE:** *LH side shown, RH side similar.*


On both sides, remove the retainers and the sun visor clips.

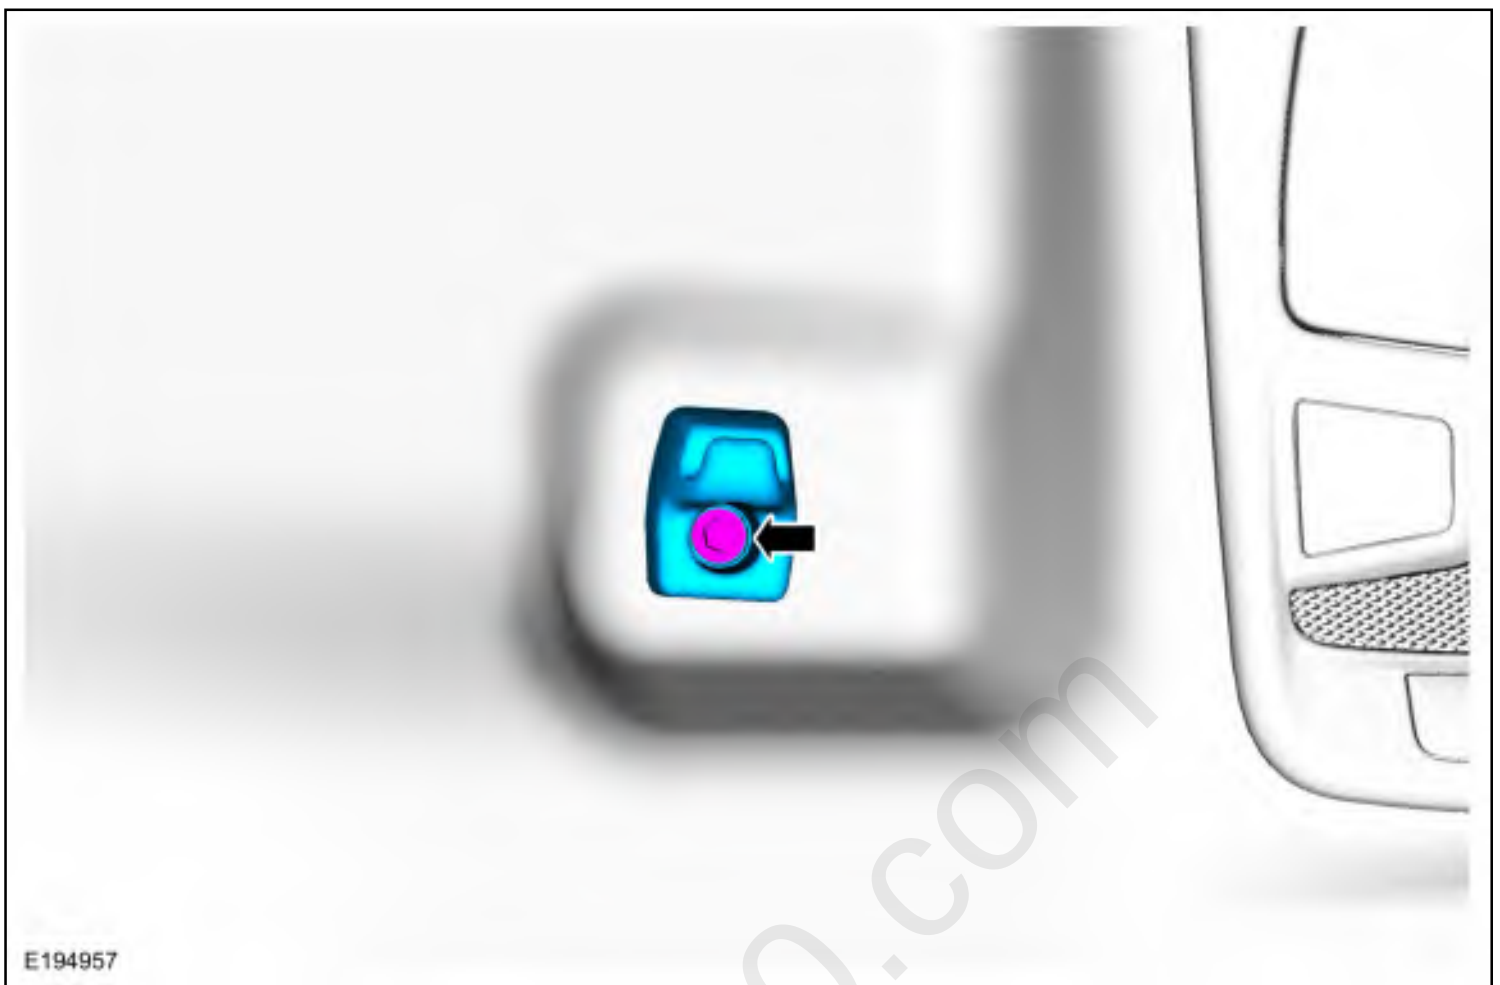


4. If equipped, disconnect the rear view mirror electrical connector.



5. On both sides, remove the garment hooks.
 1. Open the garment hook retainer cover.
 2. Remove the retainer and the garment hook.

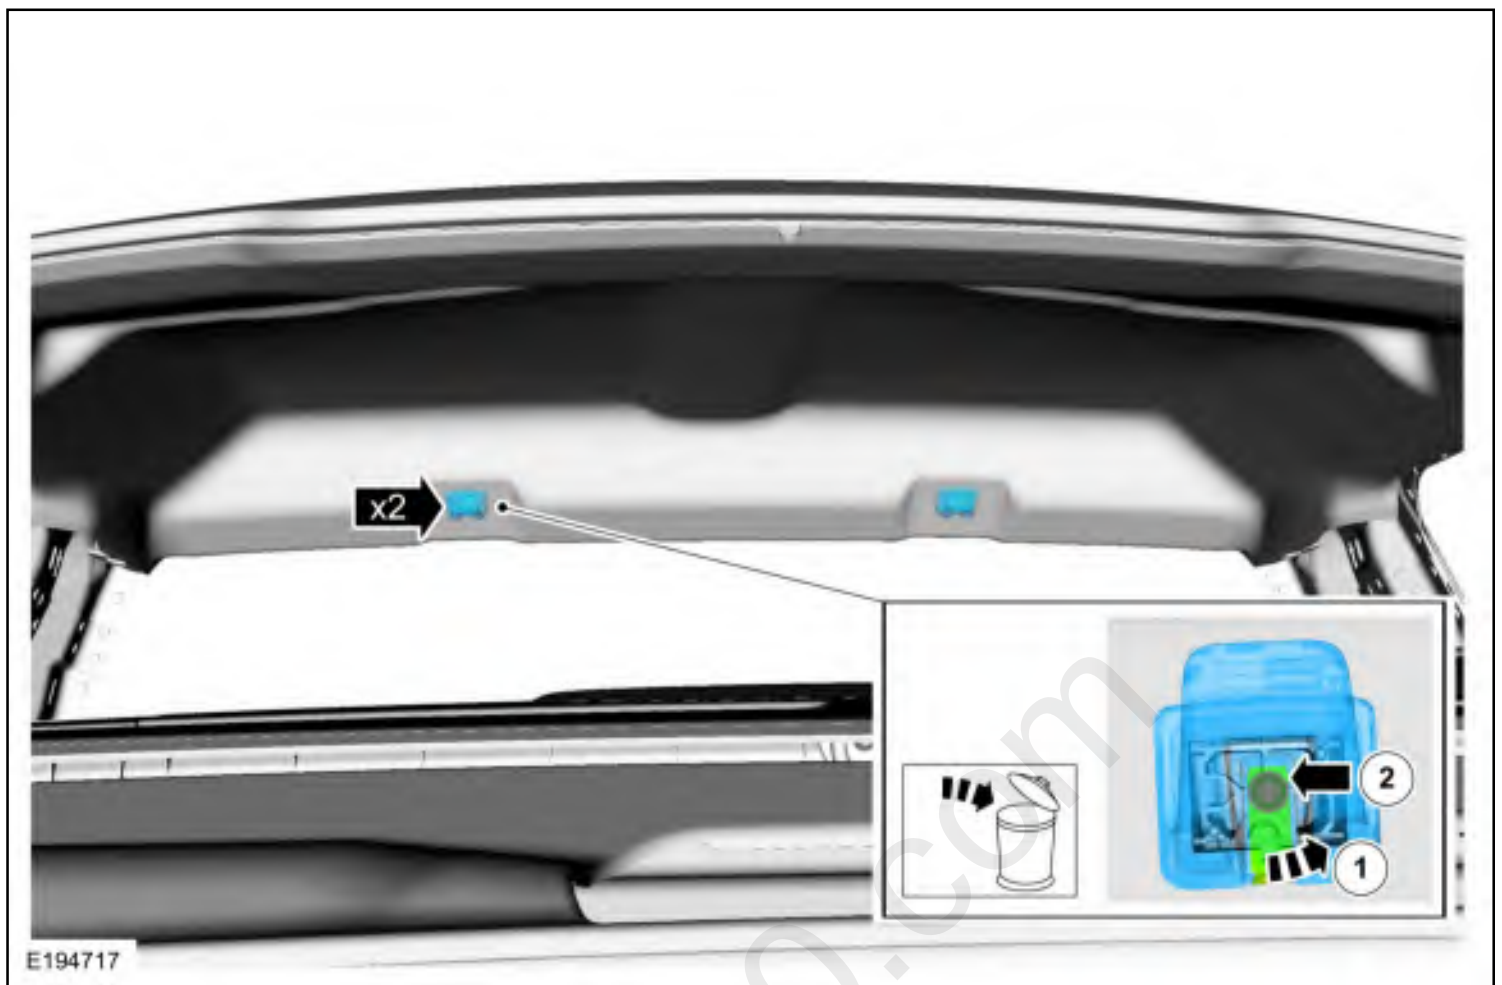

6. Disconnect the headliner wiring harness connectors and position aside the wiring harness.

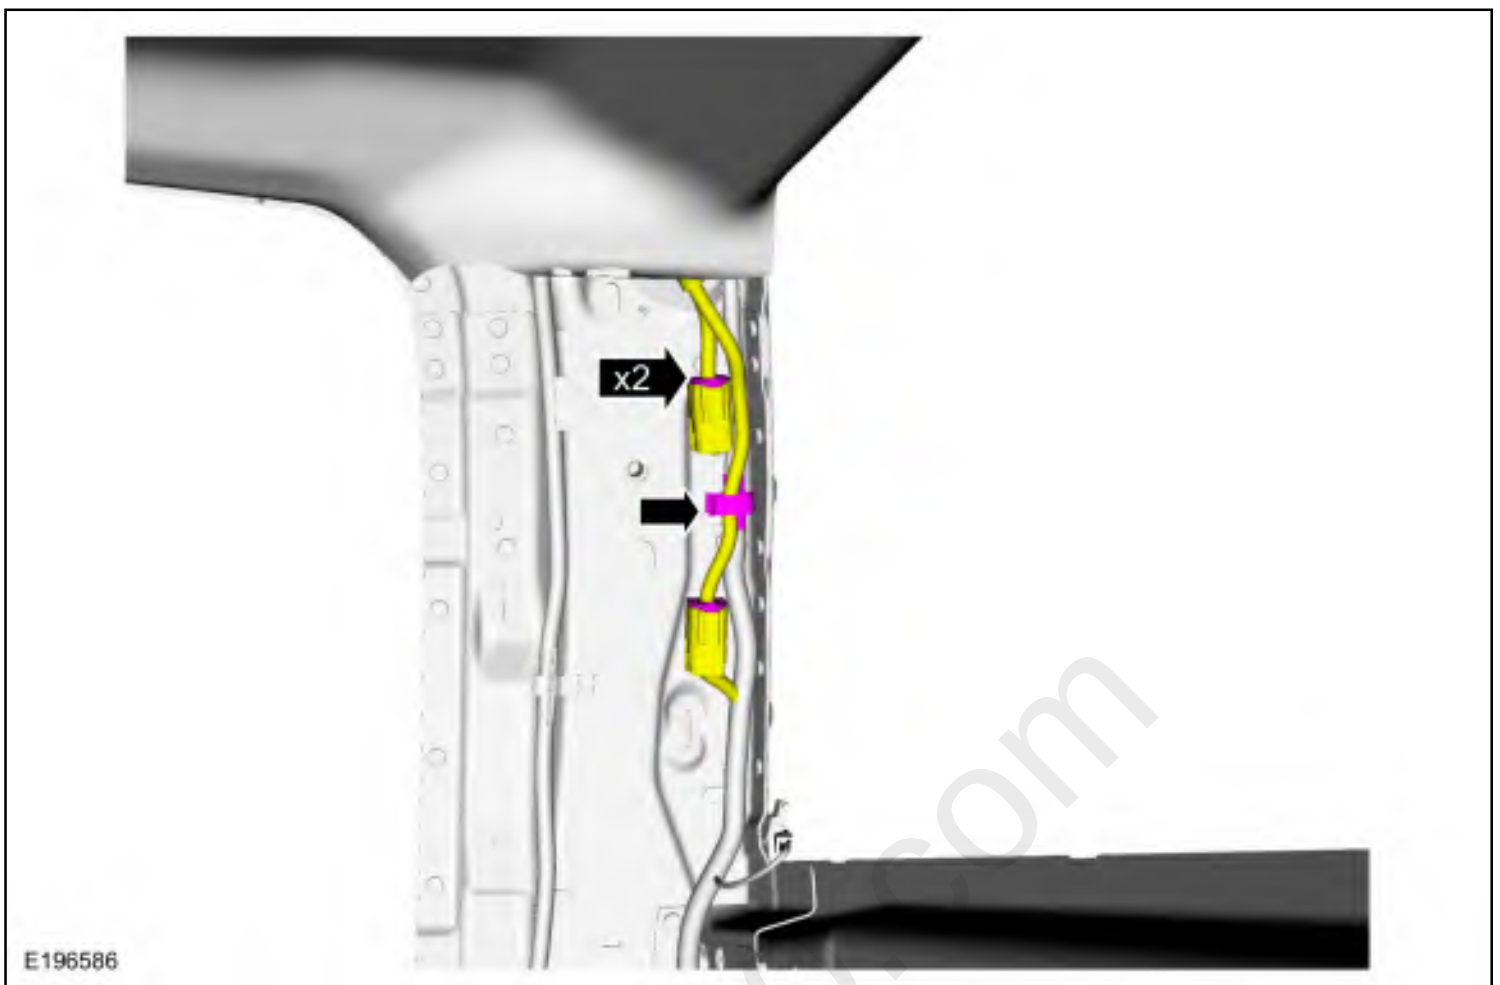

7. Release the clips and lower the headliner.

