


## Steering Column Shrouds

### Special Tool(s) / General Equipment


Flat Headed Screw Driver

### Removal

1. Fully extend and lower the steering column.

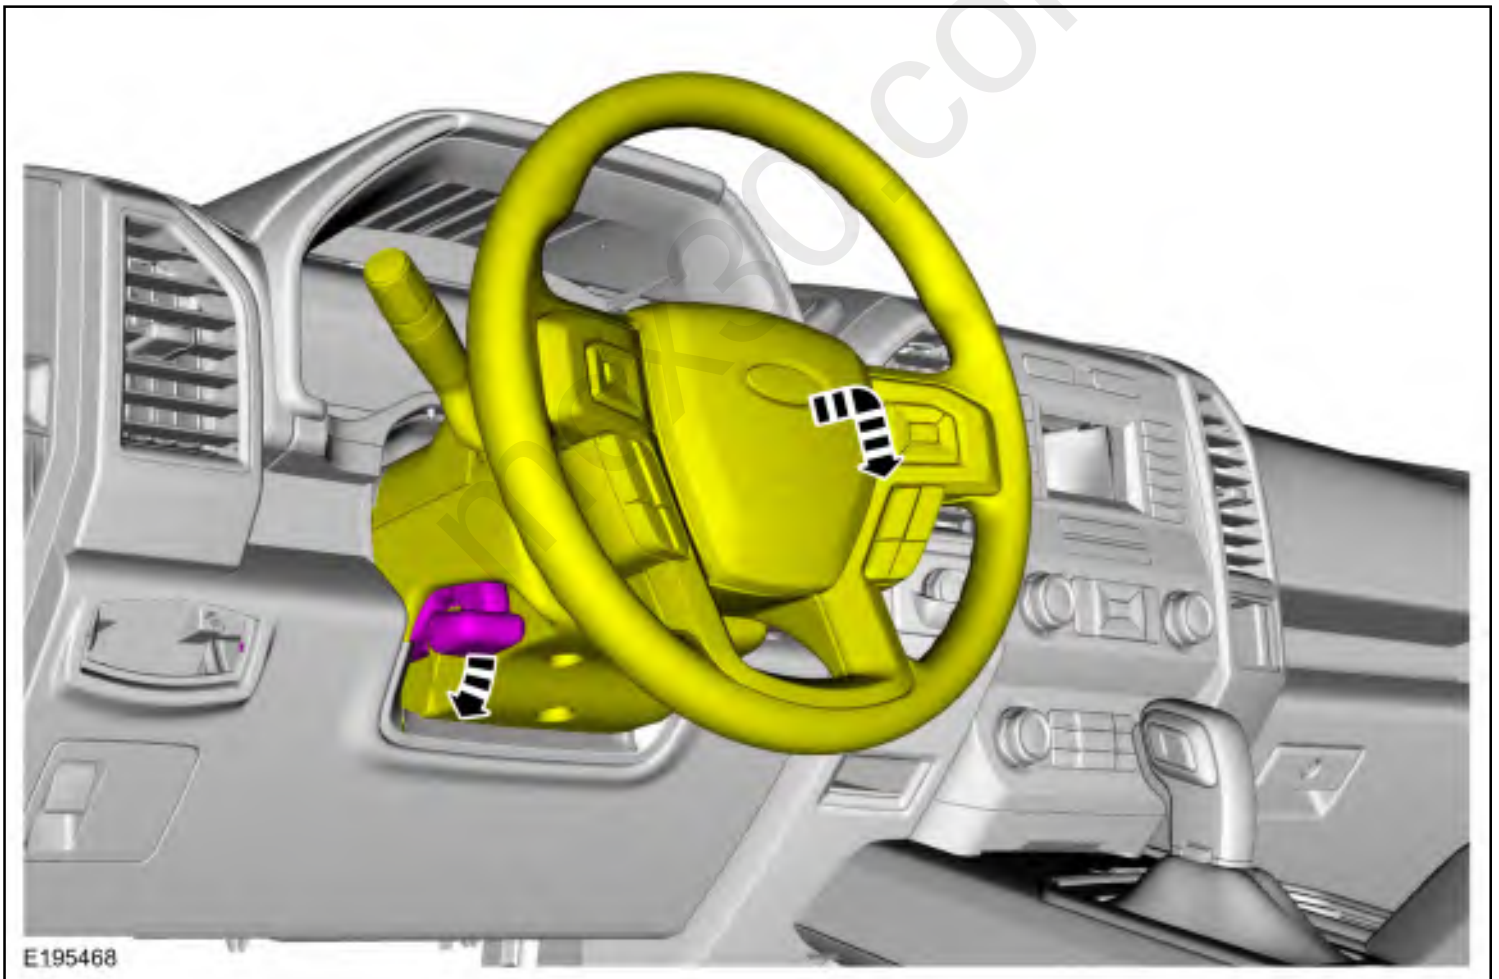


2. Release the upper gap hider from the IPC and position aside.

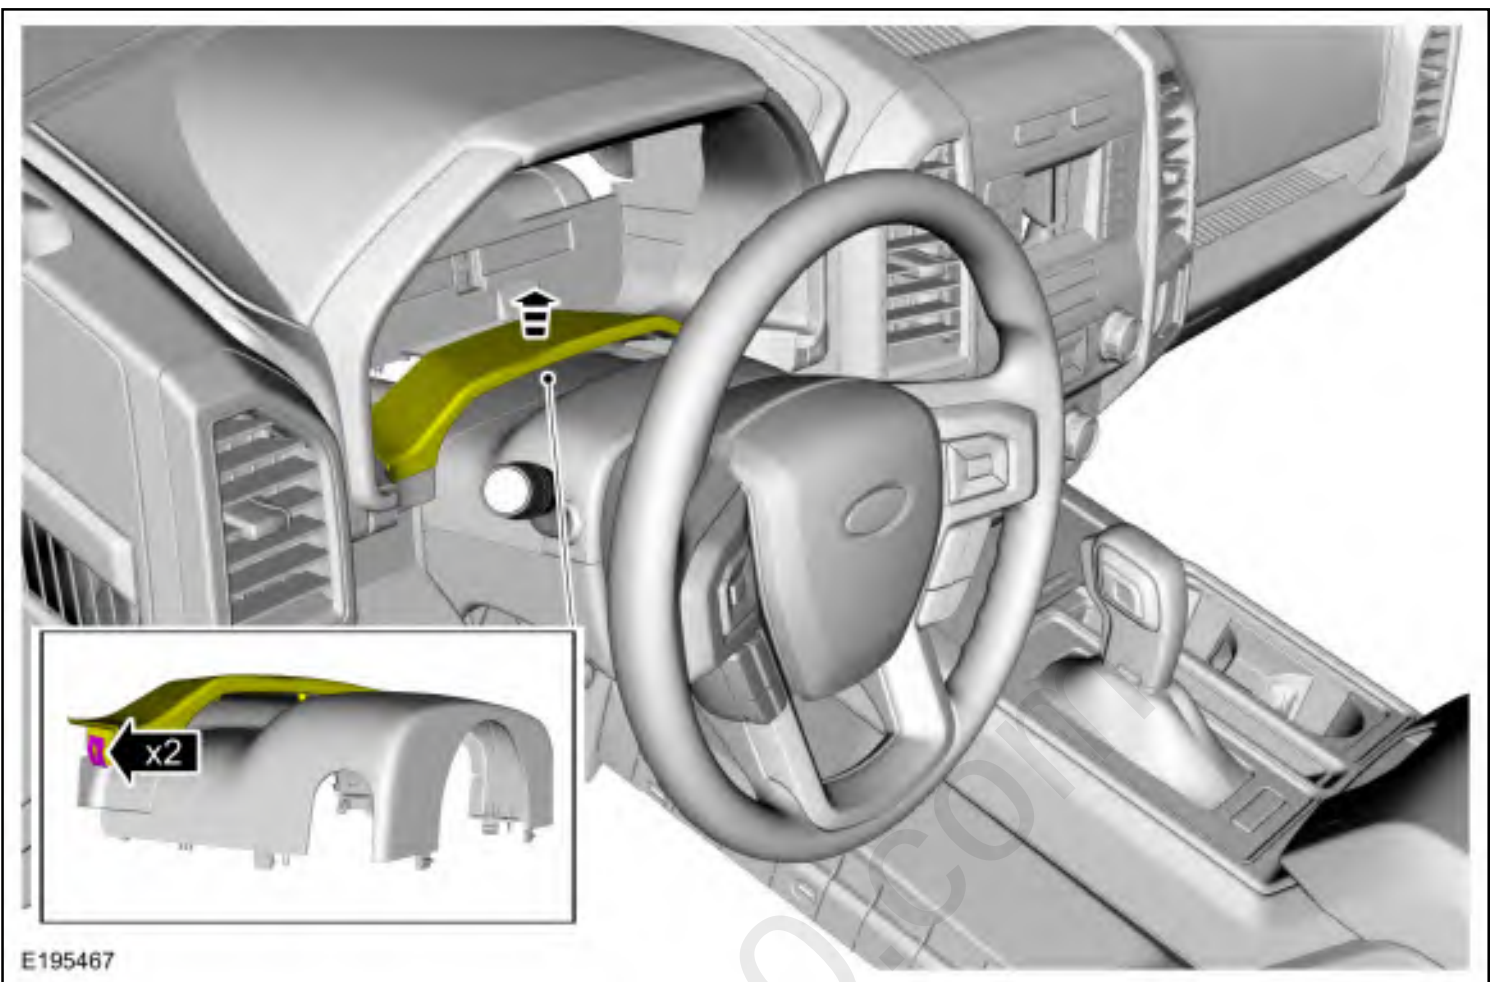


### 3. Release the retainers.

1. Rotate the steering wheel 90 degrees to the left.  
Use the General Equipment: Flat Headed Screw Driver
2. Release the LH retainer.
3. Rotate the steering wheel 180 degrees to the right.  
Use the General Equipment: Flat Headed Screw Driver
4. Release the RH retainer.  
Use the General Equipment: Flat Headed Screw Driver

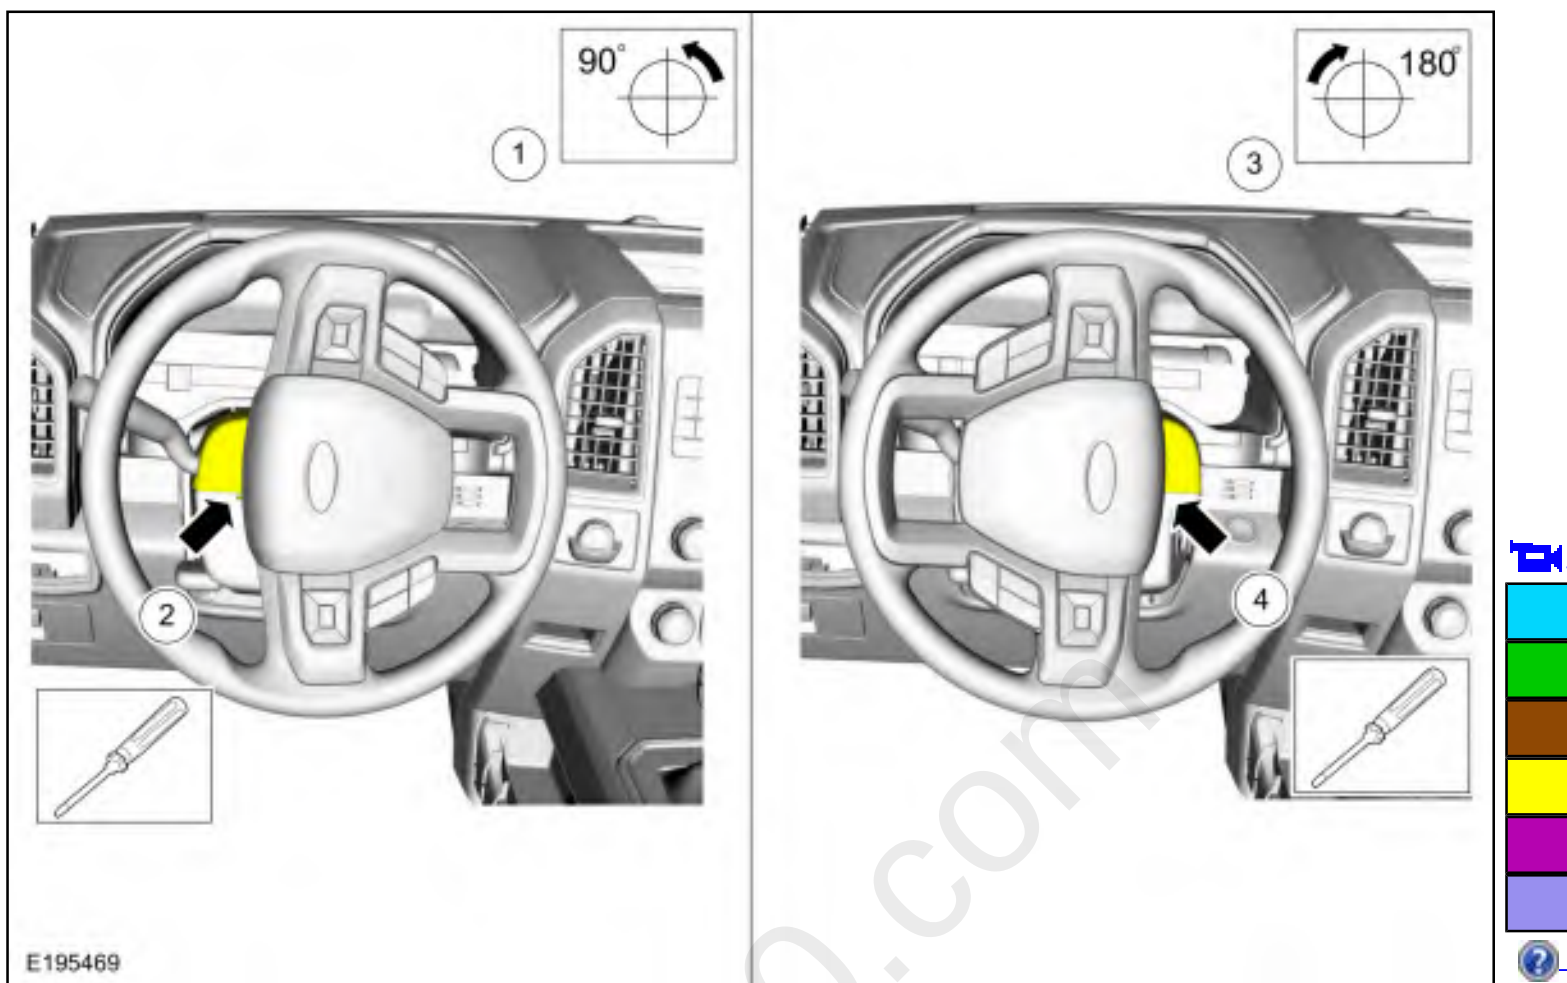


4. Release the outer clips on each side and remove the steering column upper shroud.

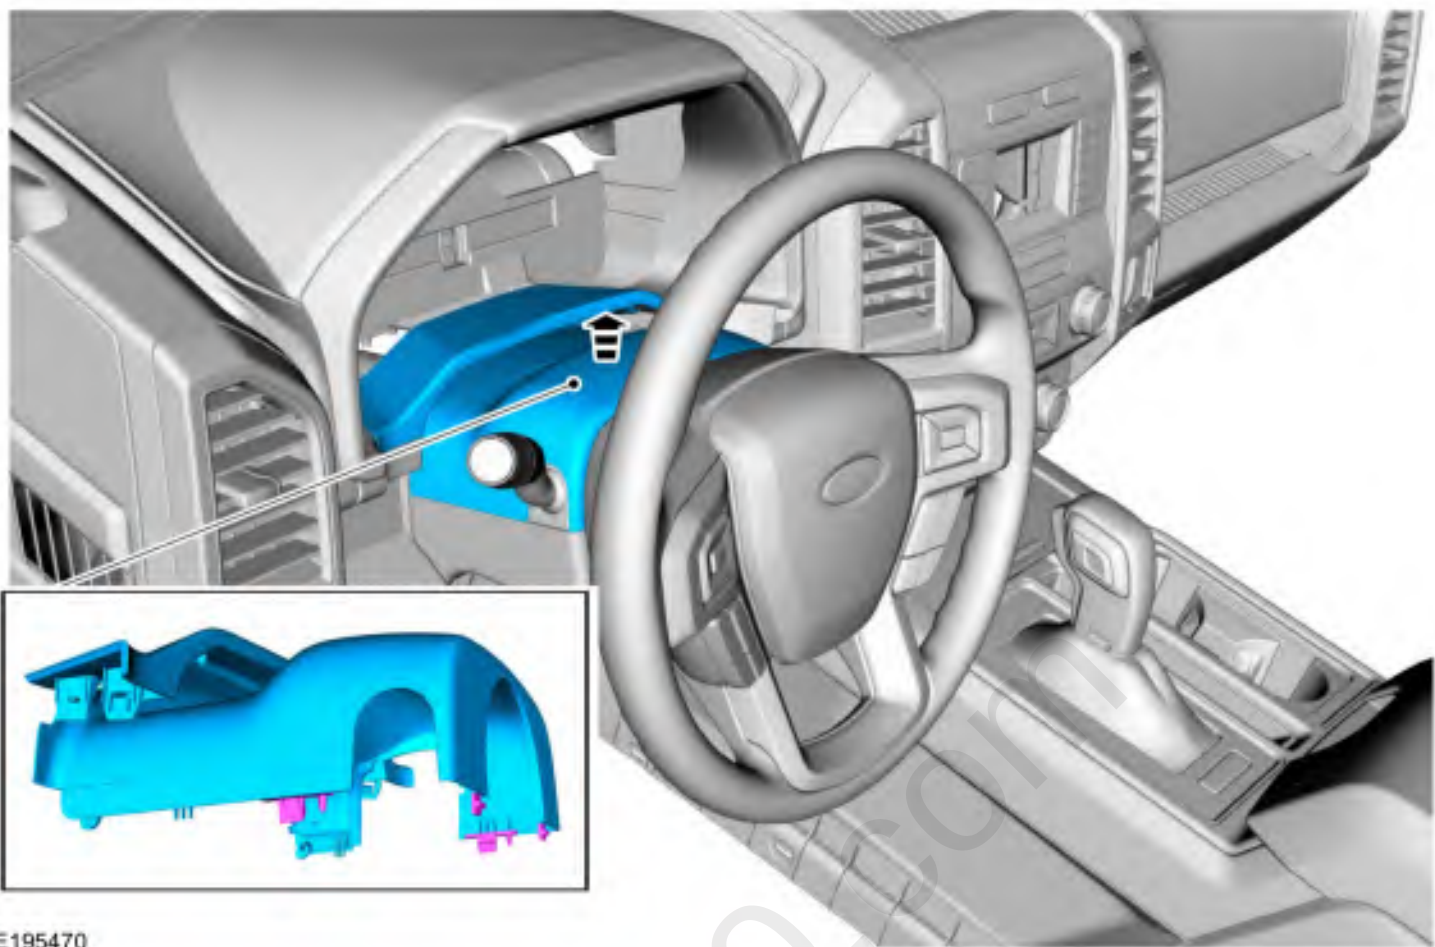

E195470

5. Remove the steering column lower shroud.
  1. Remove the screws.
  2. Remove the steering column lower shroud.

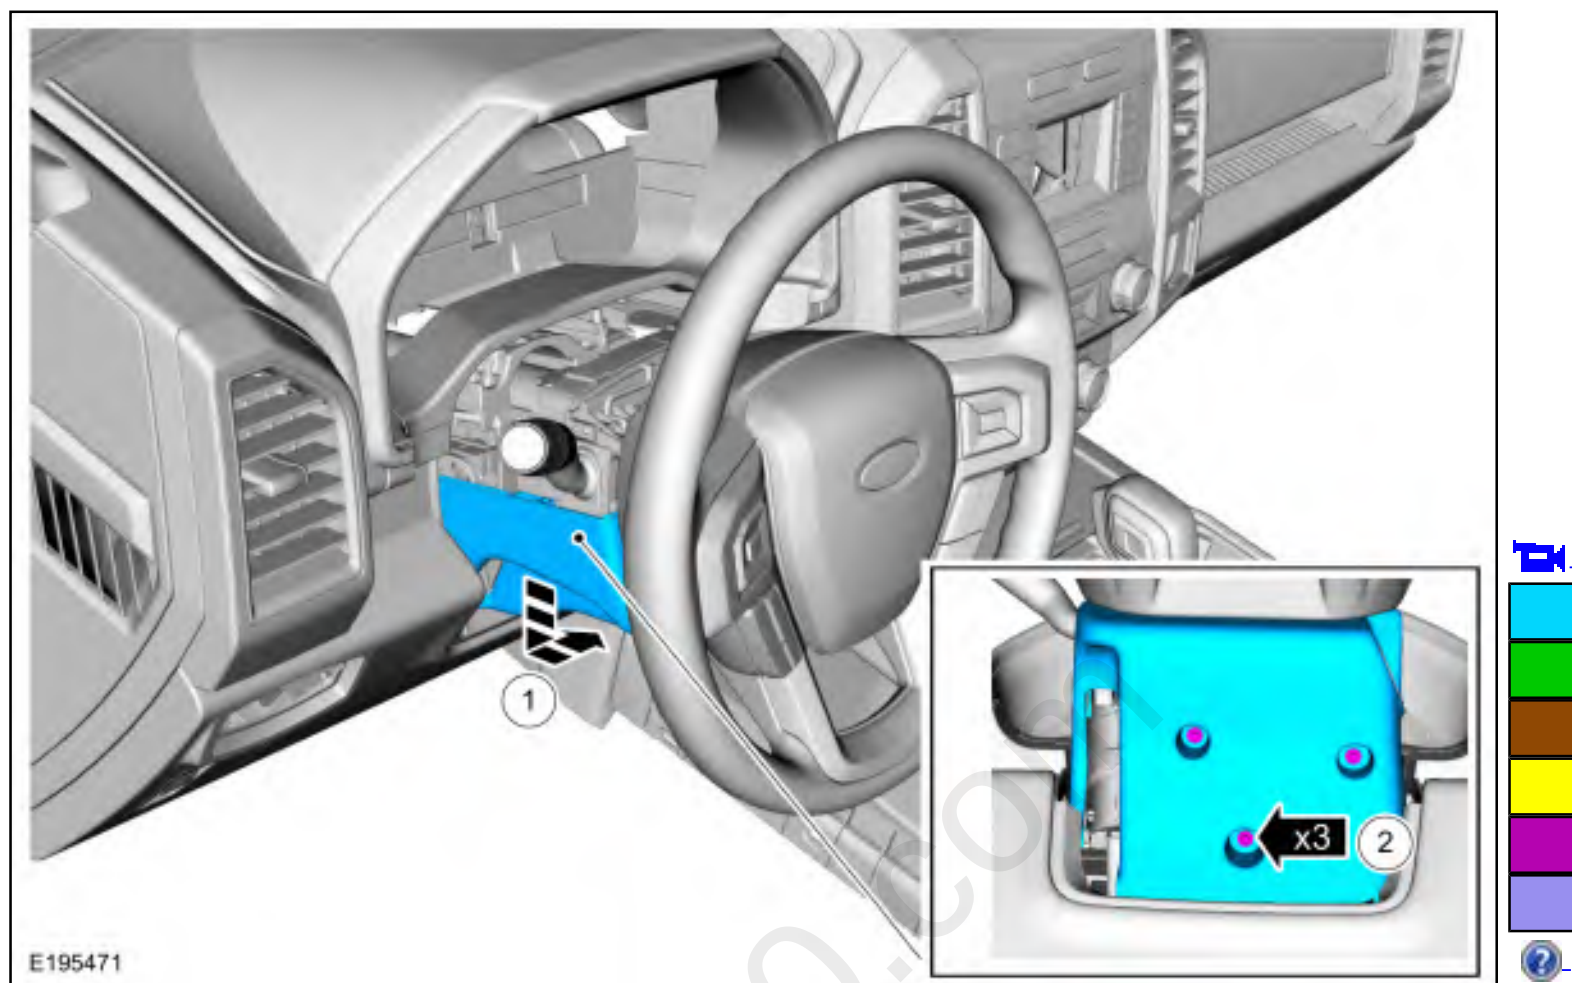

## Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company