

B-Pillar Trim Panel - Regular Cab

Base Part Number: Base Part Number: 24356

Removal

NOTE: LH side shown, RH side similar.

NOTE: Removal steps in this procedure may contain installation details.

Upper and Lower B-Pillar Trim Panels


1. Position the seat and the backrest fully forward.




2. **NOTE:** The seat is removed for clarity.

NOTE: During installation, make sure to attach the scuffplate trim panel at the lower B-pillar trim panel first.


Release the clips and remove the scuff plate trim panel.

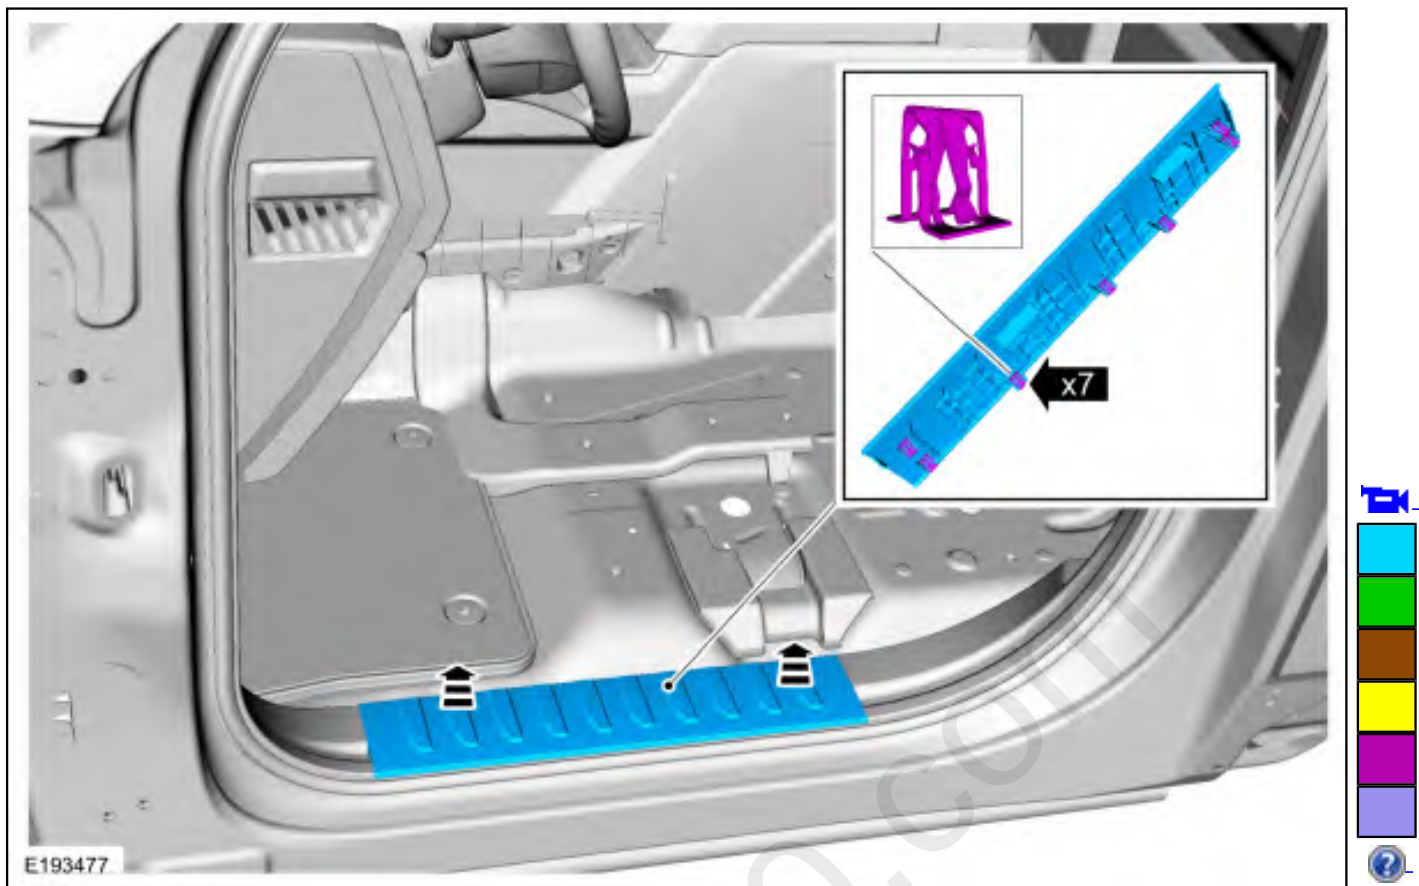


3. Position the weatherstrips aside.

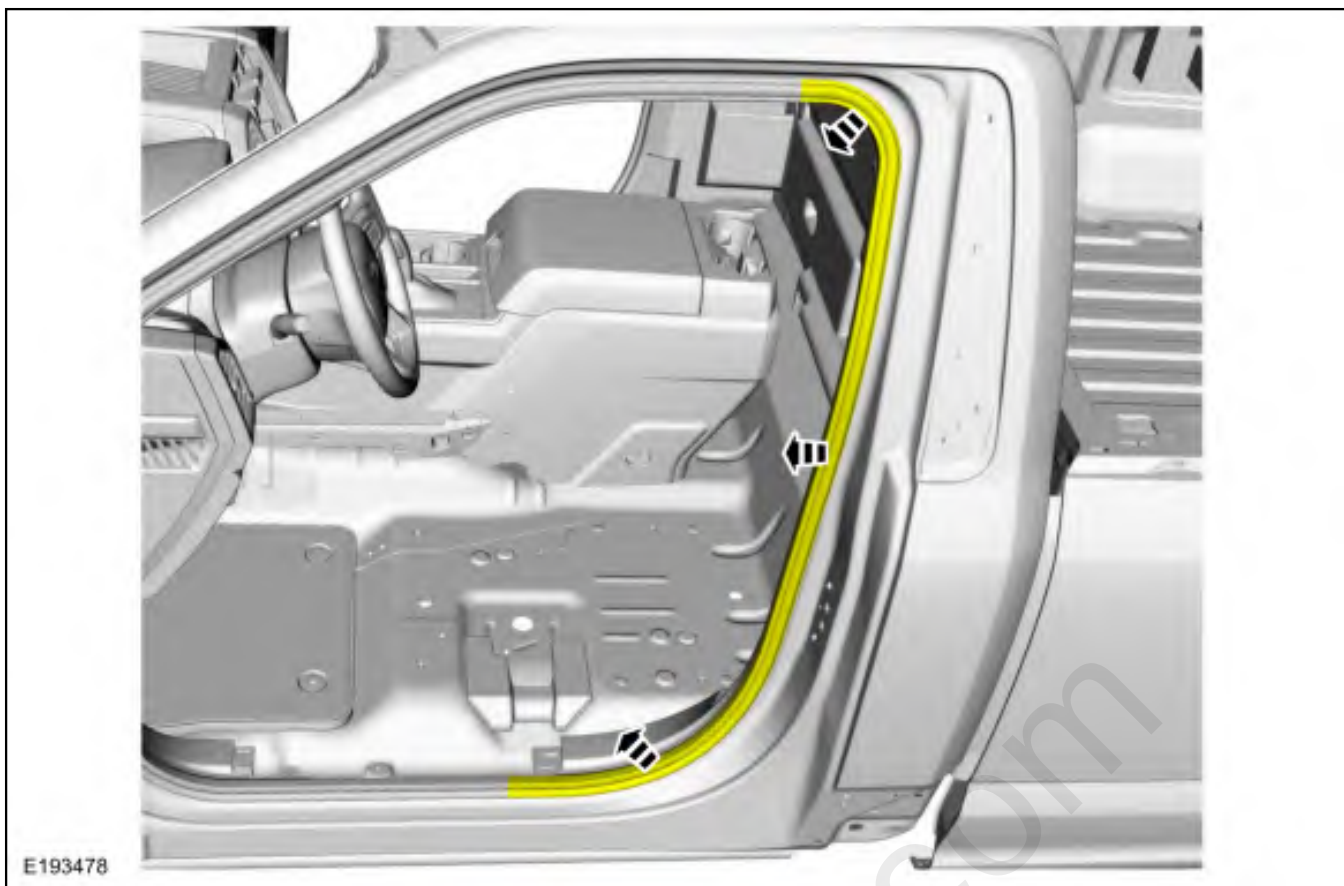



4. Release the clips and disengage the seatbelt pretensioner boot from the pretensioner bezel.

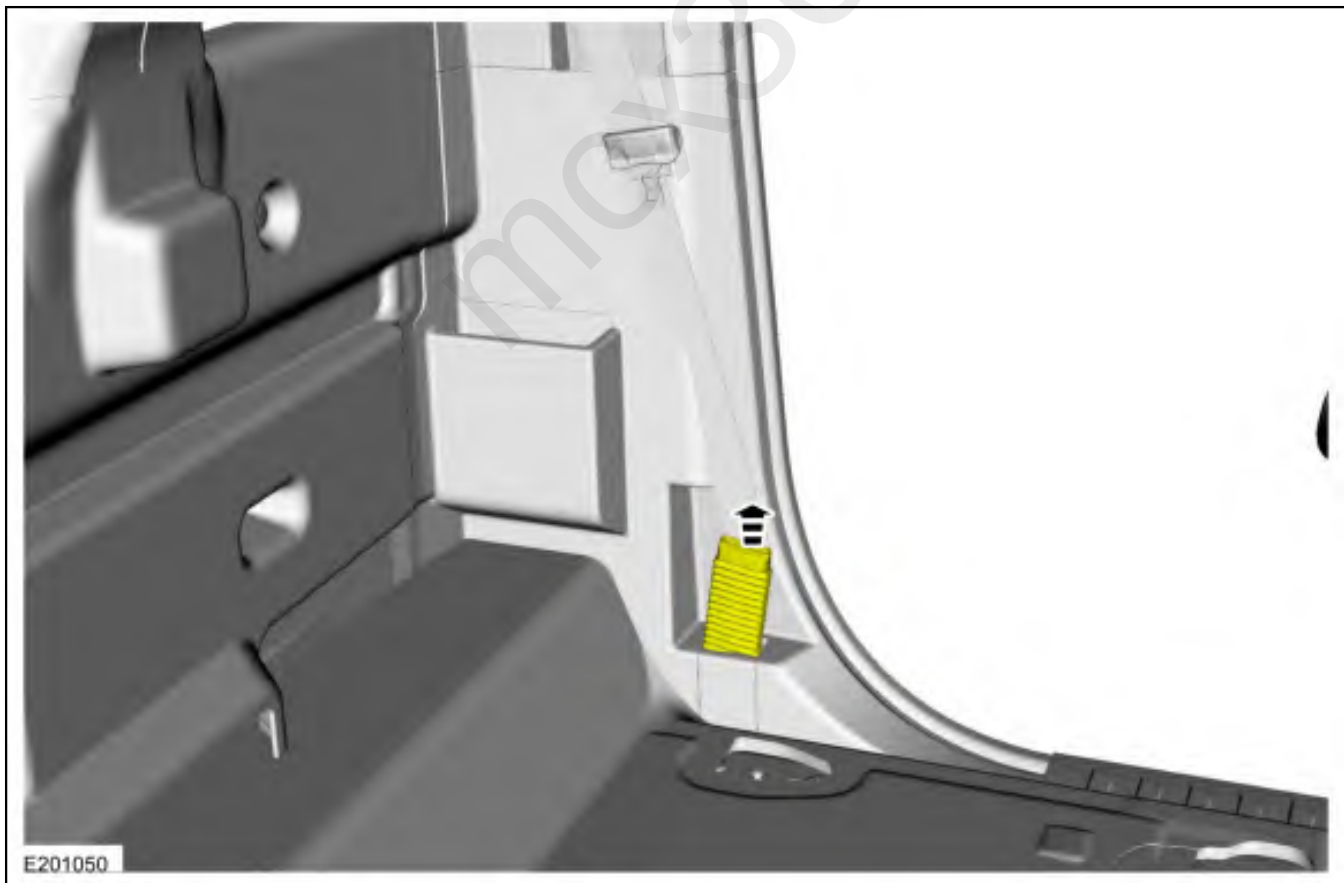

5. Remove the pretensioner bezel.

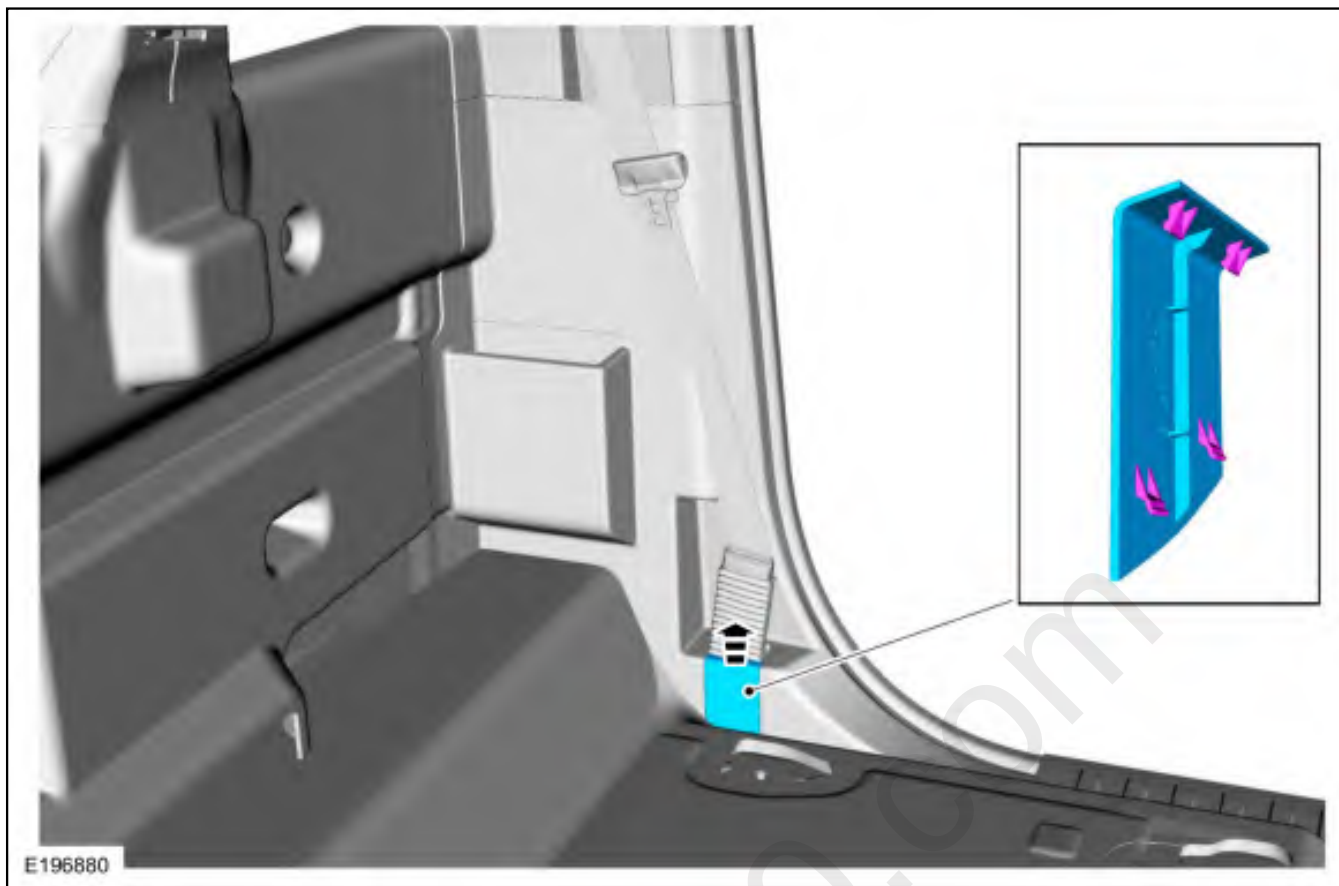

6. Release the clips and remove the B-pillar lower trim panel.

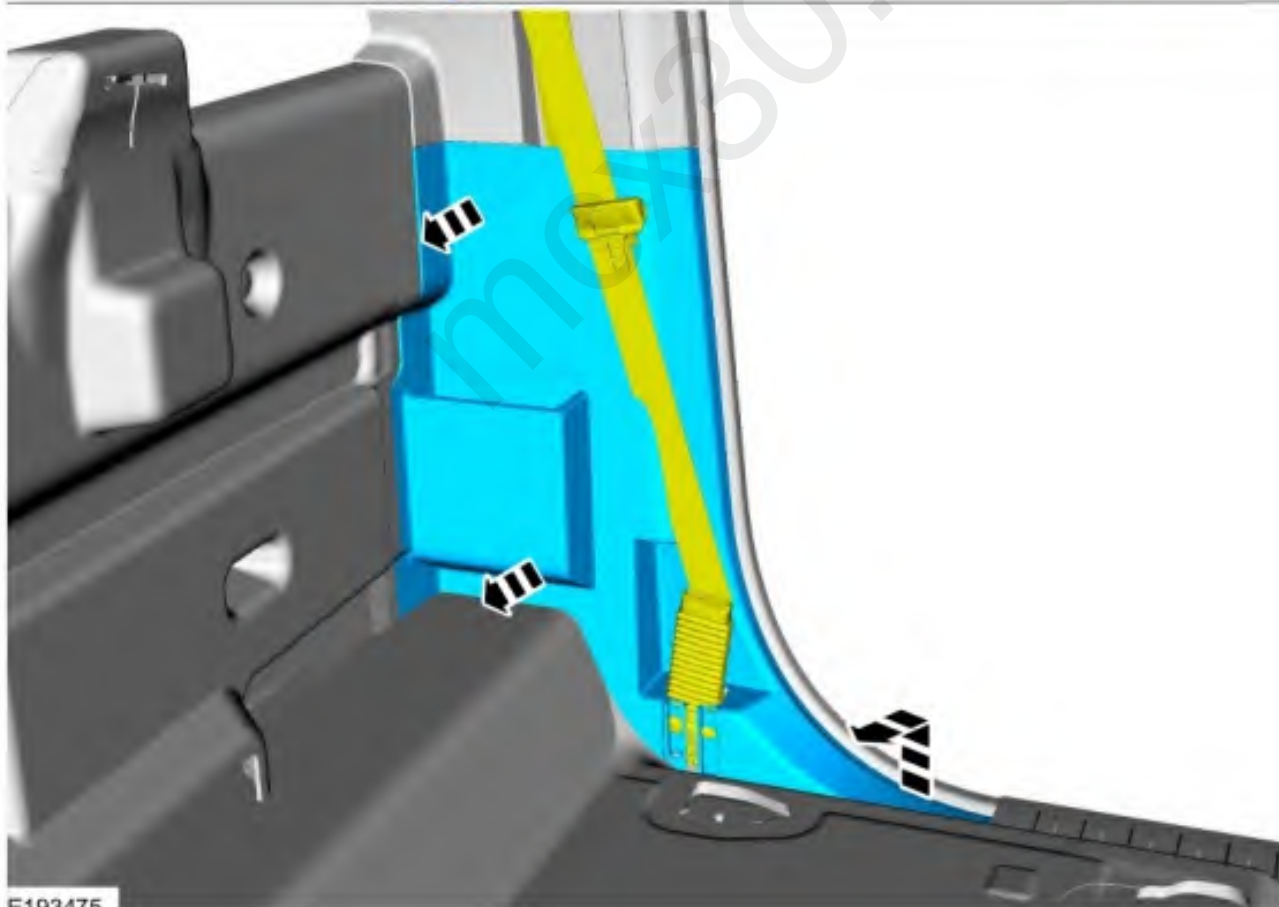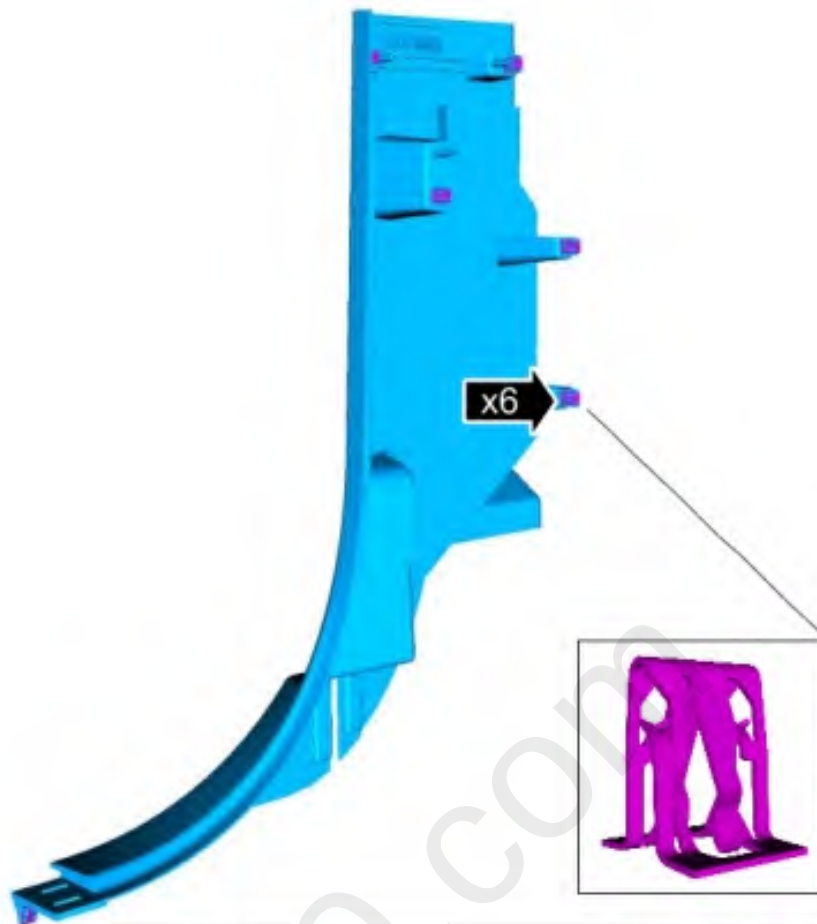

E193475




Upper B-Pillar Trim Panel

7.


Remove the D-ring bolt and position aside the seatbelt.

1. Remove the D-ring trim cover.
2. Remove the D-ring bolt and position aside the seatbelt.


Torque: 30 lb.ft (40 Nm)

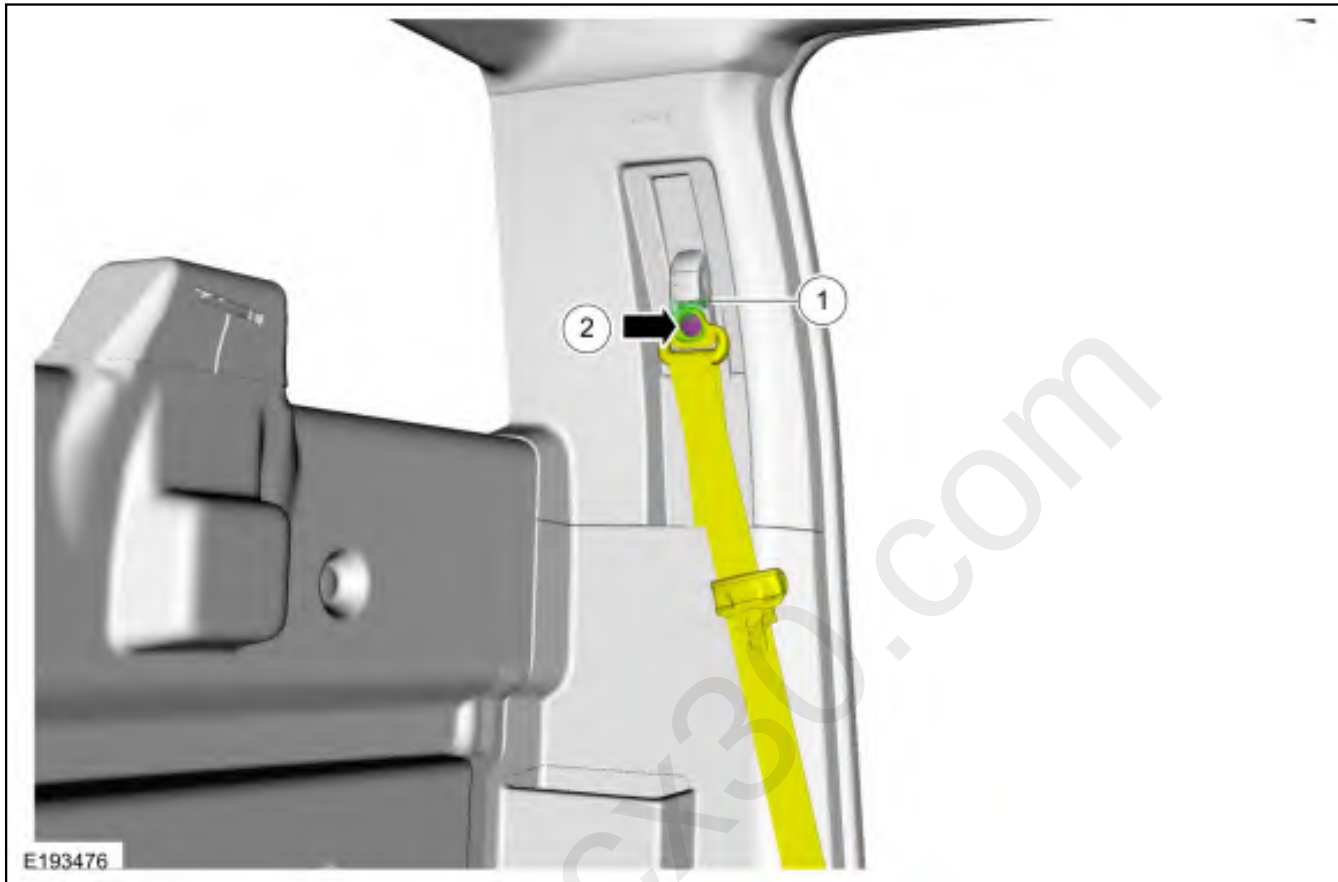

8. Release the clips and remove the upper B-pillar trim panel.

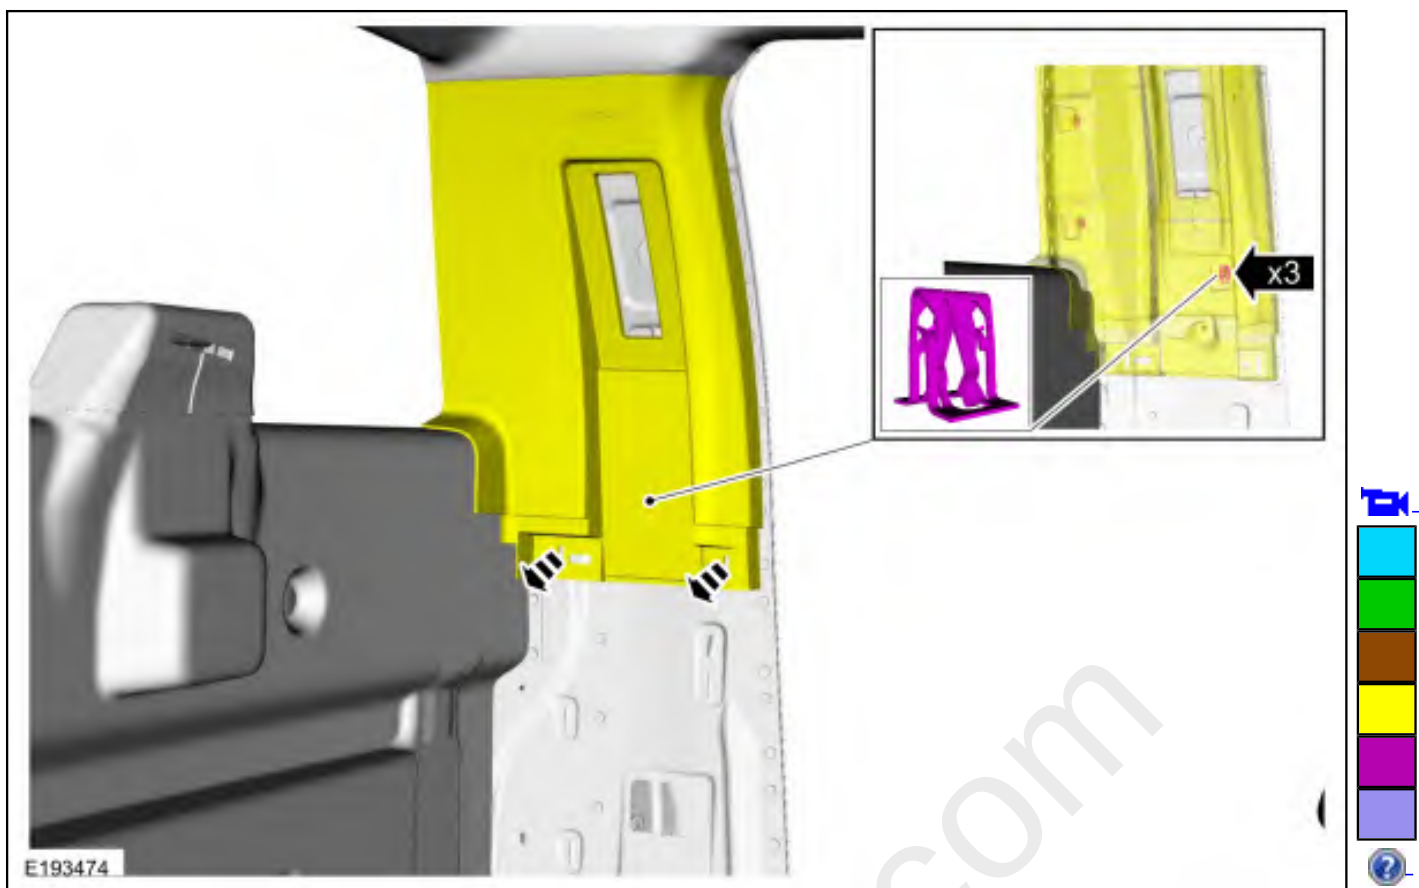

9. Push up on the upper B-pillar trim panel.

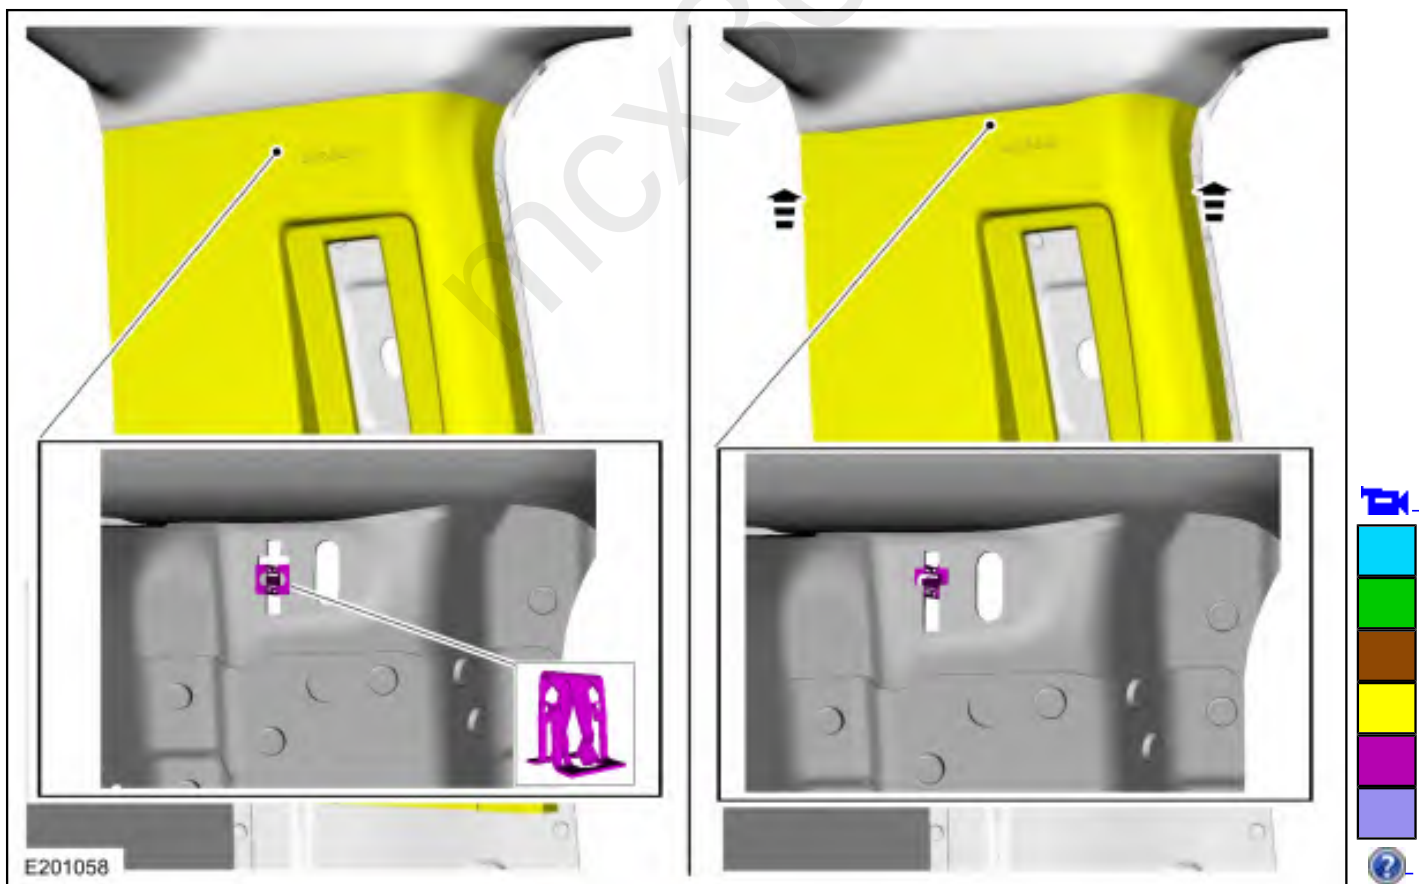

10. **NOTICE:** The trim panel must be positioned upward to allow the upper clip to release correctly. Failure to follow this may cause damage to the trim panel.

Remove the upper B-pillar trim panel.



Installation

1. **NOTE:** During installation, make sure the seatbelt webbing is not twisted and the seatbelts and buckles are accessible to the occupants.

To install, reverse the removal procedure.