


Front Driveshaft


Removal

NOTE: Removal steps may contain installation instructions.


1. With the vehicle in NEUTRAL, position the vehicle on a hoist.
Refer to: [Jacking and Lifting - Overview](#) (100-02 Jacking and Lifting, Description and Operation).
2. If equipped.
Remove the bolts and the transmission shield.
Torque: 71 lb.in (8 Nm)

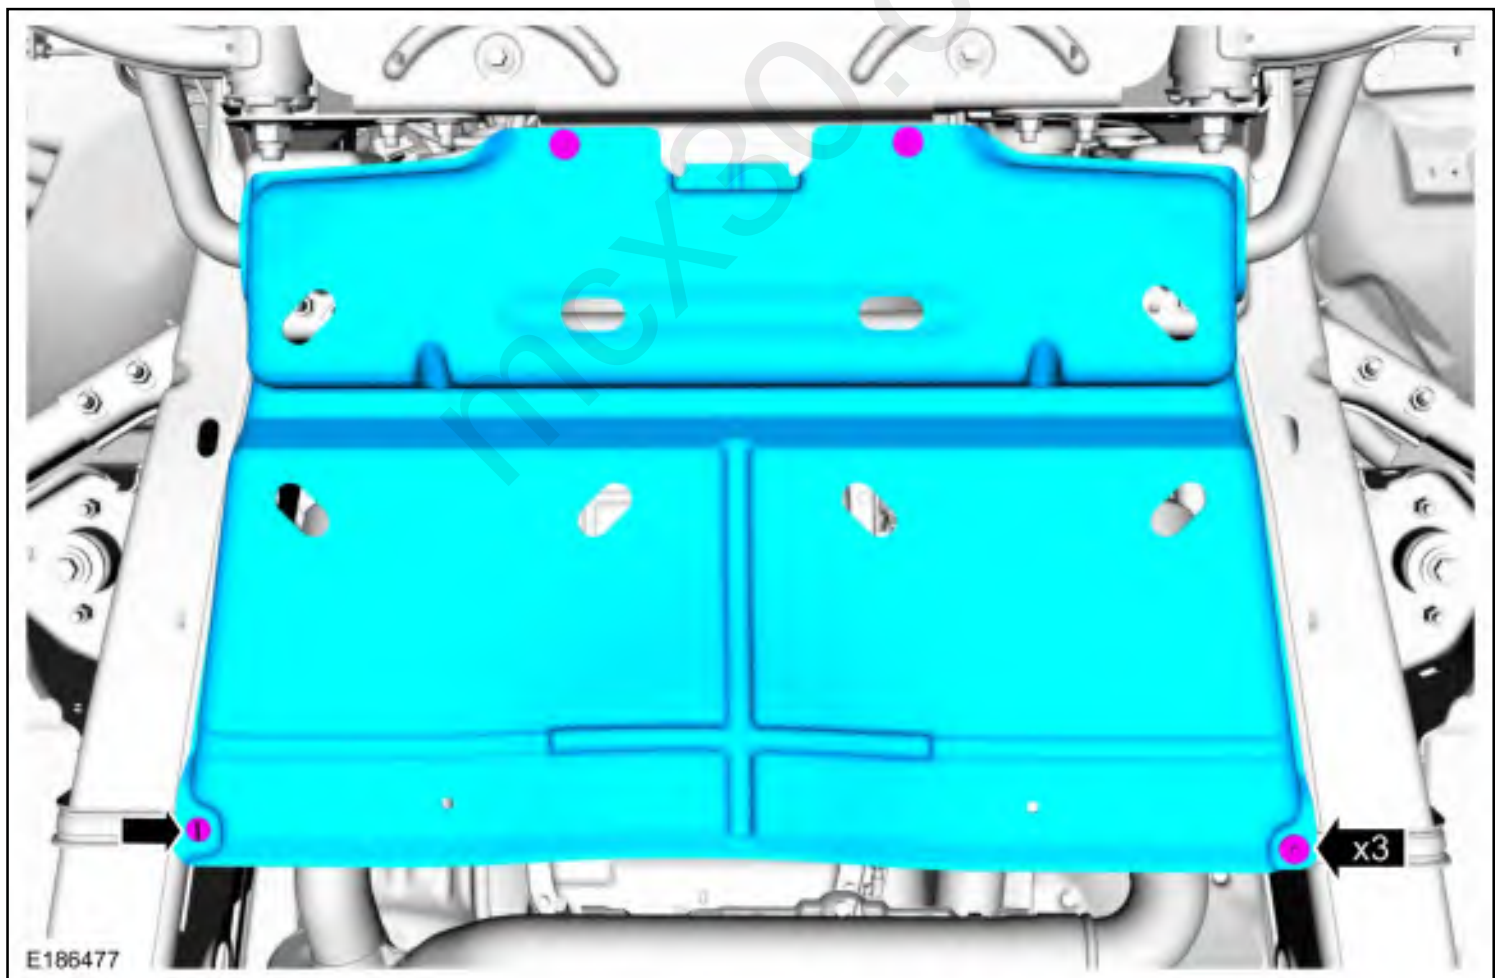


3. Index-mark the front driveshaft flange CV joint to the pinion flange cup.

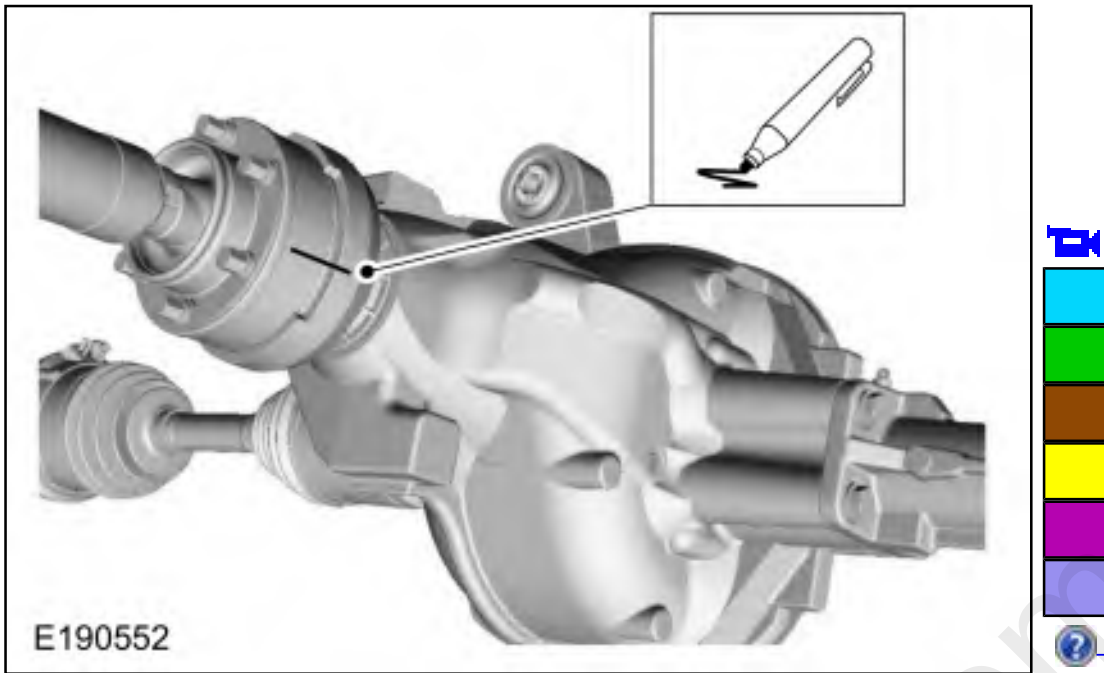


4. Remove and discard the stabilizer bar bracket nuts and allow the stabilizer bar to swing downward.
Torque: 41 lb.ft (55 Nm)

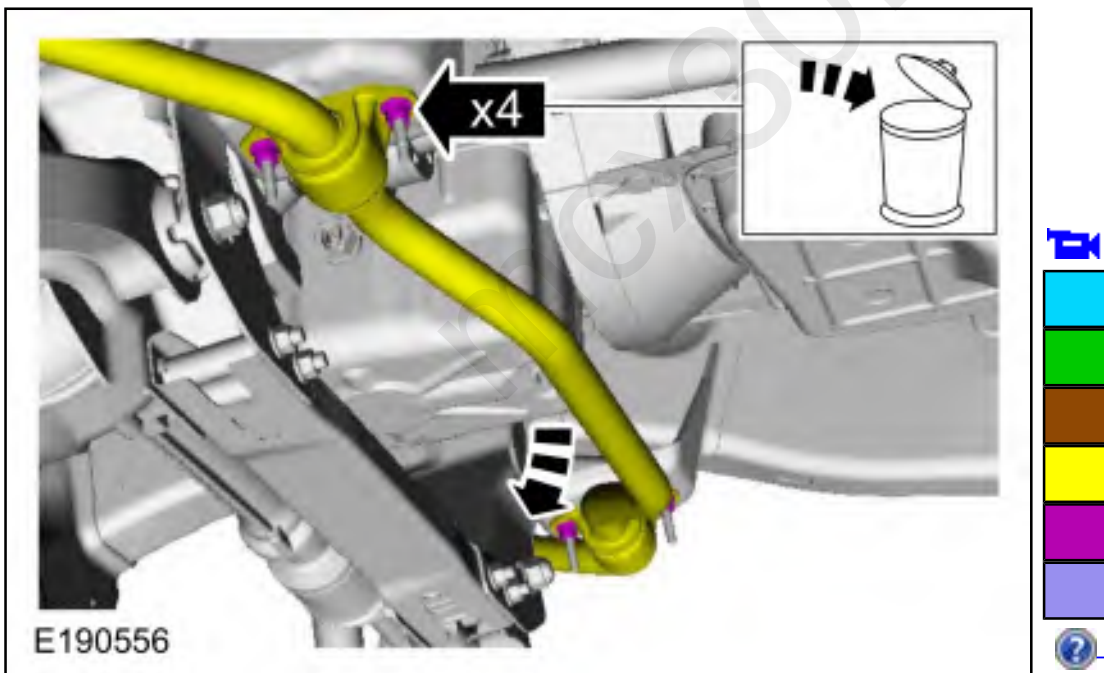


5. Remove and discard the front driveshaft CV joint-to-pinion flange cup bolts and retaining straps.
Torque: 41 lb.ft (55 Nm)

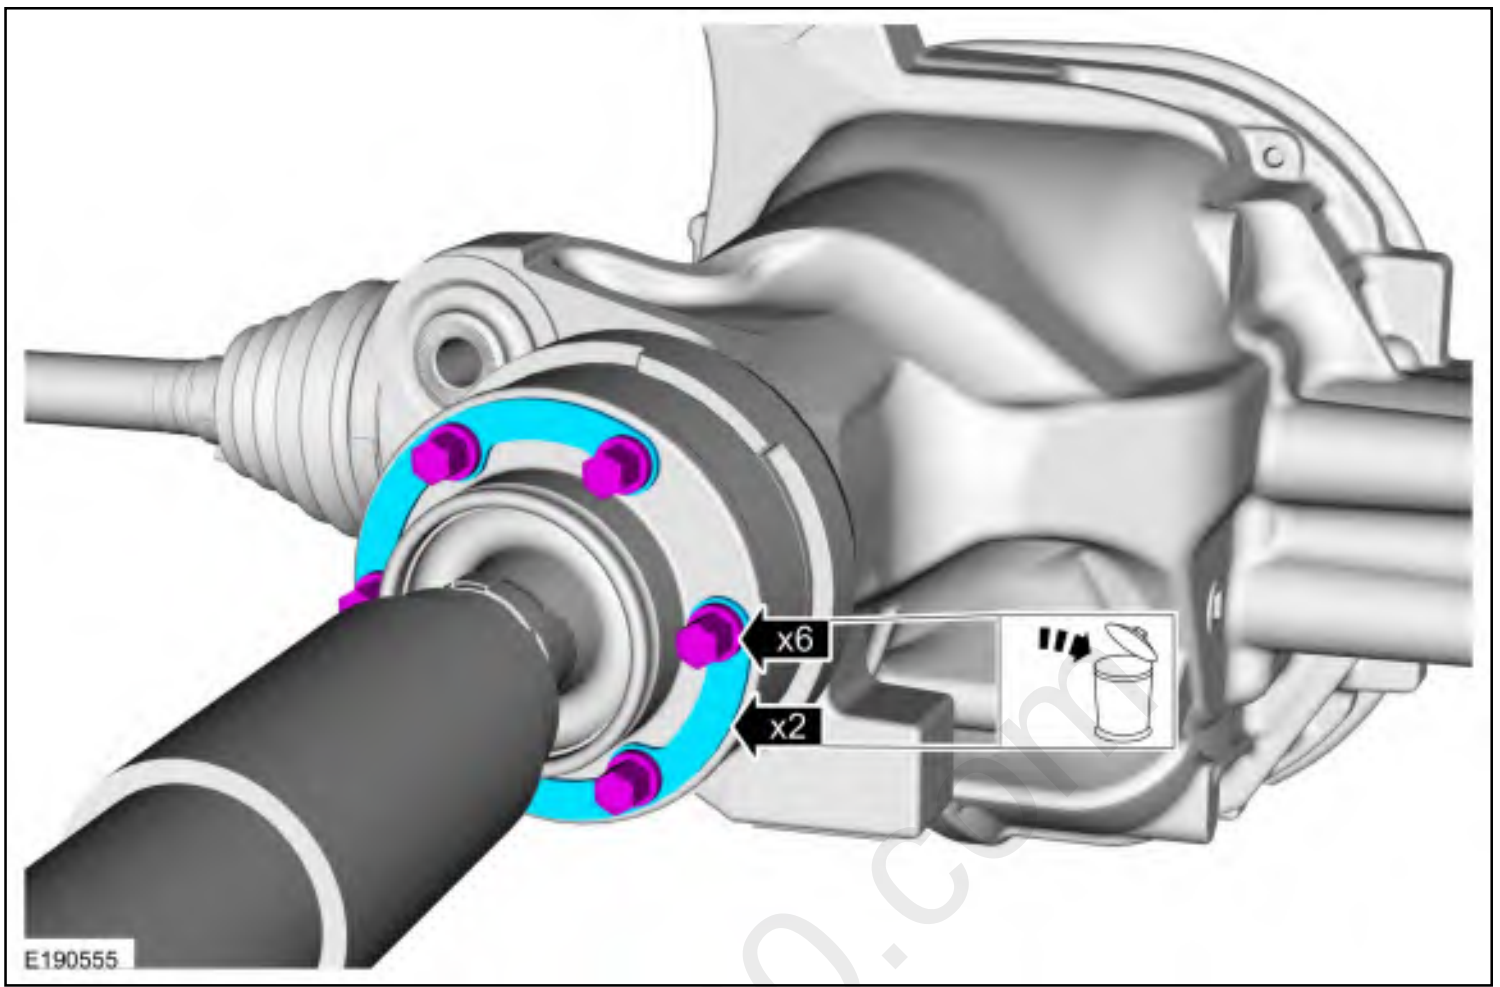

6. Remove and discard the rear driveshaft CV joint-to-transfer case flange cup bolts and retaining straps.
Torque: 41 lb.ft (55 Nm)

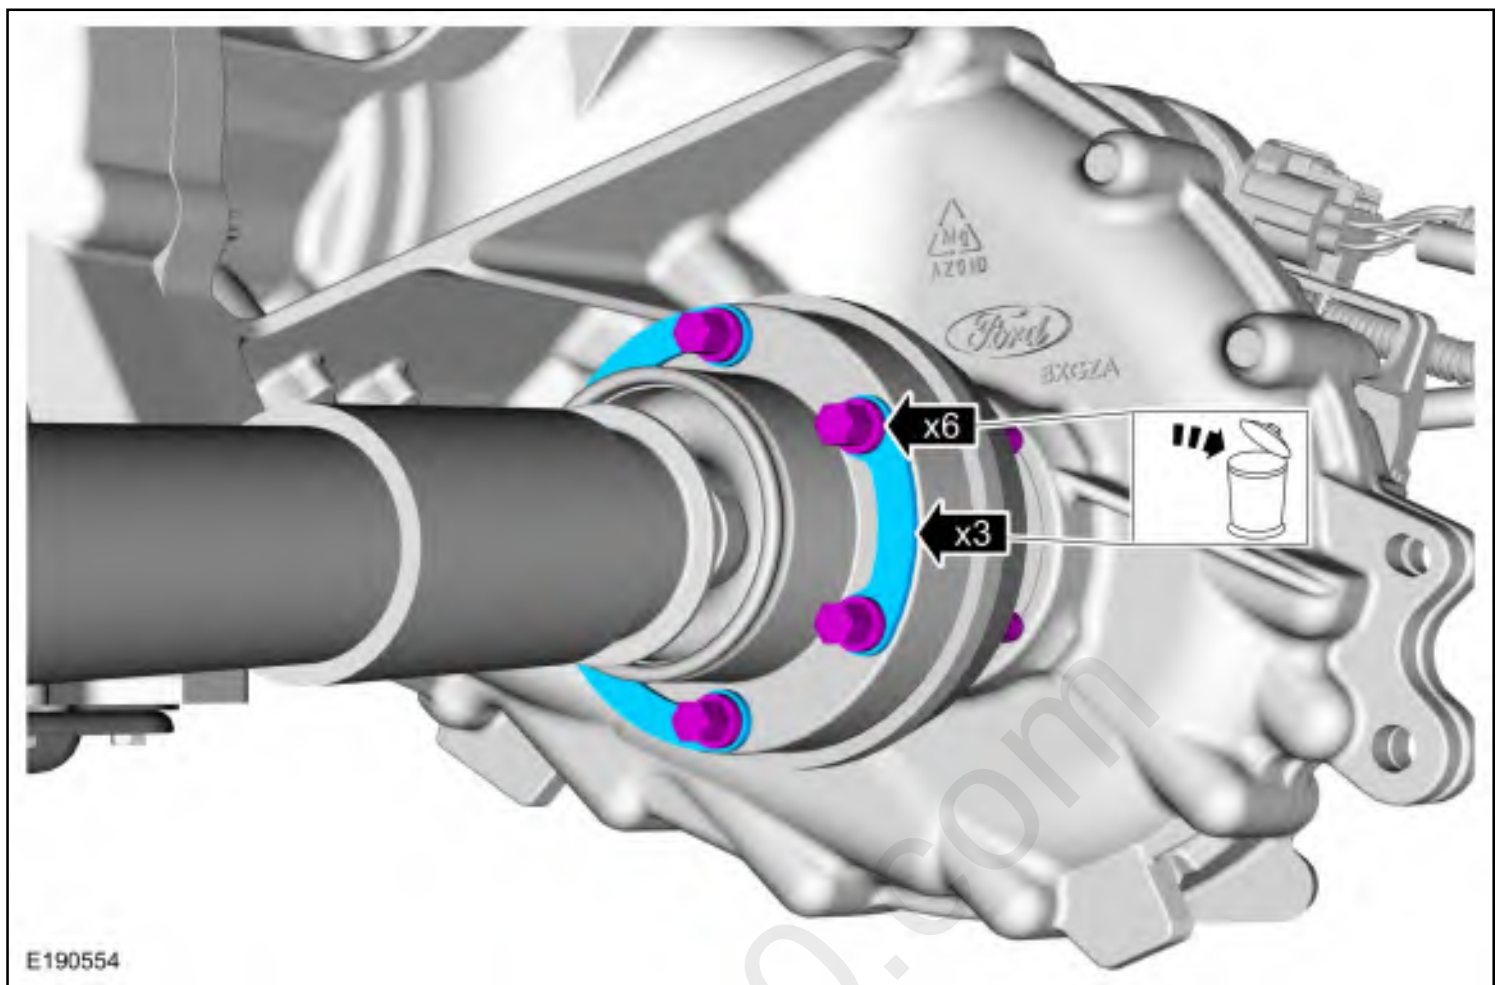

7. Remove the front driveshaft.

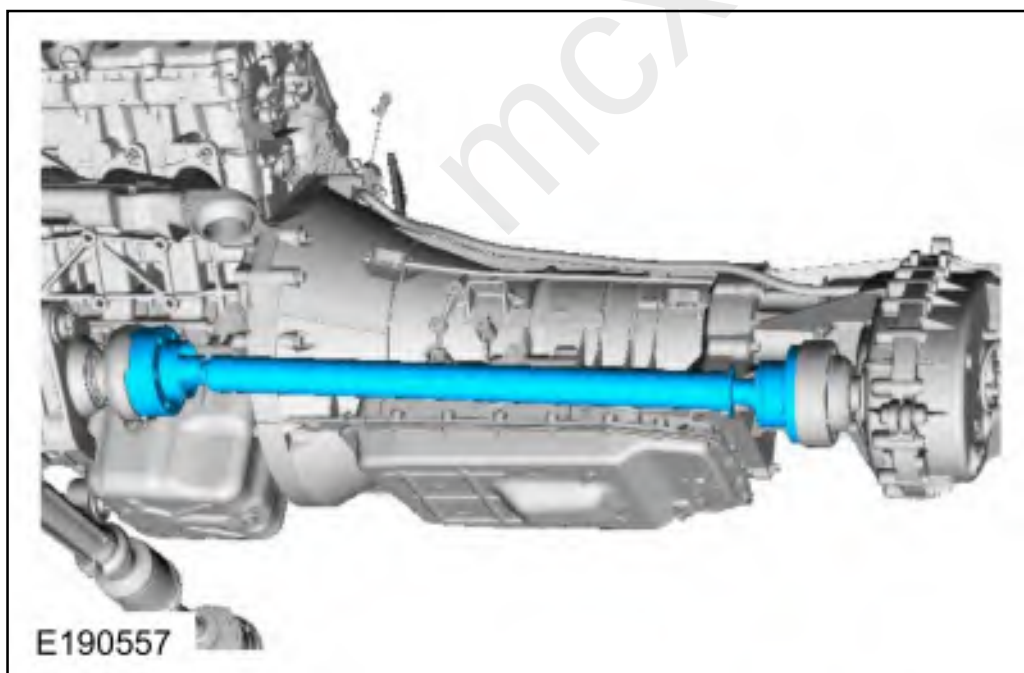

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company

mcx30.com