

Loadspace Trim Panel - Regular Cab

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. On both sides, remove the B-pillar trim panel.
Refer to: [B-Pillar Trim Panel - Regular Cab](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

2. **NOTE:** Front outboard seats removed for clarity.

If equipped.


Position the center seat backrest forward.

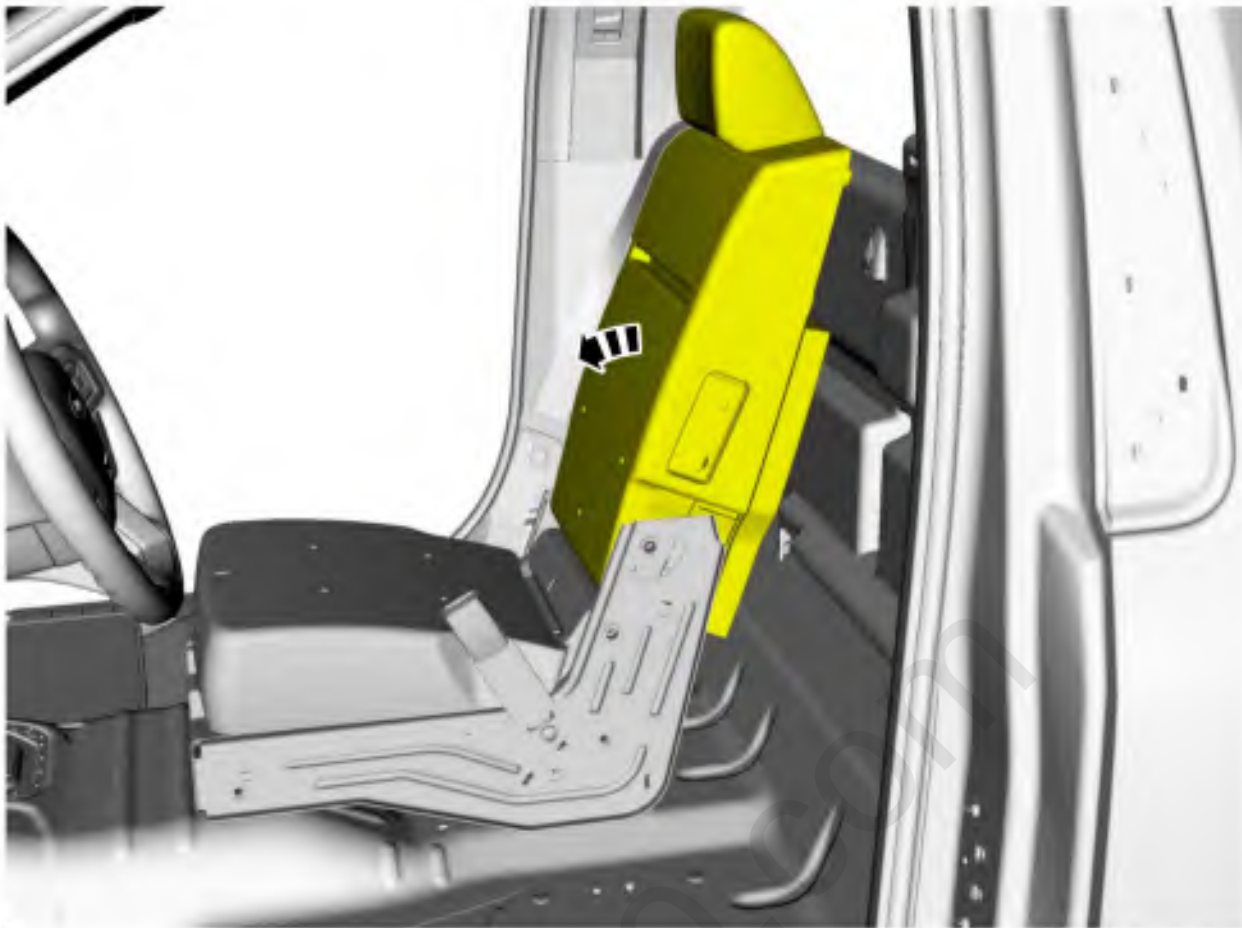

E196900



3. If equipped.
Remove the center seatbelt rear guide cover.

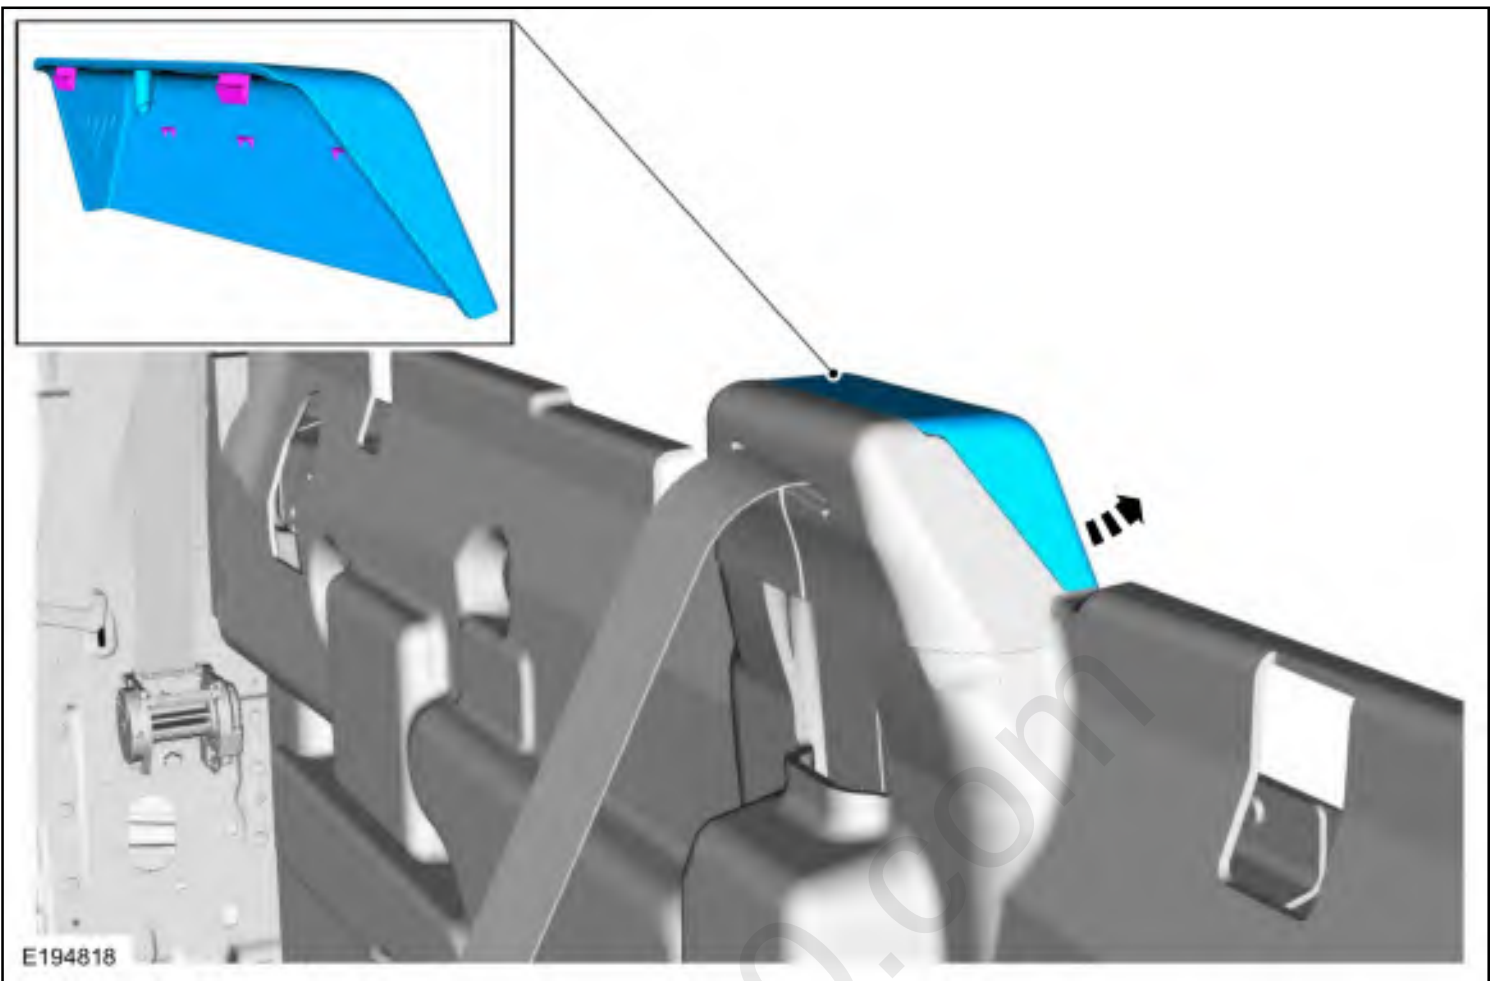


4. If equipped.

Remove the center seatbelt front guide cover.


1. Remove the retainer.

Torque: 42 lb.in (4.8 Nm)

2. Position the seatbelt through the slot and remove the cover.

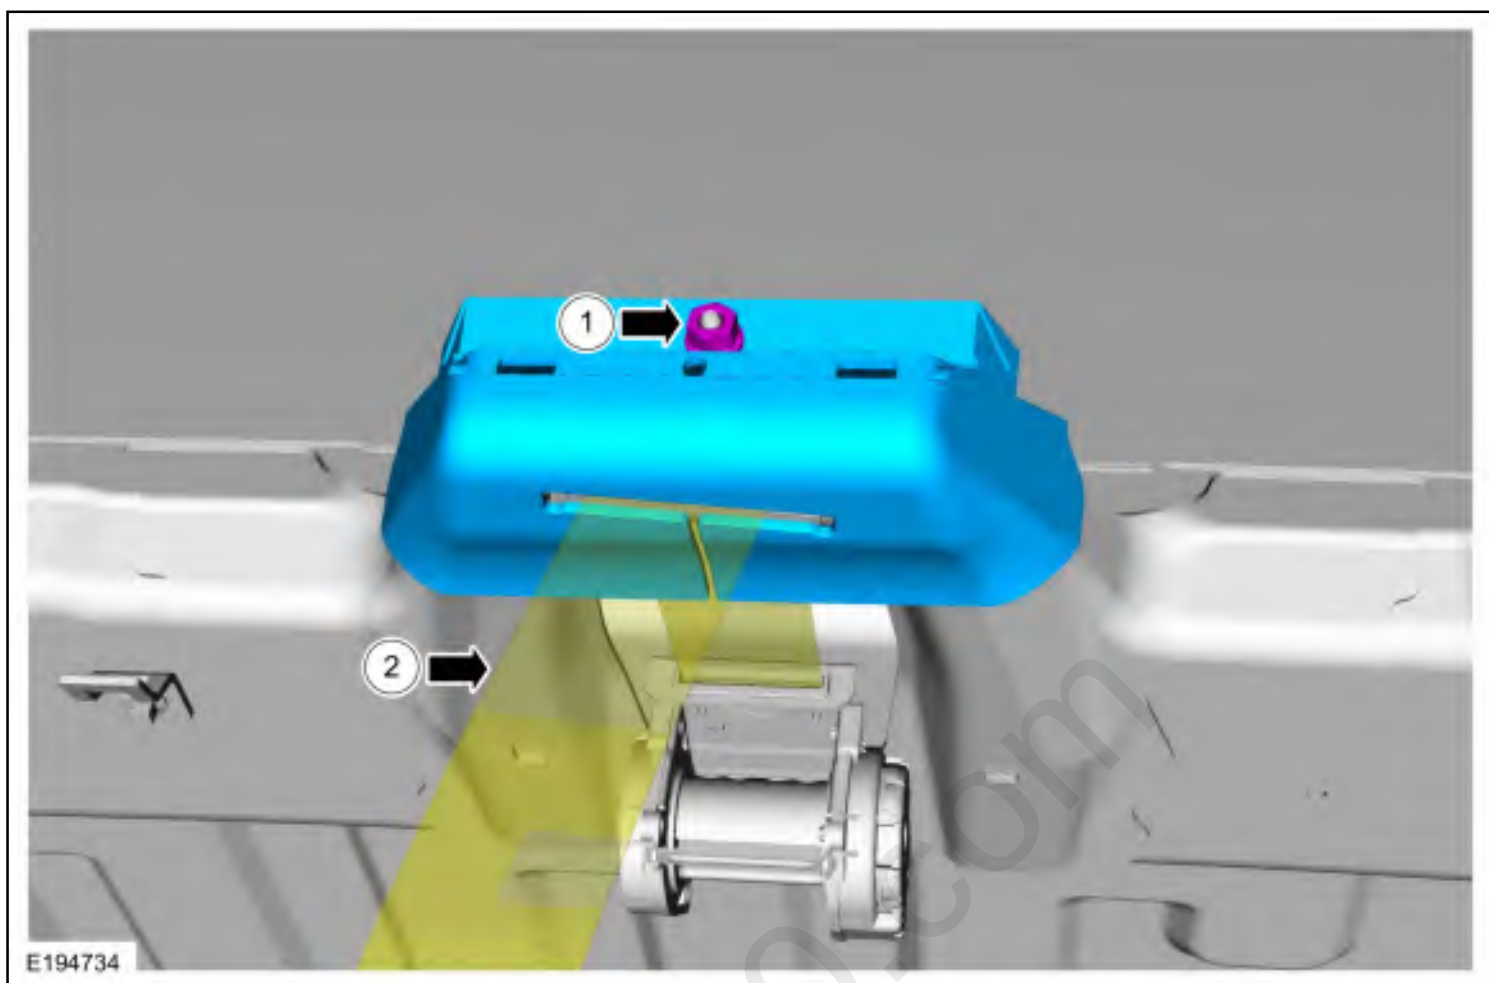


5. Remove the vehicle jack foam insulator.

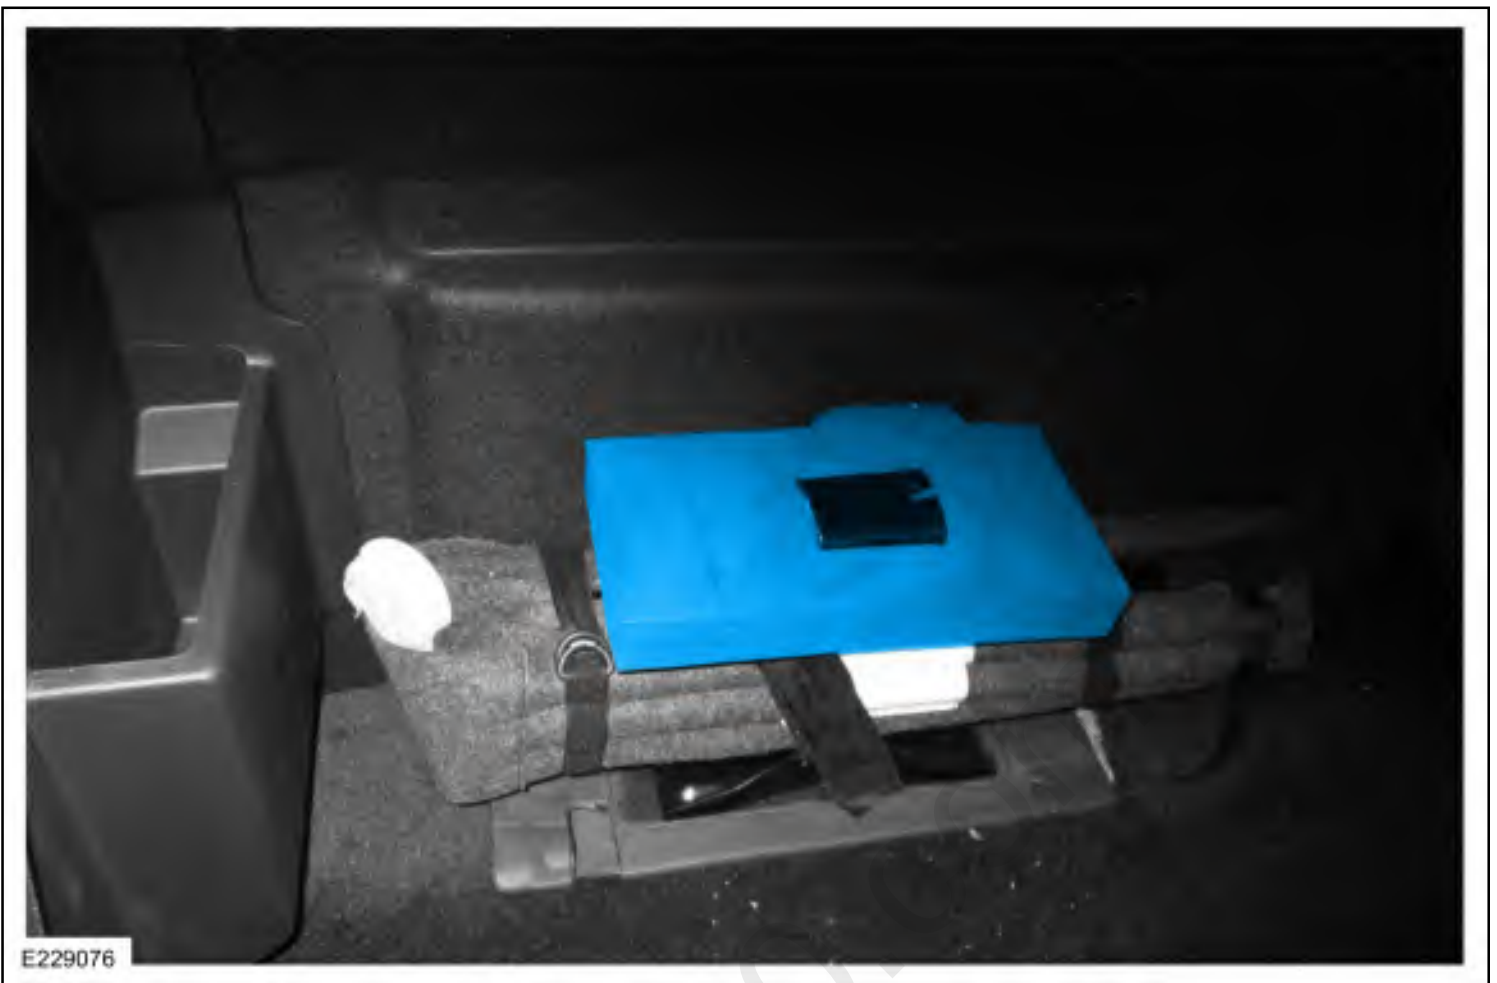


6. Release the vehicle jack hook-and-loop strap.



7. Remove the vehicle jack assembly.

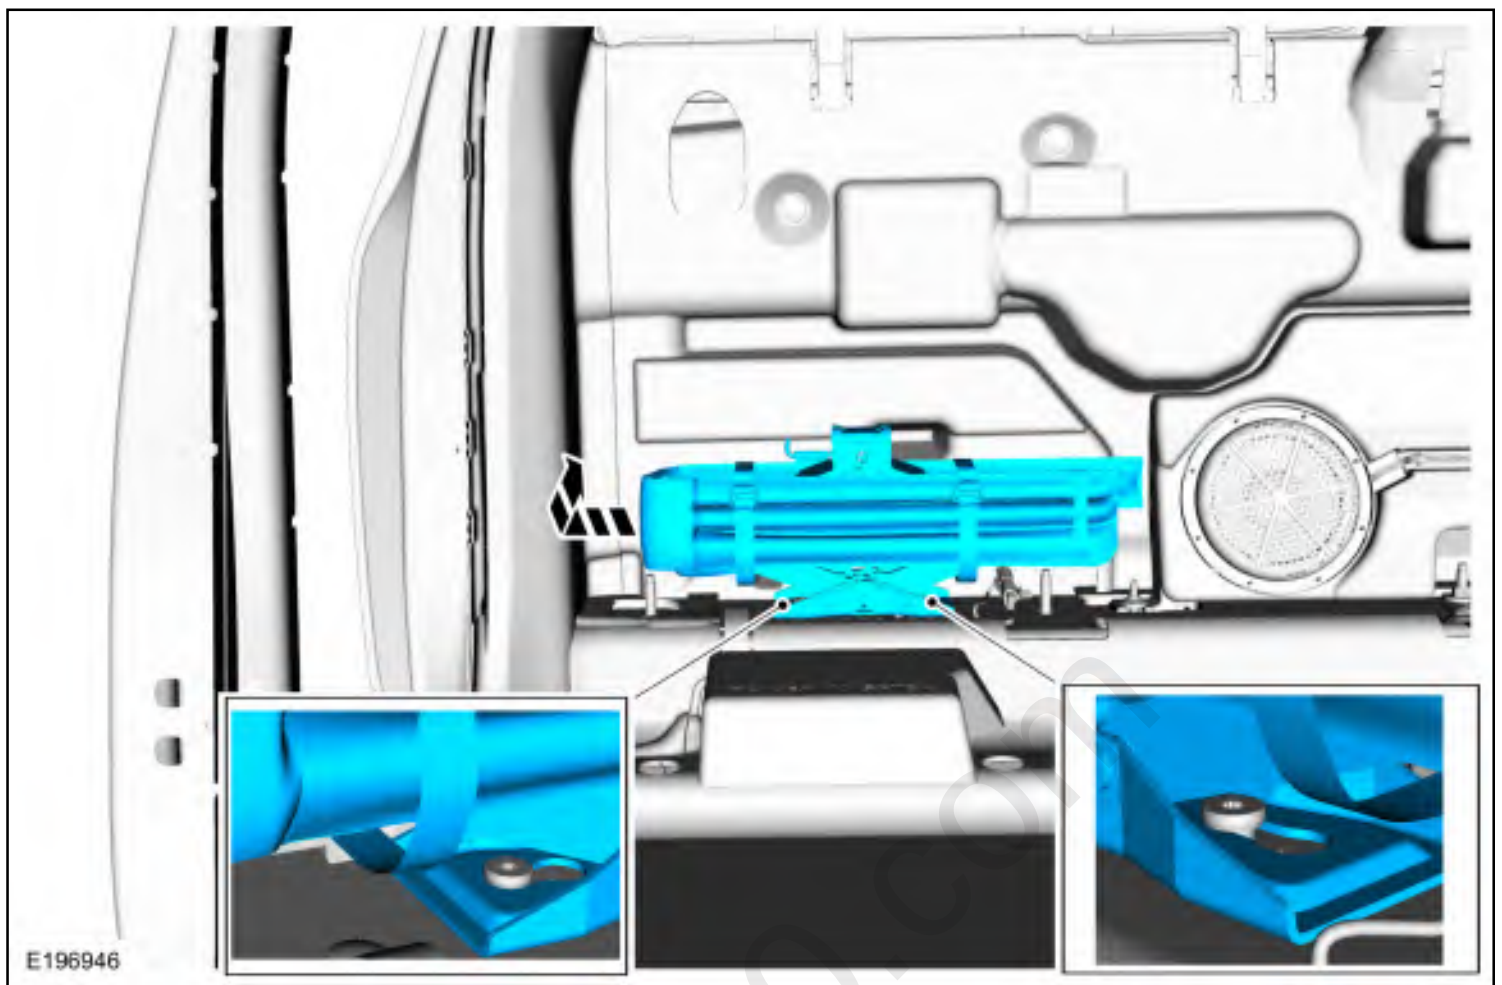

8. Remove the retainers and the loadspace trim panel.

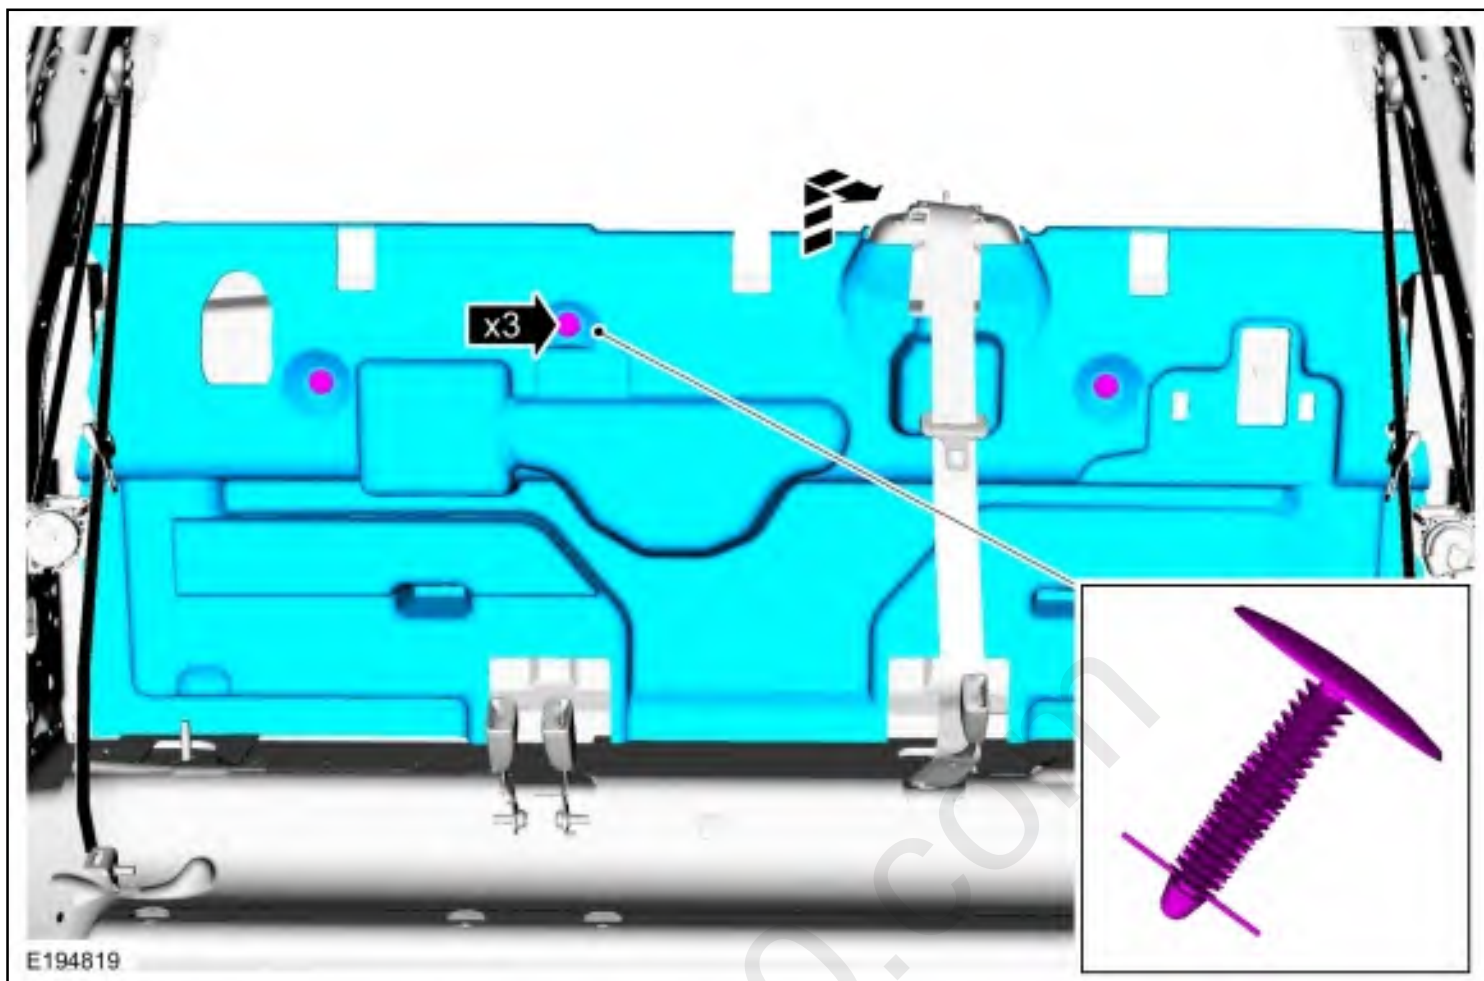

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company