


Tailgate Moulding

Removal

NOTE: Removal steps in this procedure may contain installation details.

All vehicles


1. Remove the screws from the tailgate liner.
Torque: 28 lb.in (3.2 Nm)

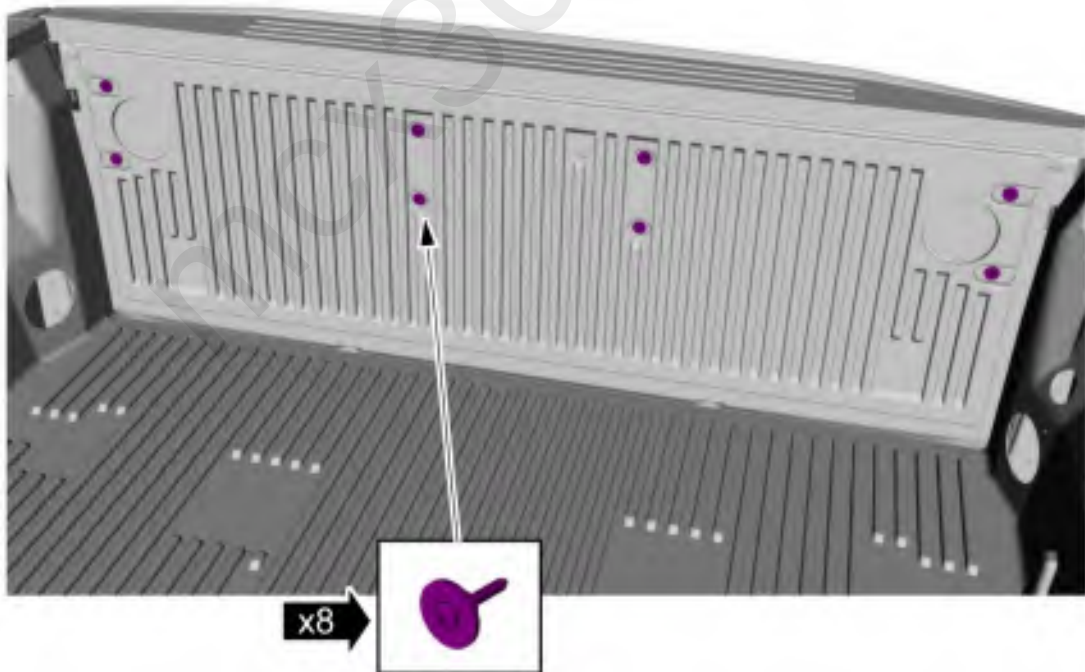

E193040

2. Remove the tailgate liner.




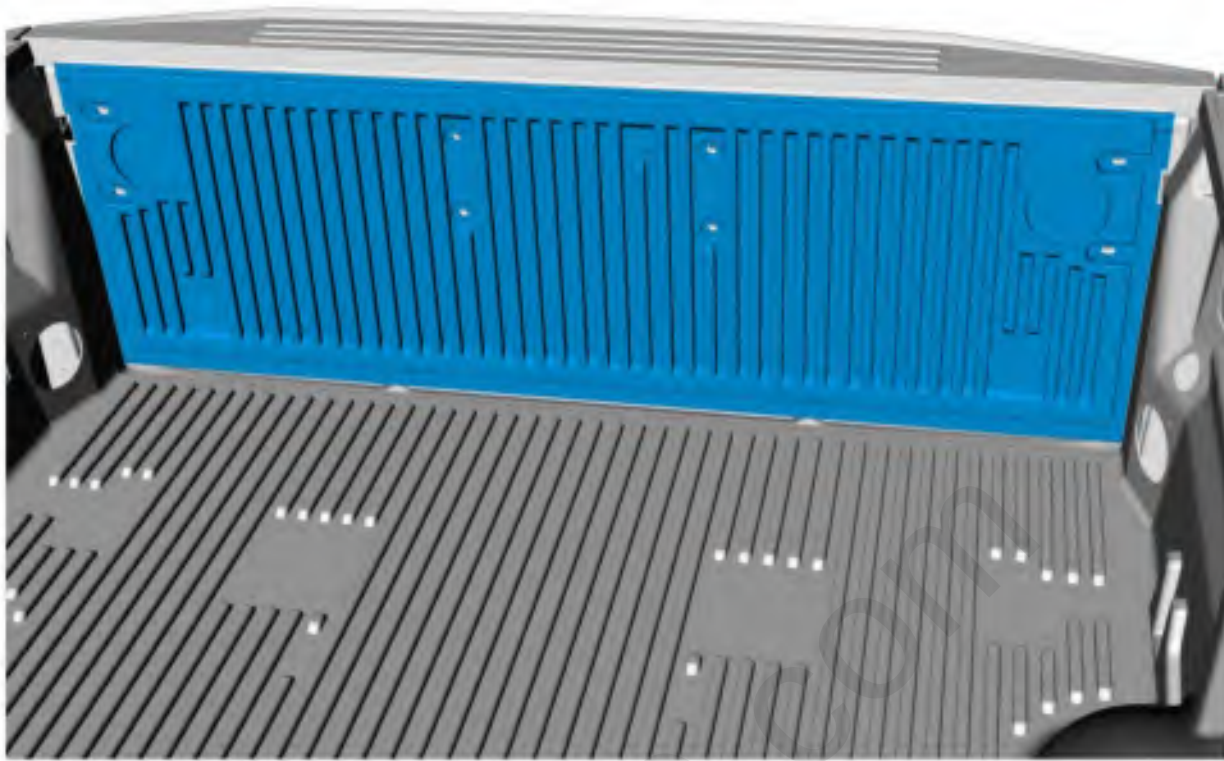

E193041




3. Remove the screws from the inner panel.
Torque: 28 lb.in (3.2 Nm)

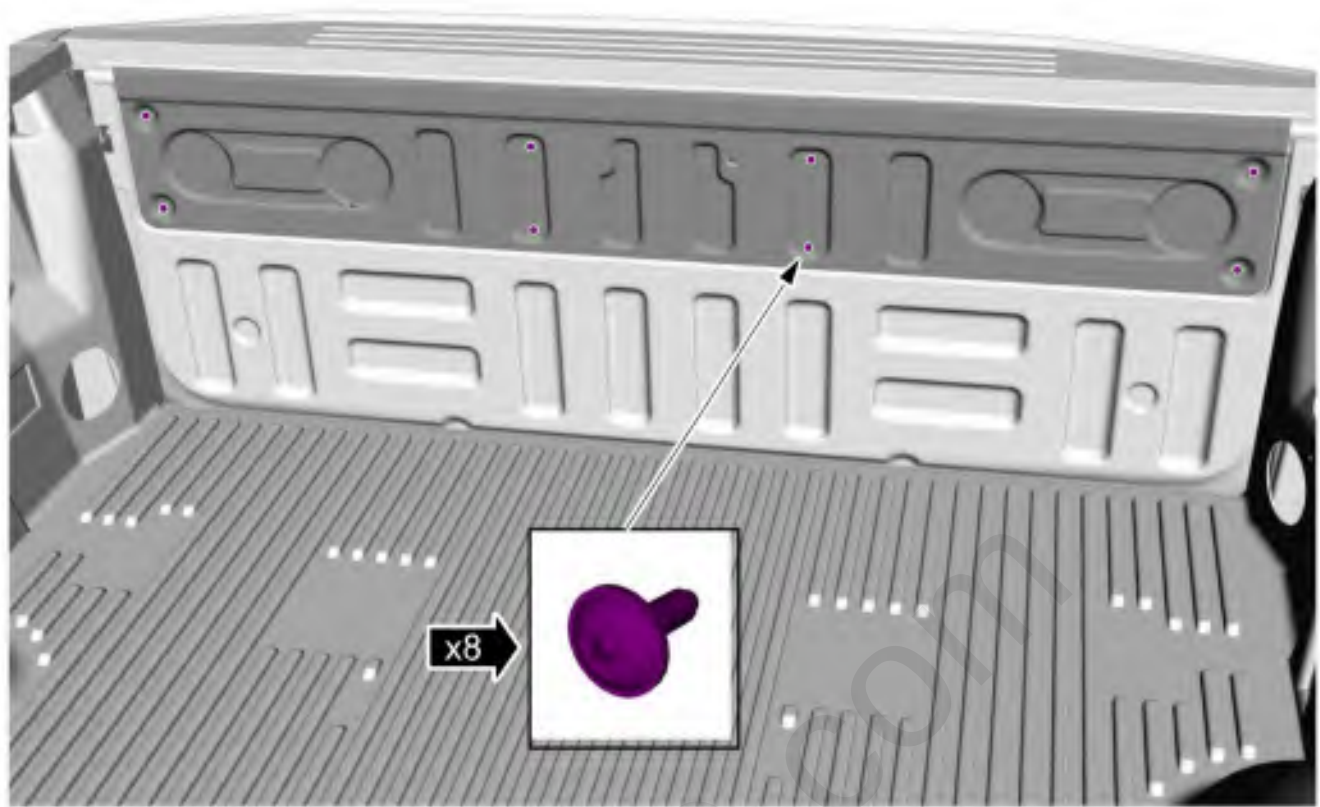

E193042

4. Remove the inner panel.

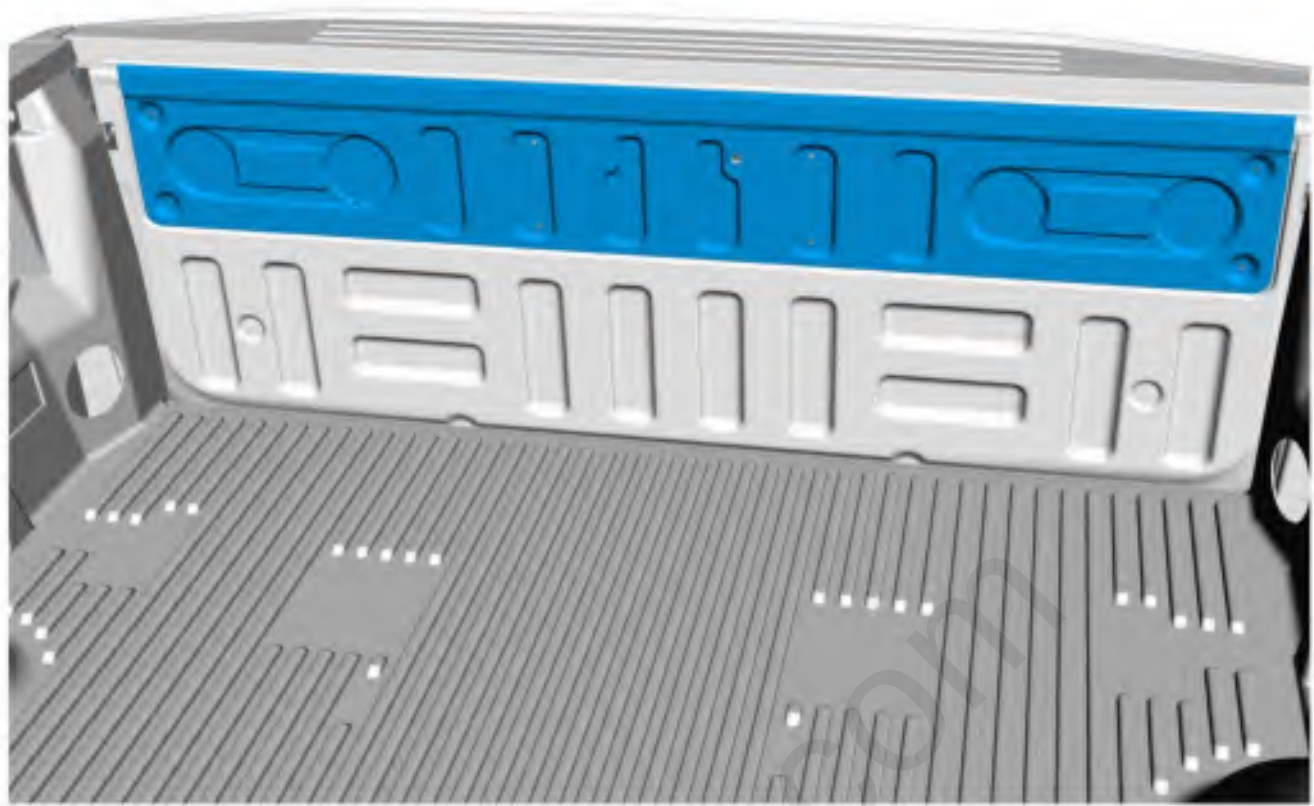


E193043




Vehicles without Flexible Step

5. Remove the push pin retainers.

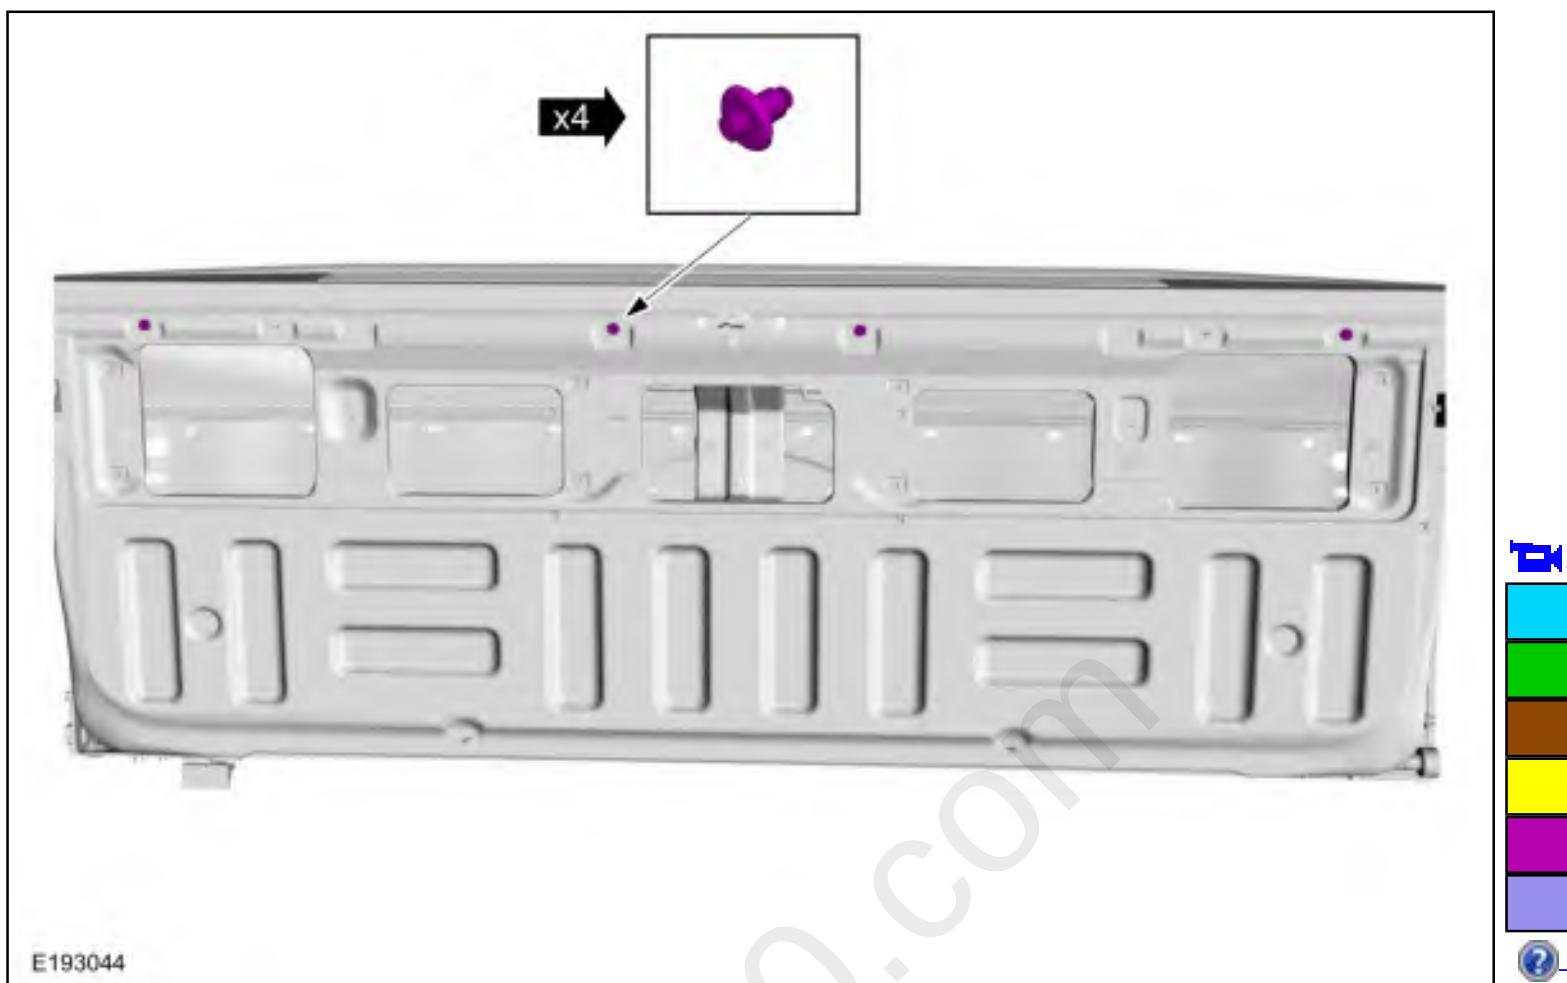

6. Using a non-marring trim tool, disengage the retainers from the tailgate and remove the moulding.

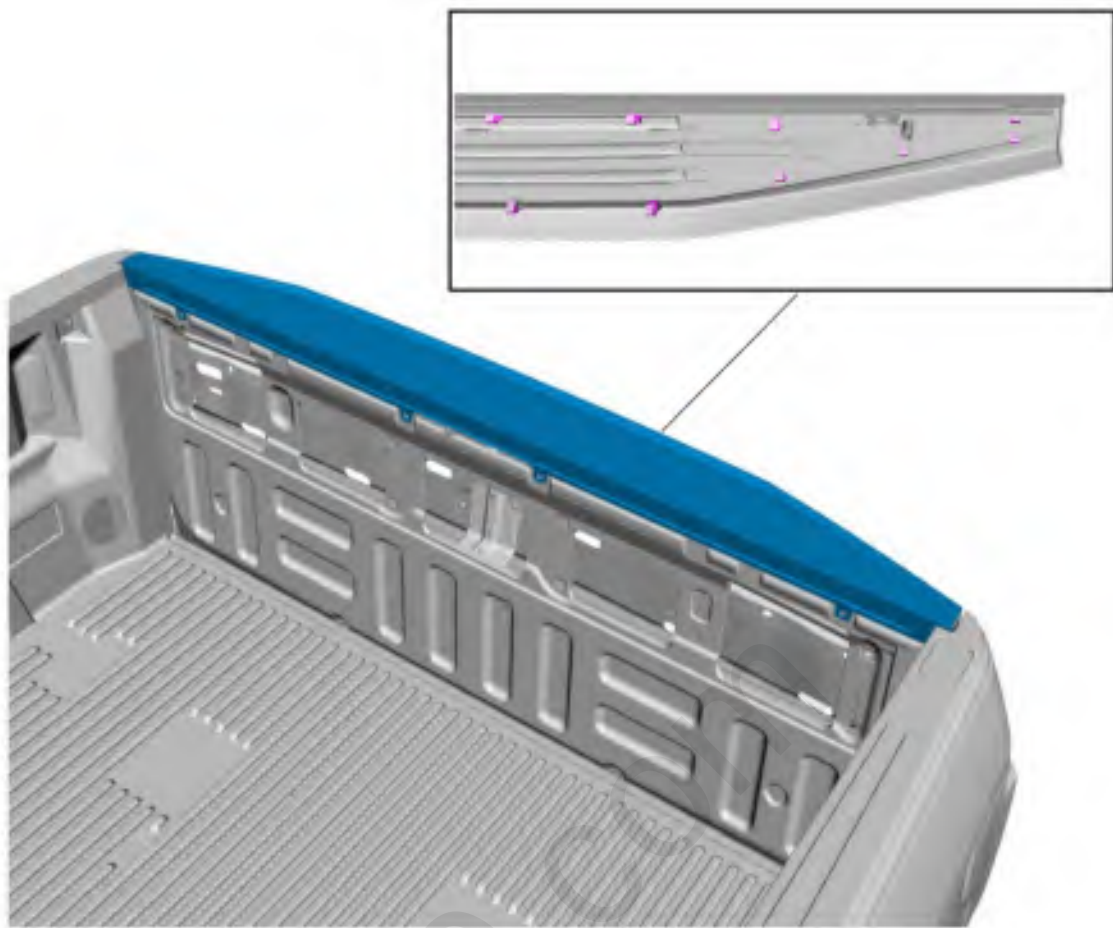


E193045




Vehicles with Flexible Step

7. Remove the push pin retainers.

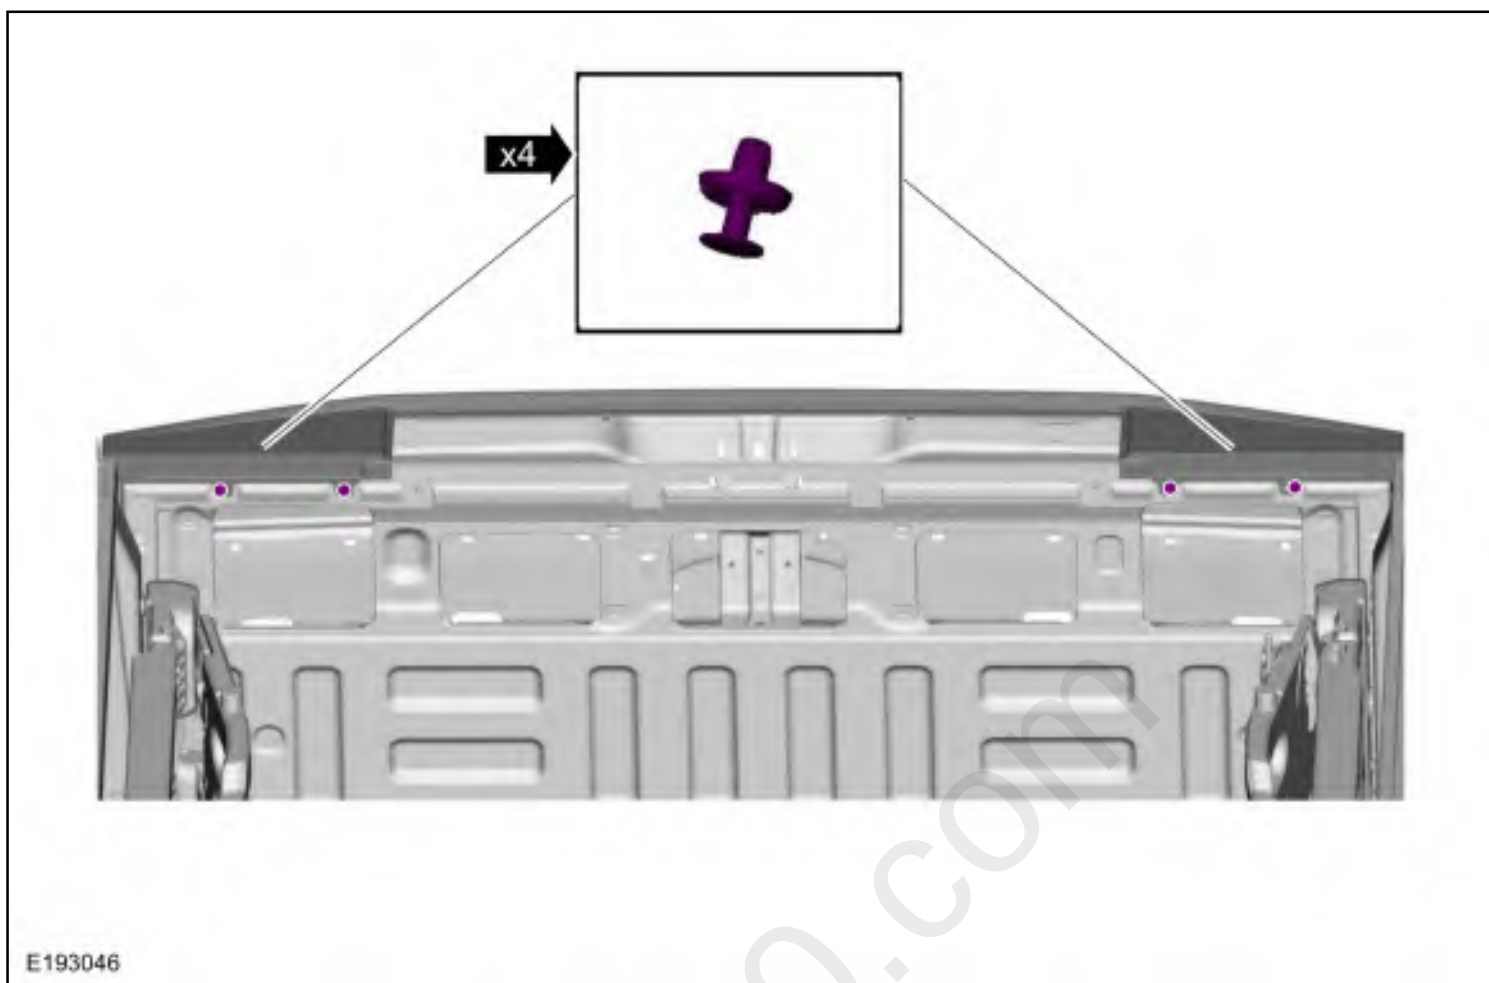


8. Using a non-marring trim tool, disengage the retainers from the tailgate and remove the moulding.

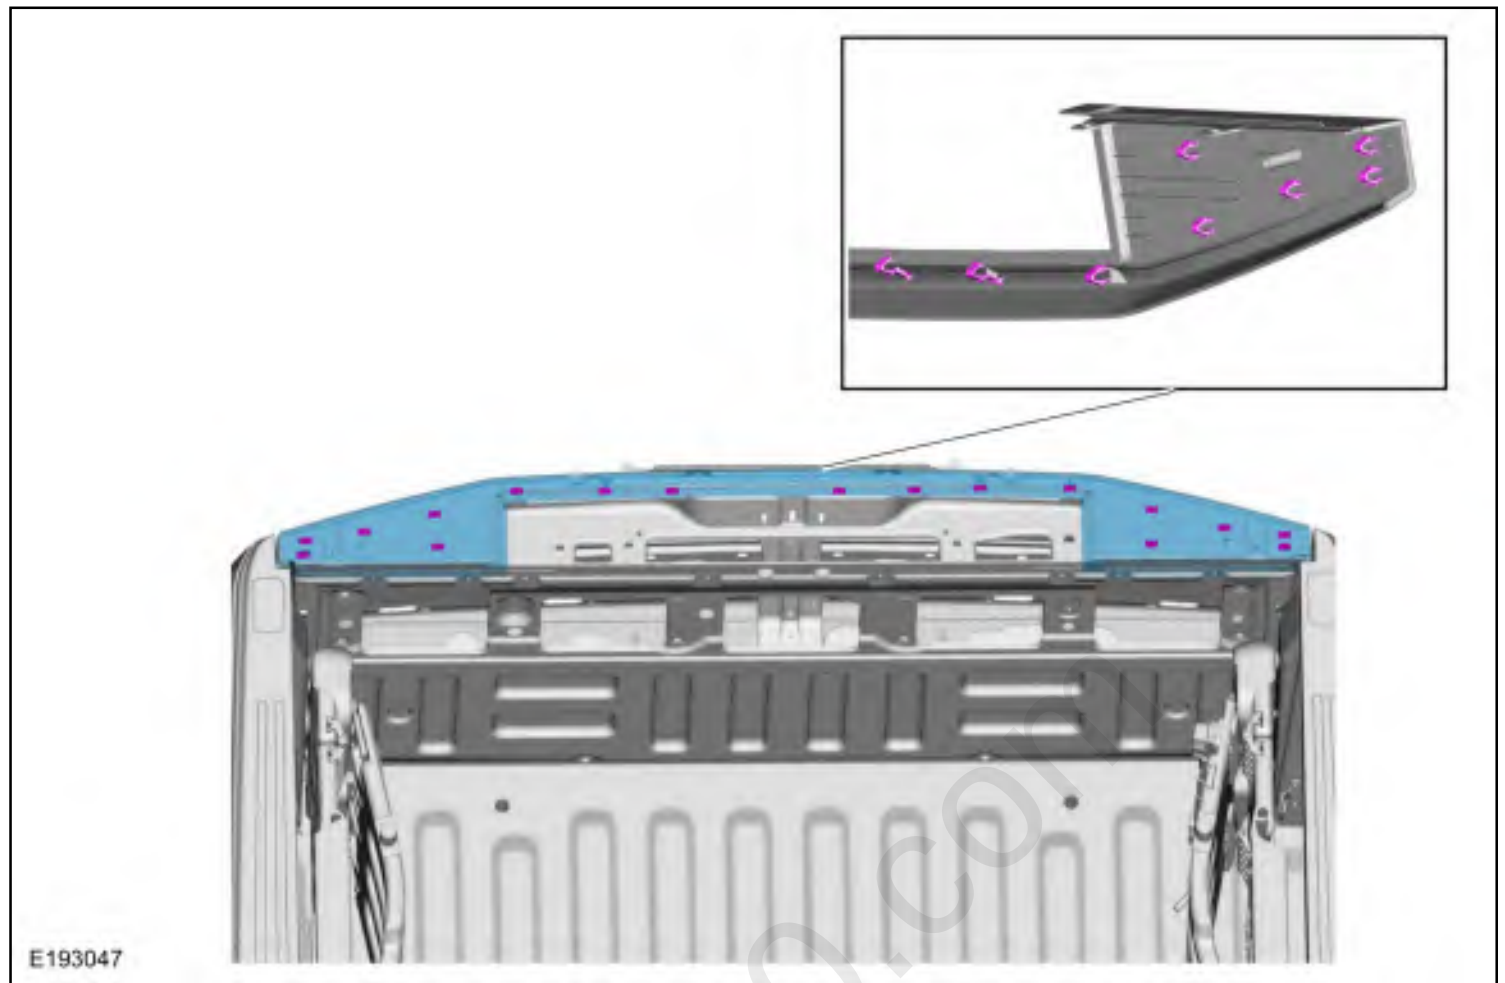

Vehicles with Tailgate Applique


9. Remove the retainer nuts and washers.
Torque: 36 lb.in (4.1 Nm)

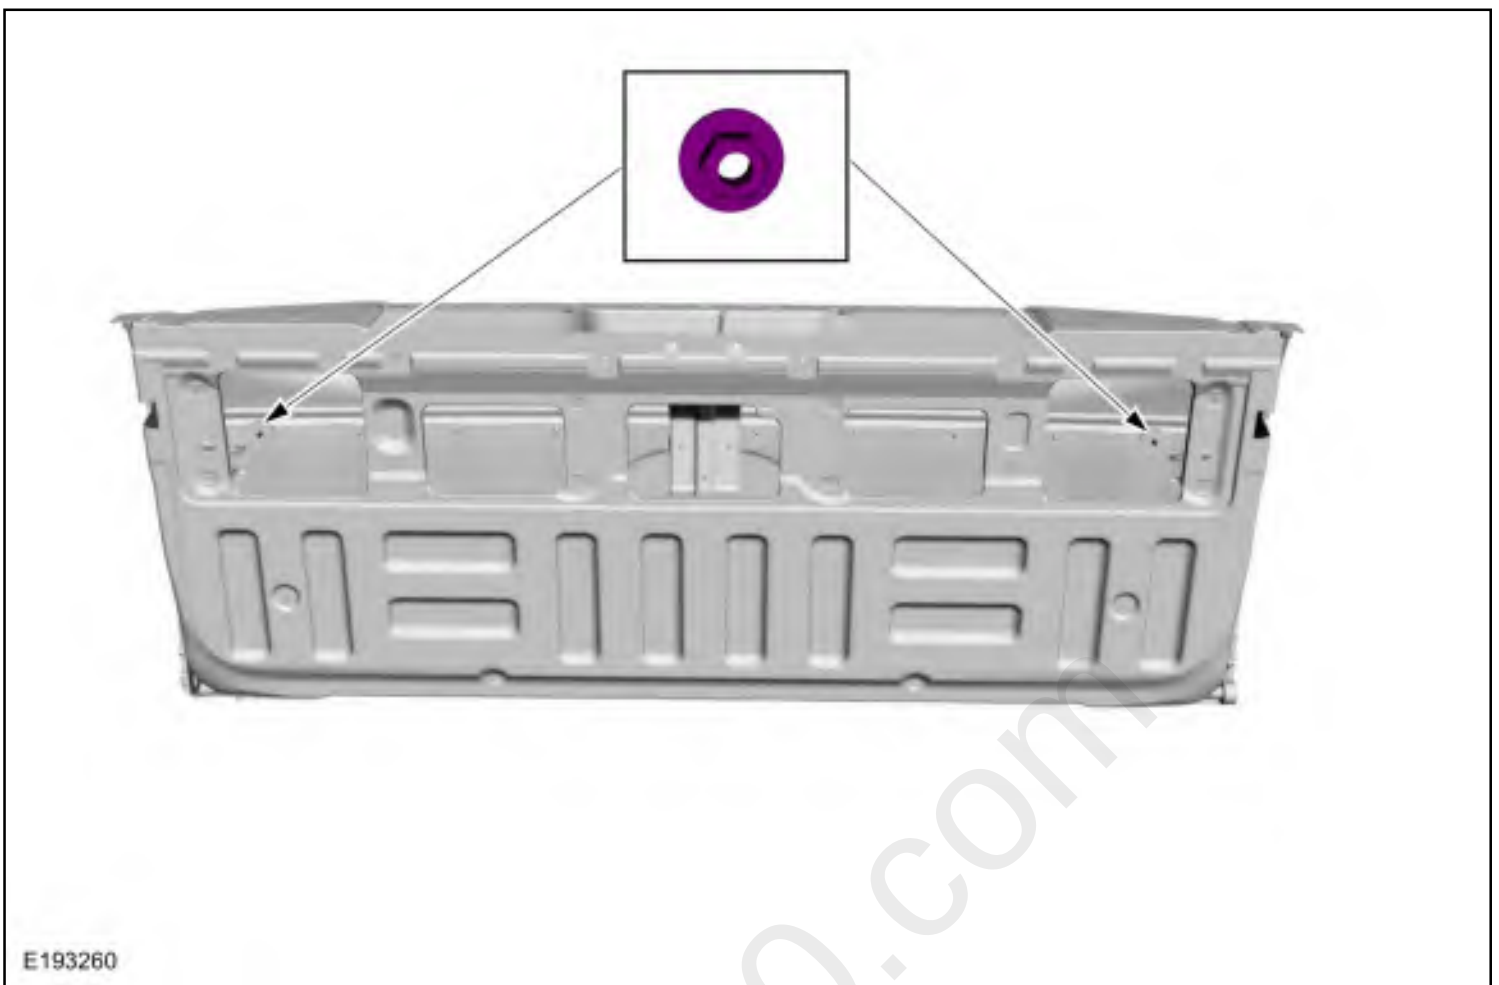

10. **NOTE:** *Platinum tailgate applique shown, all others similar.*

NOTE: *Use care when disengaging push pins from tailgate to avoid damage to the applique.*

Using a non-marring trim tool, disengage the push pin retainers from the tailgate and remove the applique.

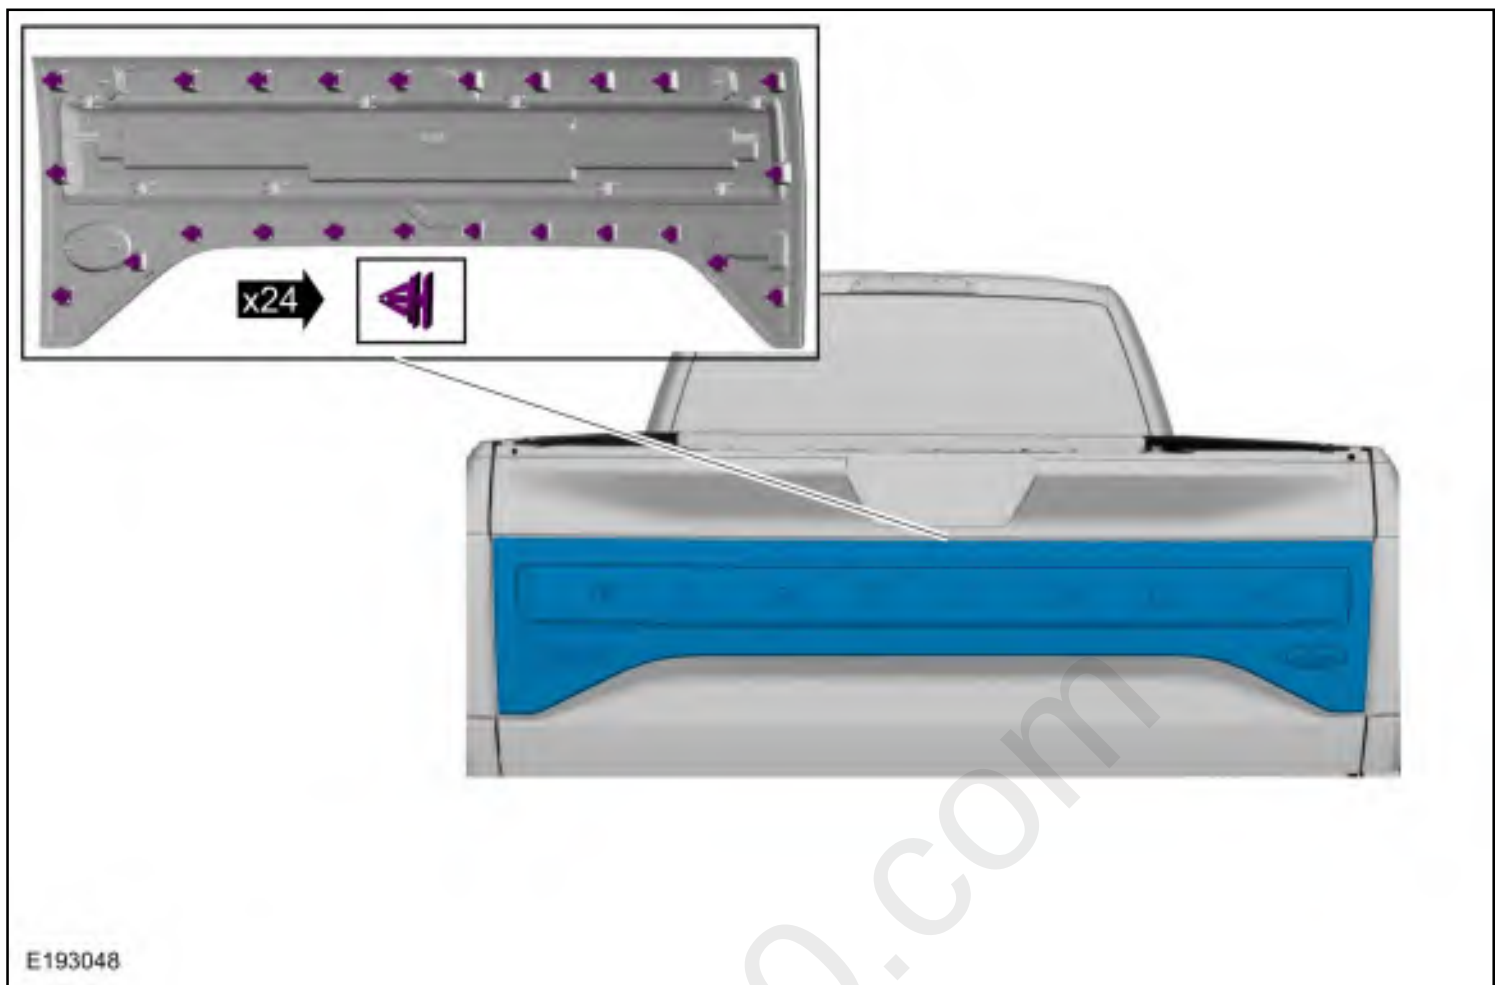

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company