

Front Door Upper Moulding


Removal

NOTE: Removal steps in this procedure may include installation details.

LH side shown, RH side similar.


All vehicles

1. Lower the door window glass.

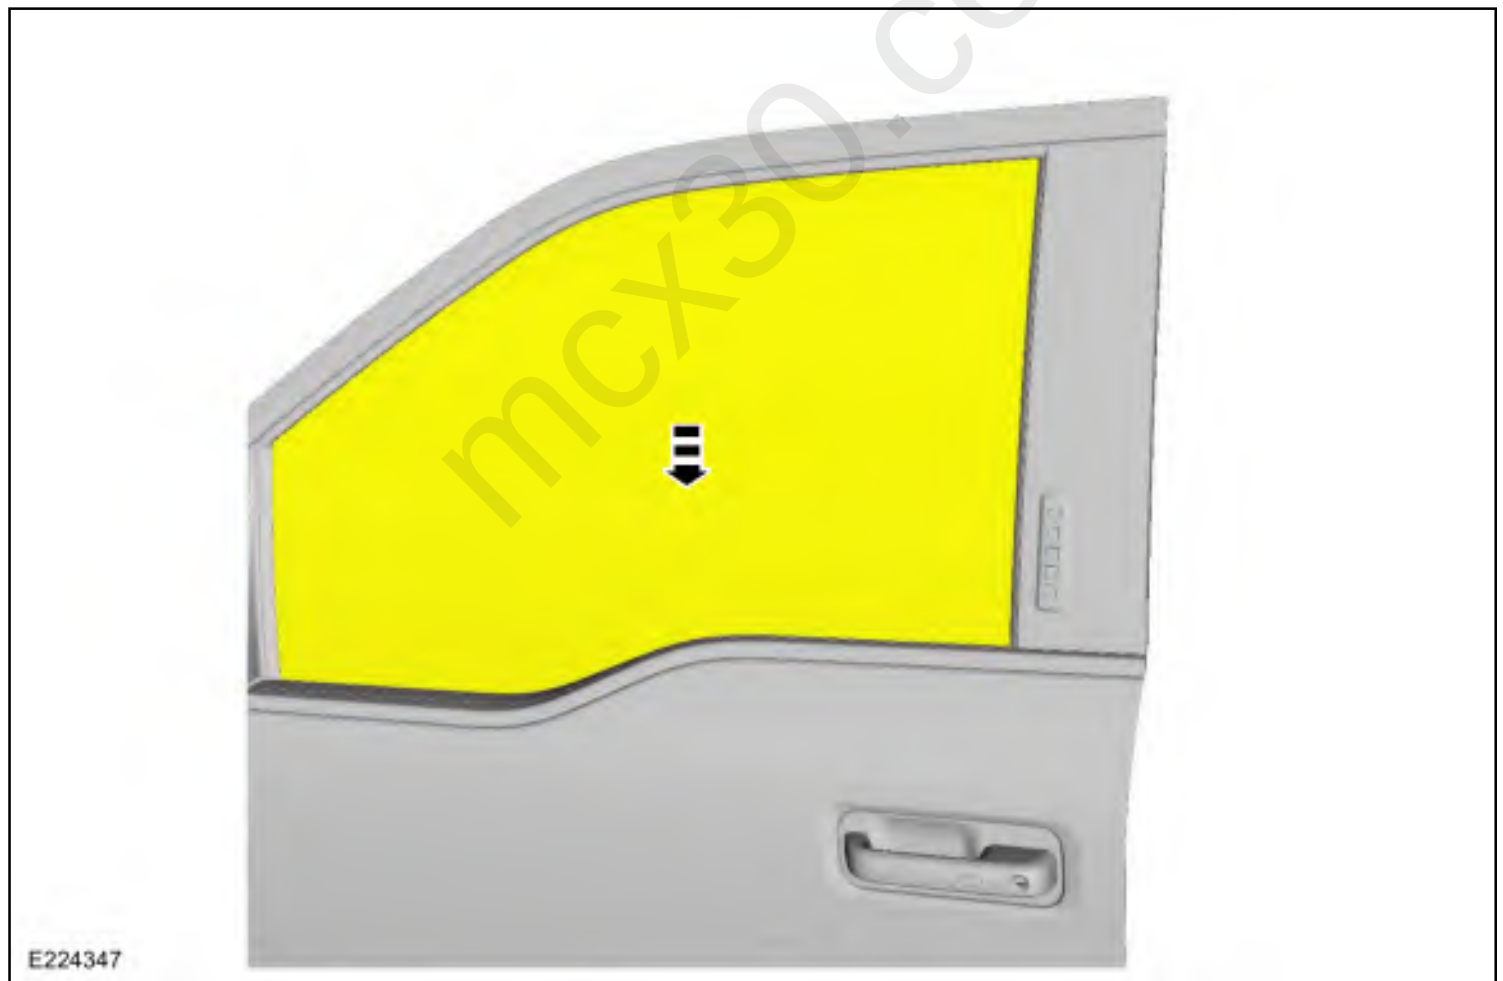

2. Remove the upper belt moulding screw at rear of the door.


Torque: 9 lb.in (1.0 Nm)

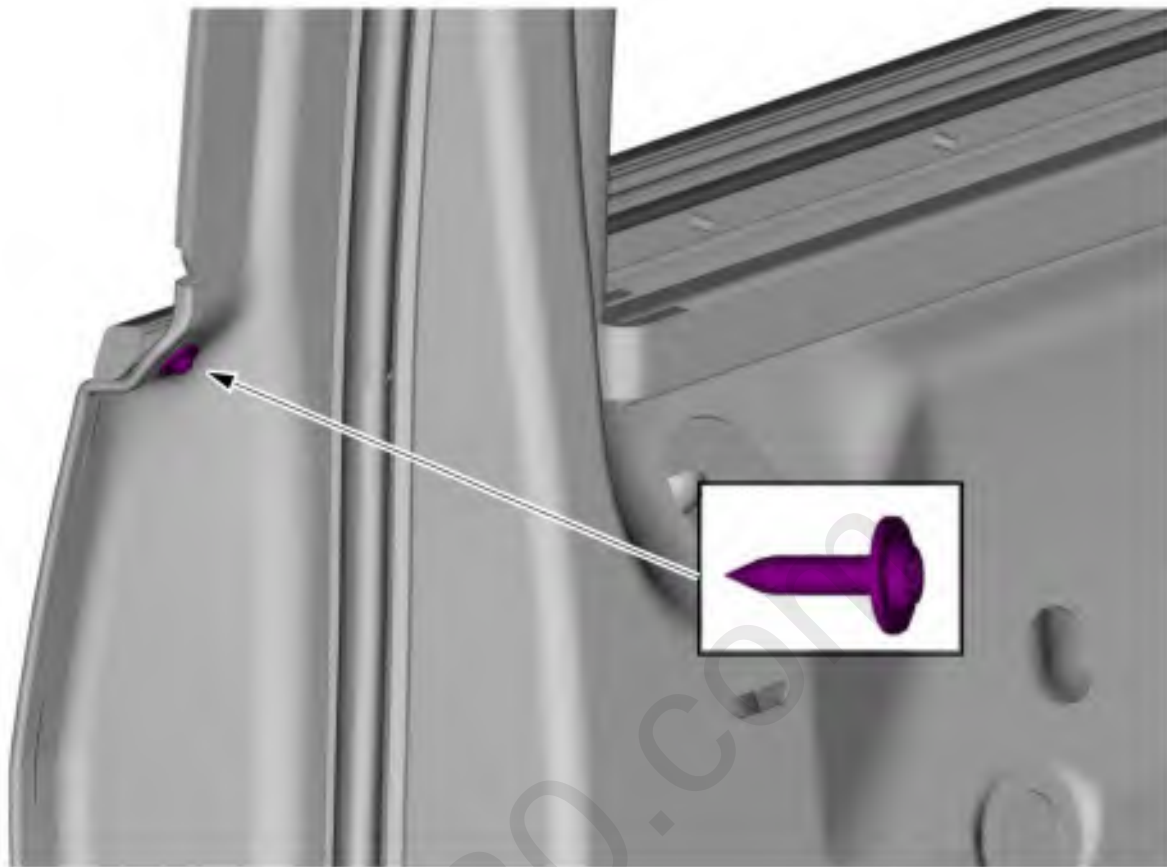


E193283

3. **NOTE:** Use care when removing the moulding to avoid breaking tabs along lower edge of the moulding.


Using a non-marring trim tool, disengage the retainer clips and remove the moulding.

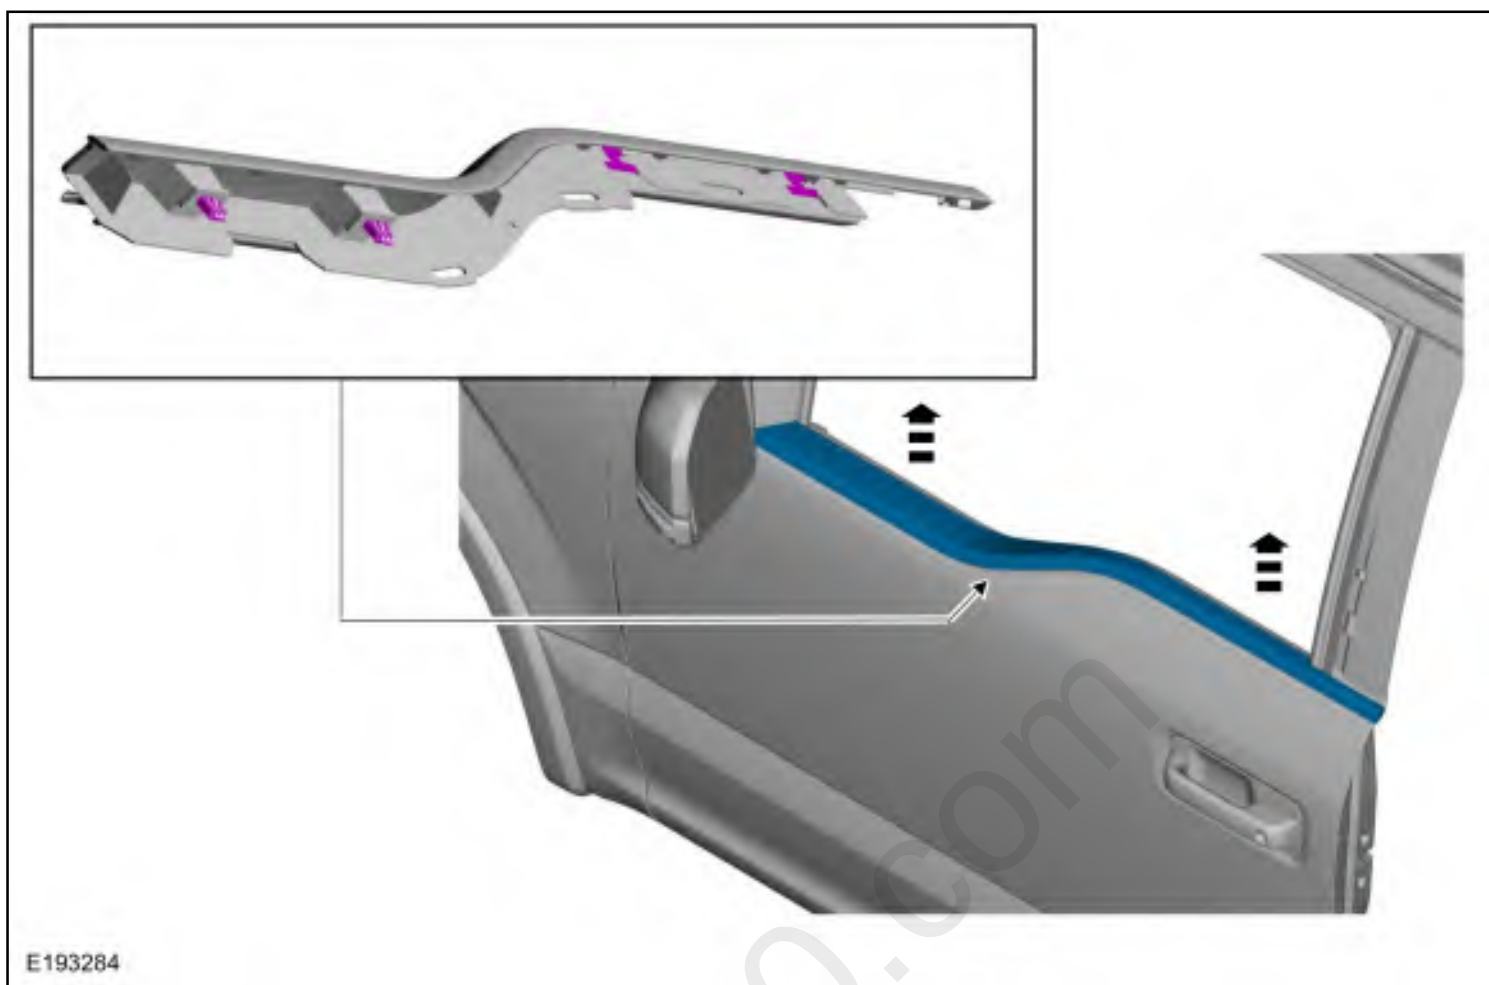

4. Position aside the glass run weatherstrip.

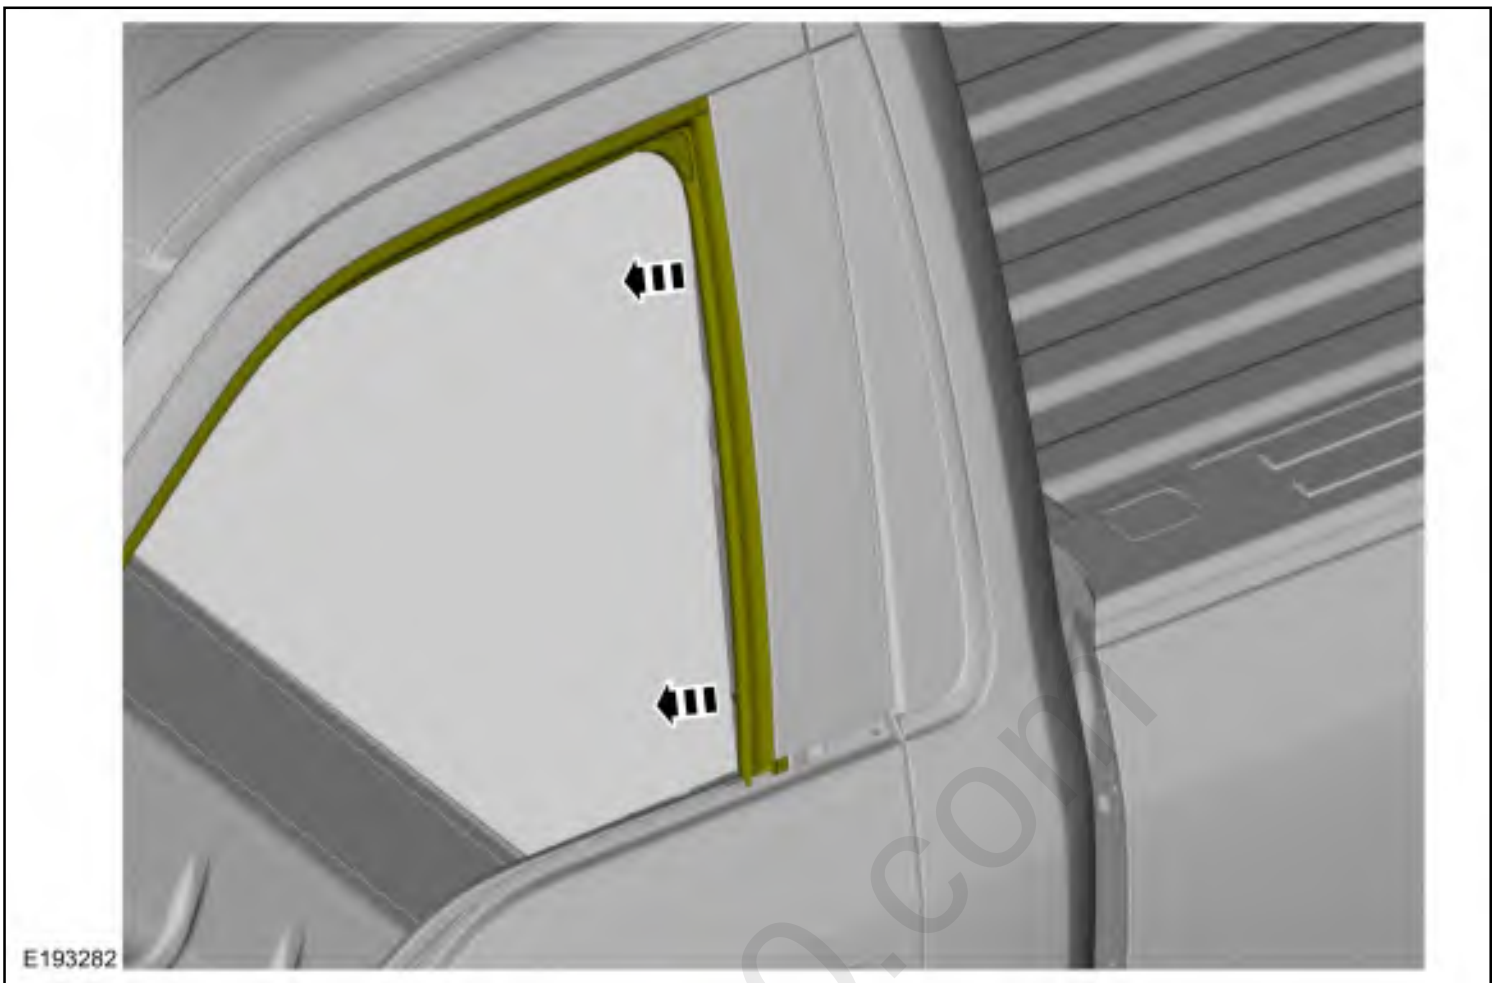


5. Remove the 4 screws from upper door moulding.
Torque: 13 lb.in (1.5 Nm)

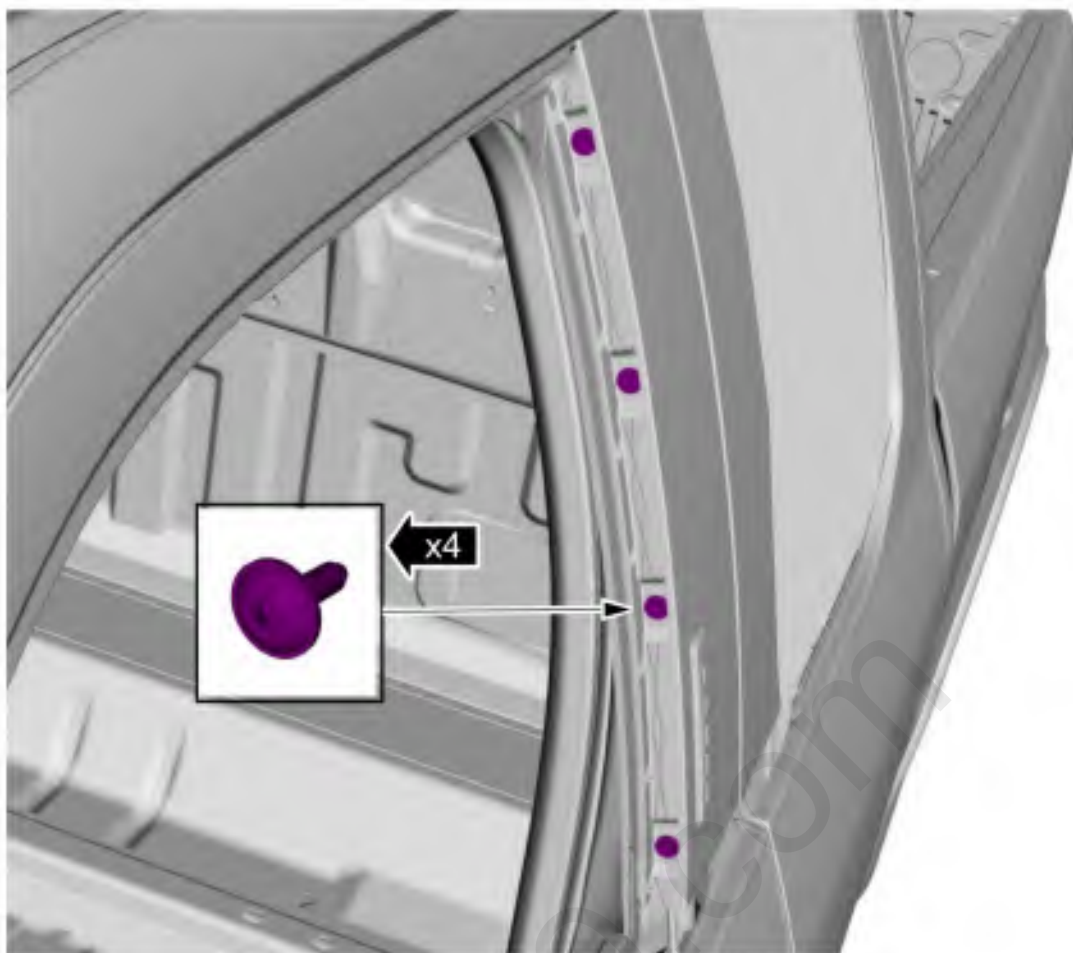

Vehicles With: Keyless Entry

6. **NOTE:** *Position the glass run weatherstrip in channel to allow raising of the door glass.*

Raise the door window glass.

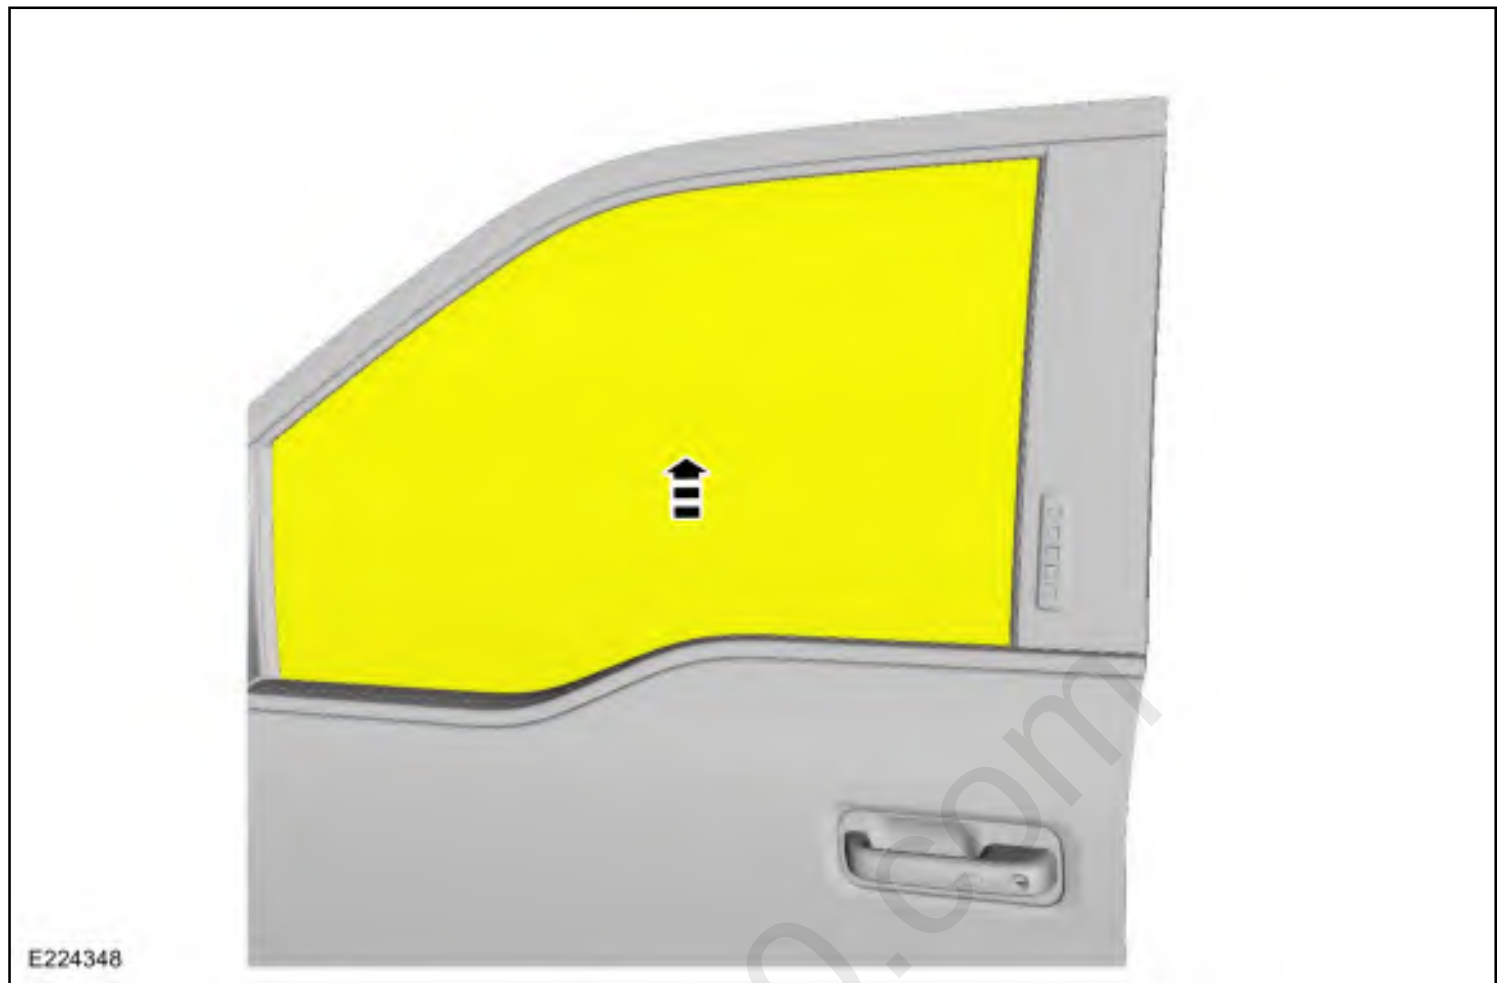


7. Remove the exterior door handle.

Refer to: [Exterior Front Door Handle](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).

8. **NOTE:** *Shown with outer door panel removed for clarity.*


Disconnect the electrical connector and the wiring retainer.

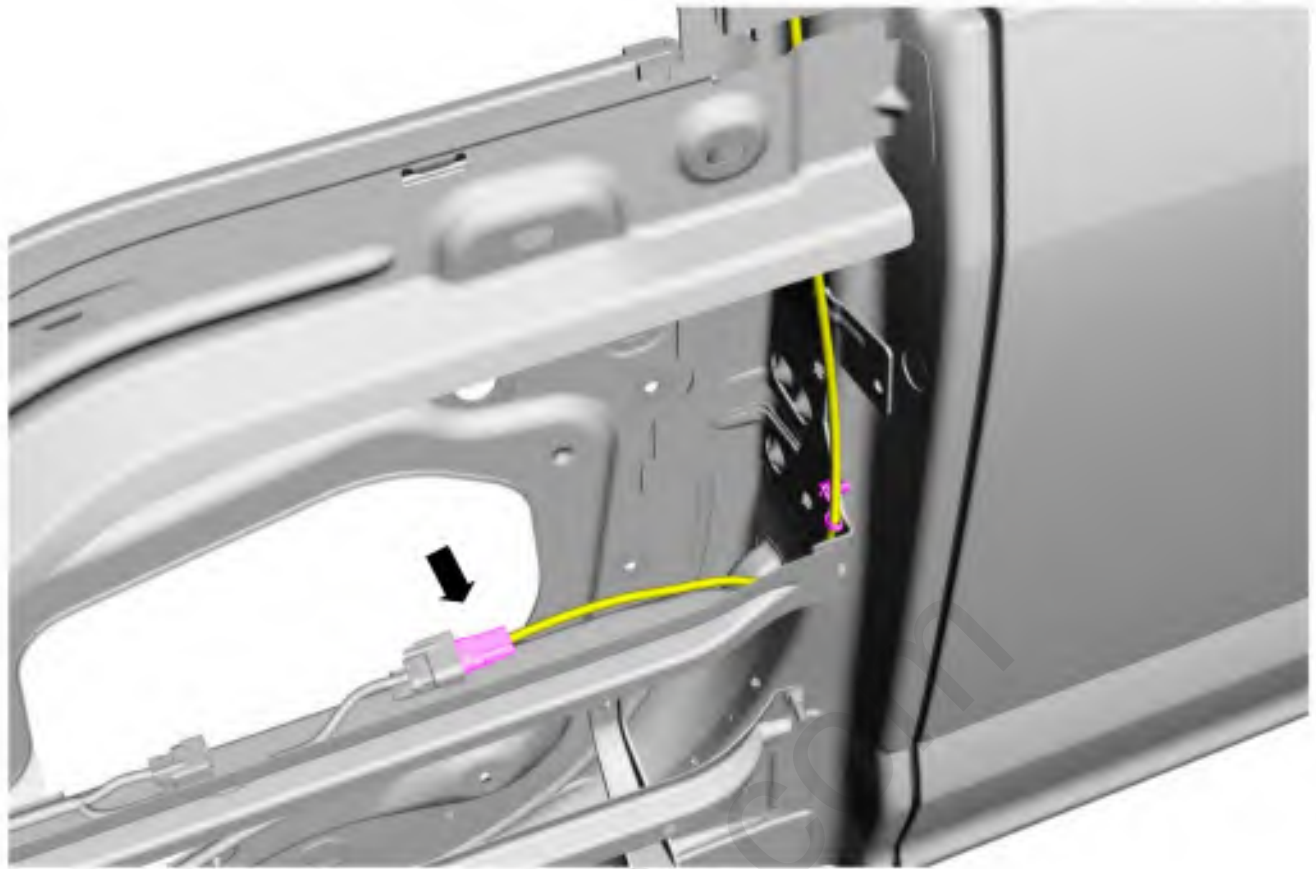

E193286




9. Connect the power window switch (if equipped) and lower the door window glass.
Refer to: [Front Door Window Control Switch - Vehicles With: Front Power Windows](#) (501-11 Glass, Frames and Mechanisms, Removal and Installation).

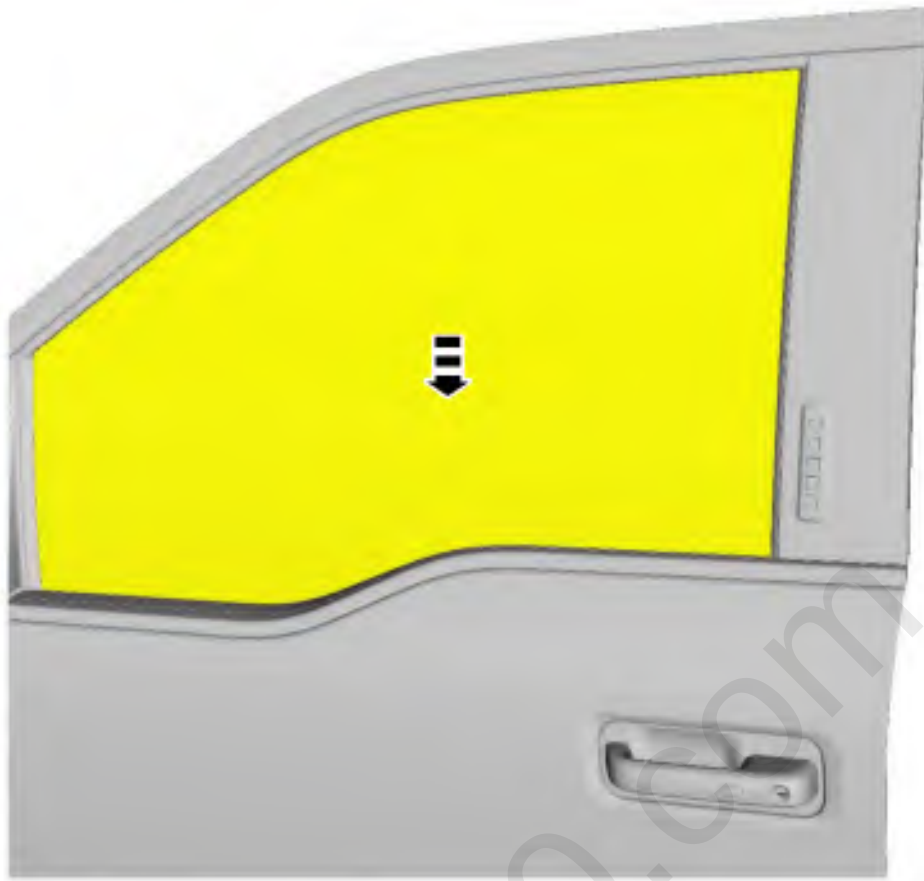

E224347



10. Position aside the glass run weatherstrip.

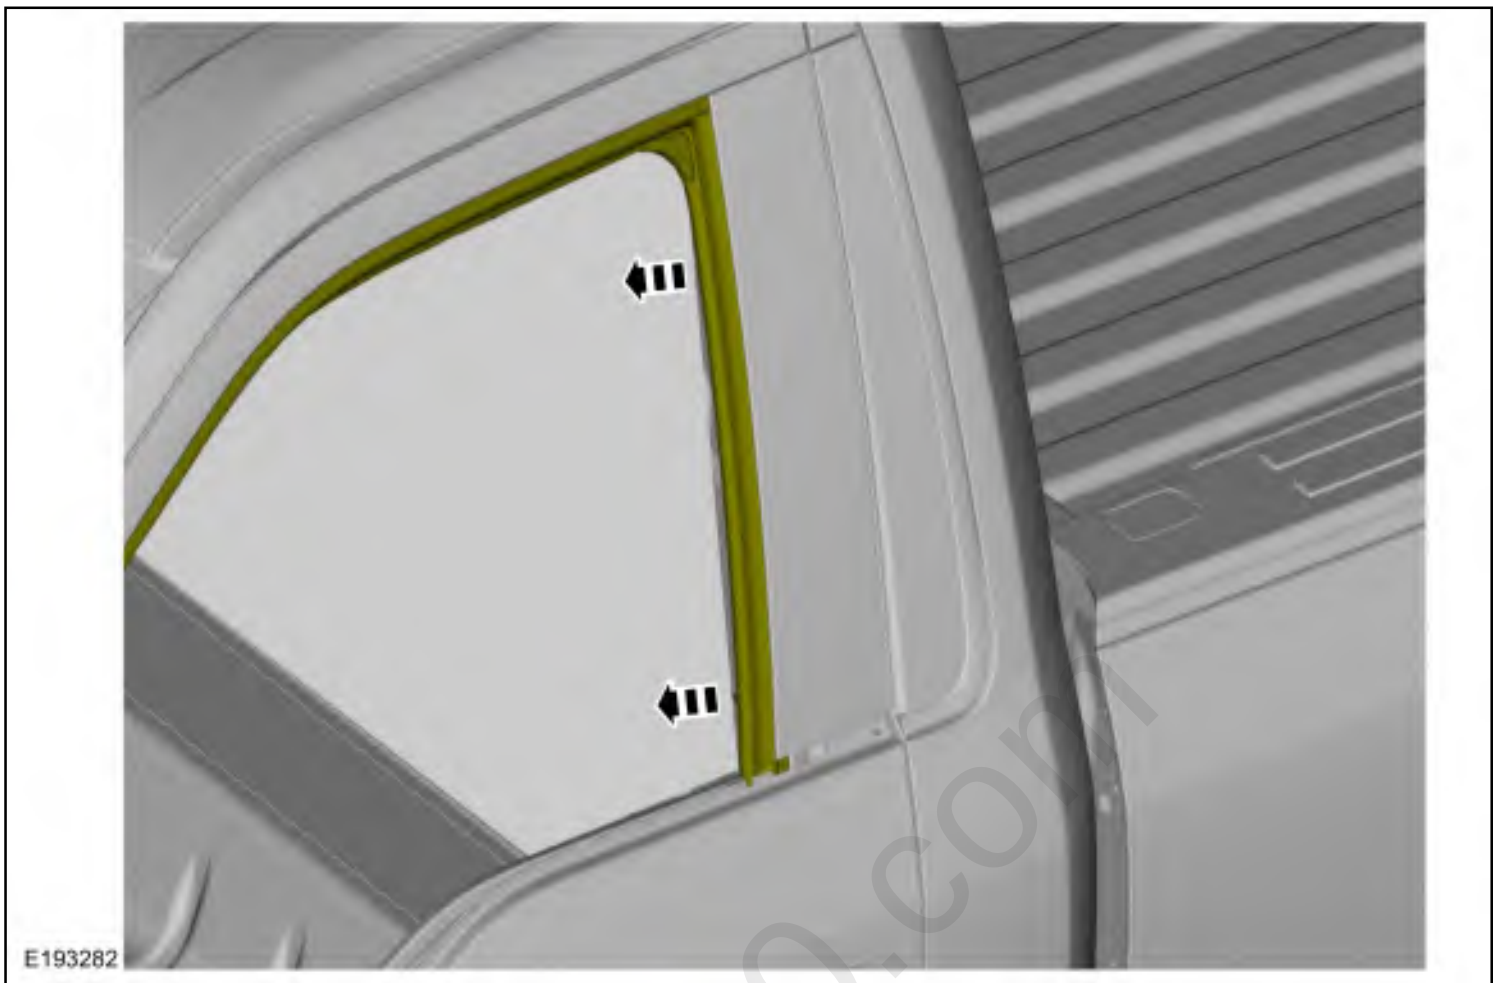

All vehicles


11. Remove the front door upper moulding.



Vehicles With: Keyless Entry

12. **NOTE:** *The keypad actuator can be serviced separately from the moulding if required.*

Depress the retainer tabs to remove the keypad actuator.

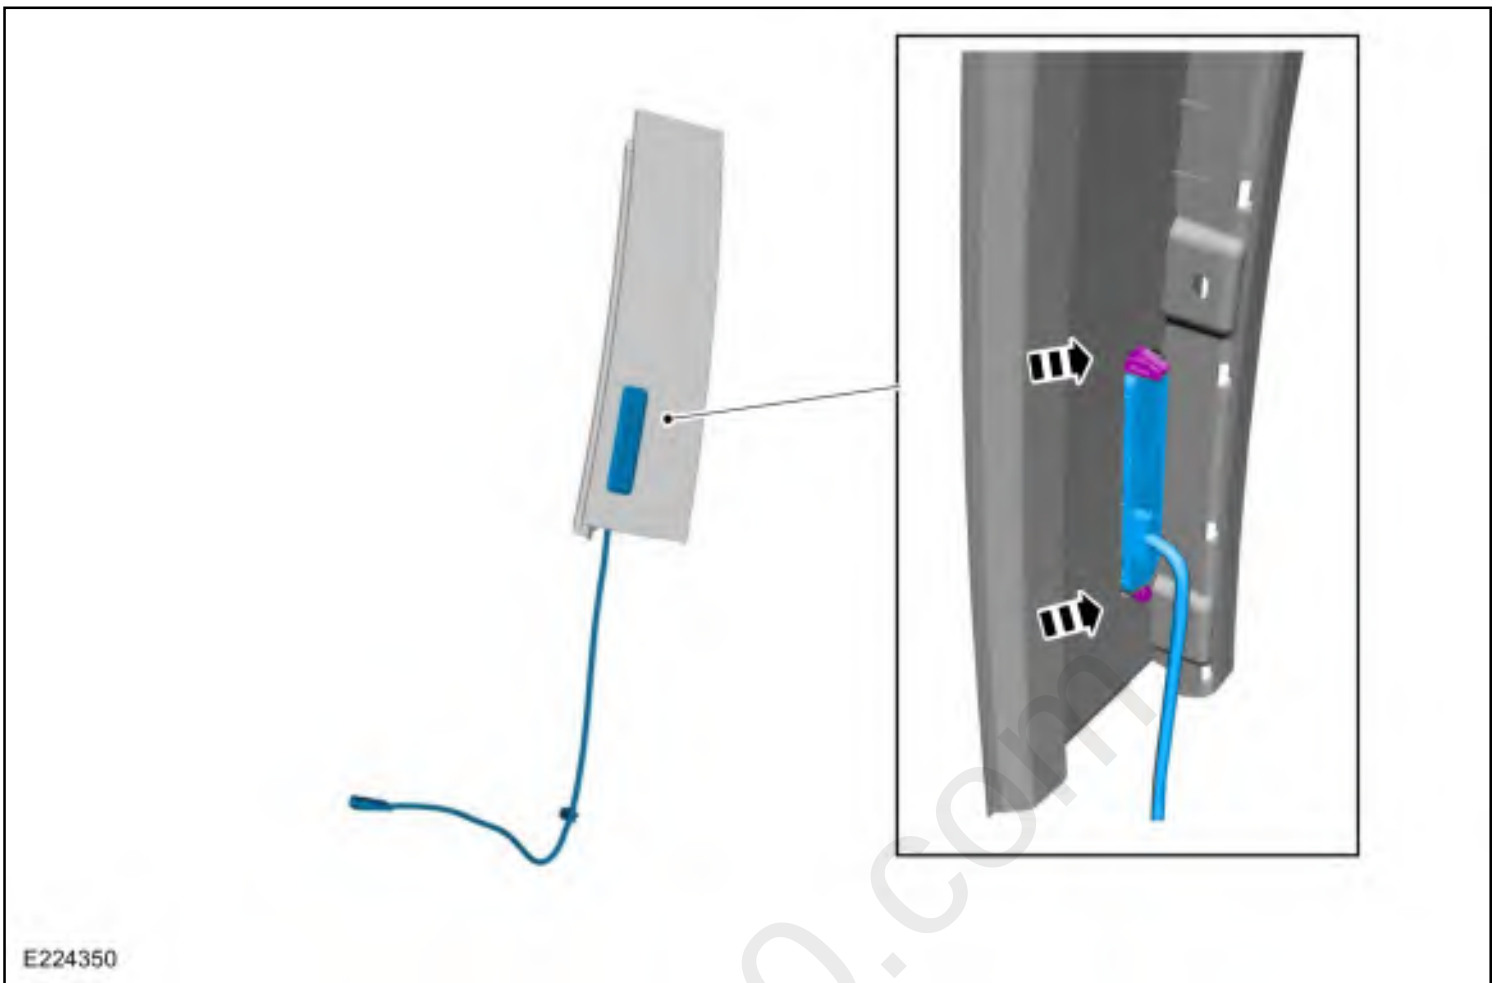

Installation

1. To install, reverse the removal procedure.
2. If reusing the existing front door upper moulding, install new foam tape (obtain locally) on the moulding.