

Running Board Control Module (RBM)

Special Tool(s) / General Equipment

Interior Trim Remover


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Release the clips and remove the rear cup holder.
Use the General Equipment: Interior Trim Remover




2. Remove the screws, release the clips and position the floor console rear trim panel out.
Use the General Equipment: Interior Trim Remover
Torque: 22 lb.in (2.5 Nm)

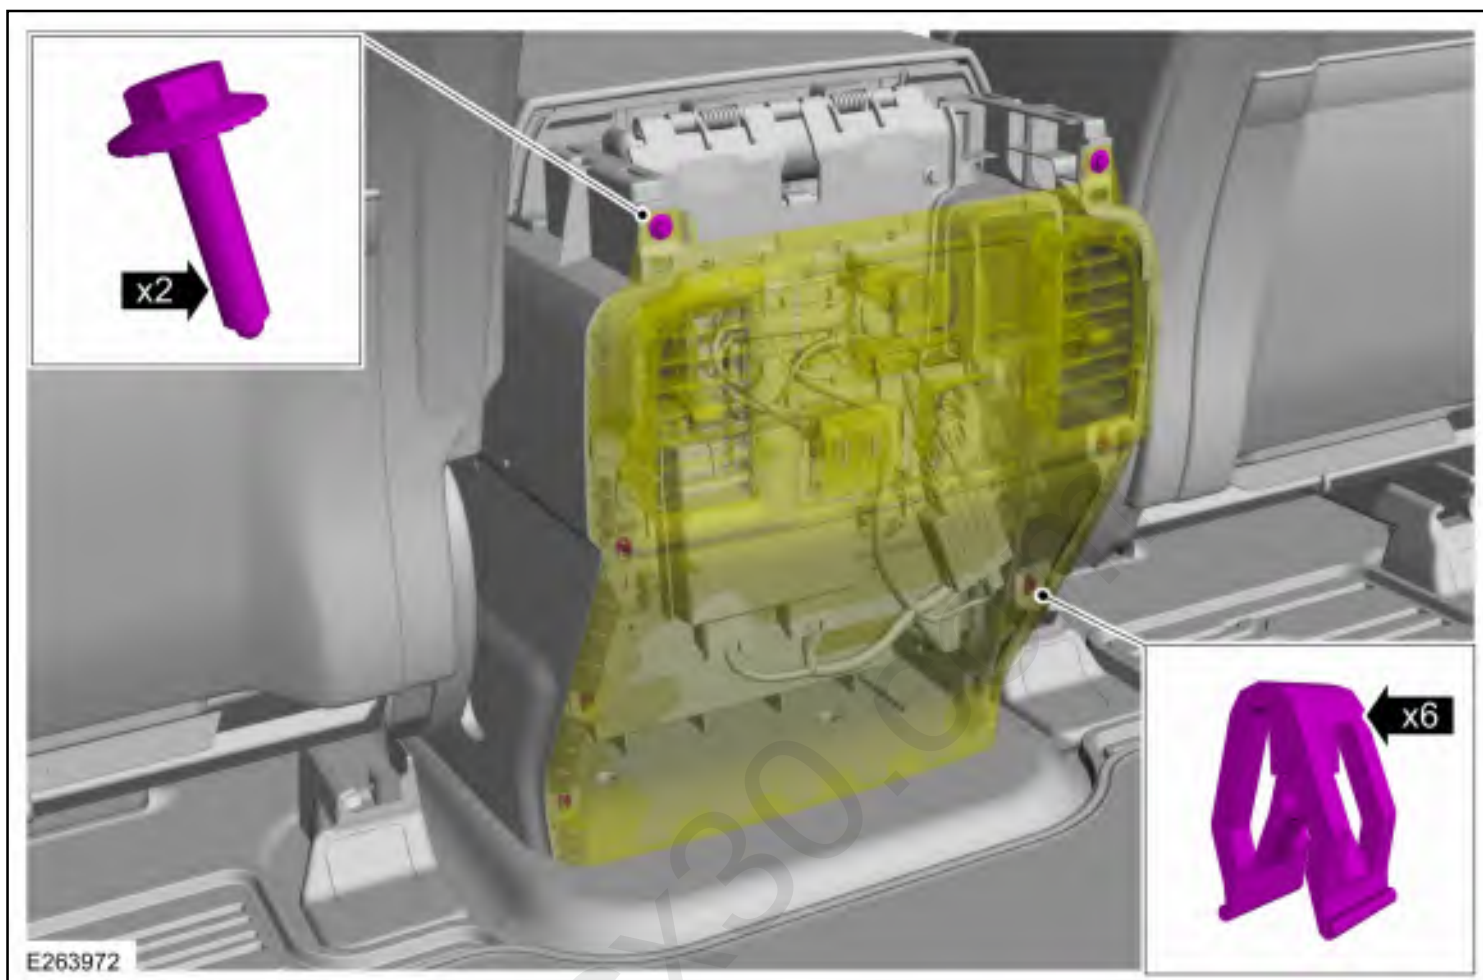

3. Disconnect the PRB module electrical connectors.

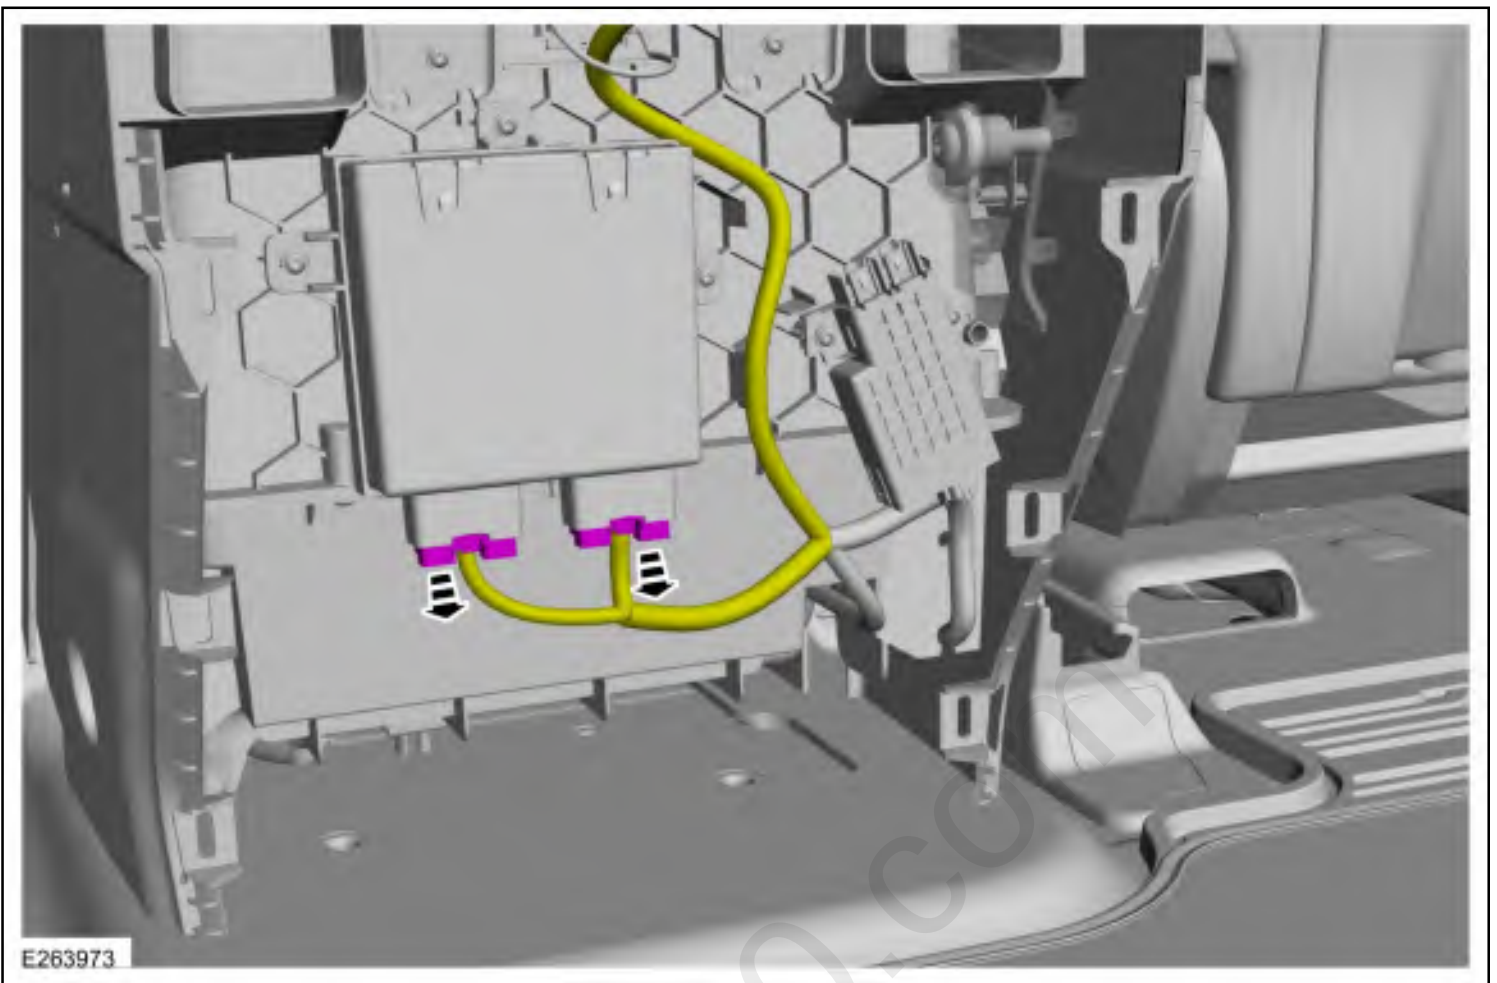

4. Remove the screws and the PRB module.

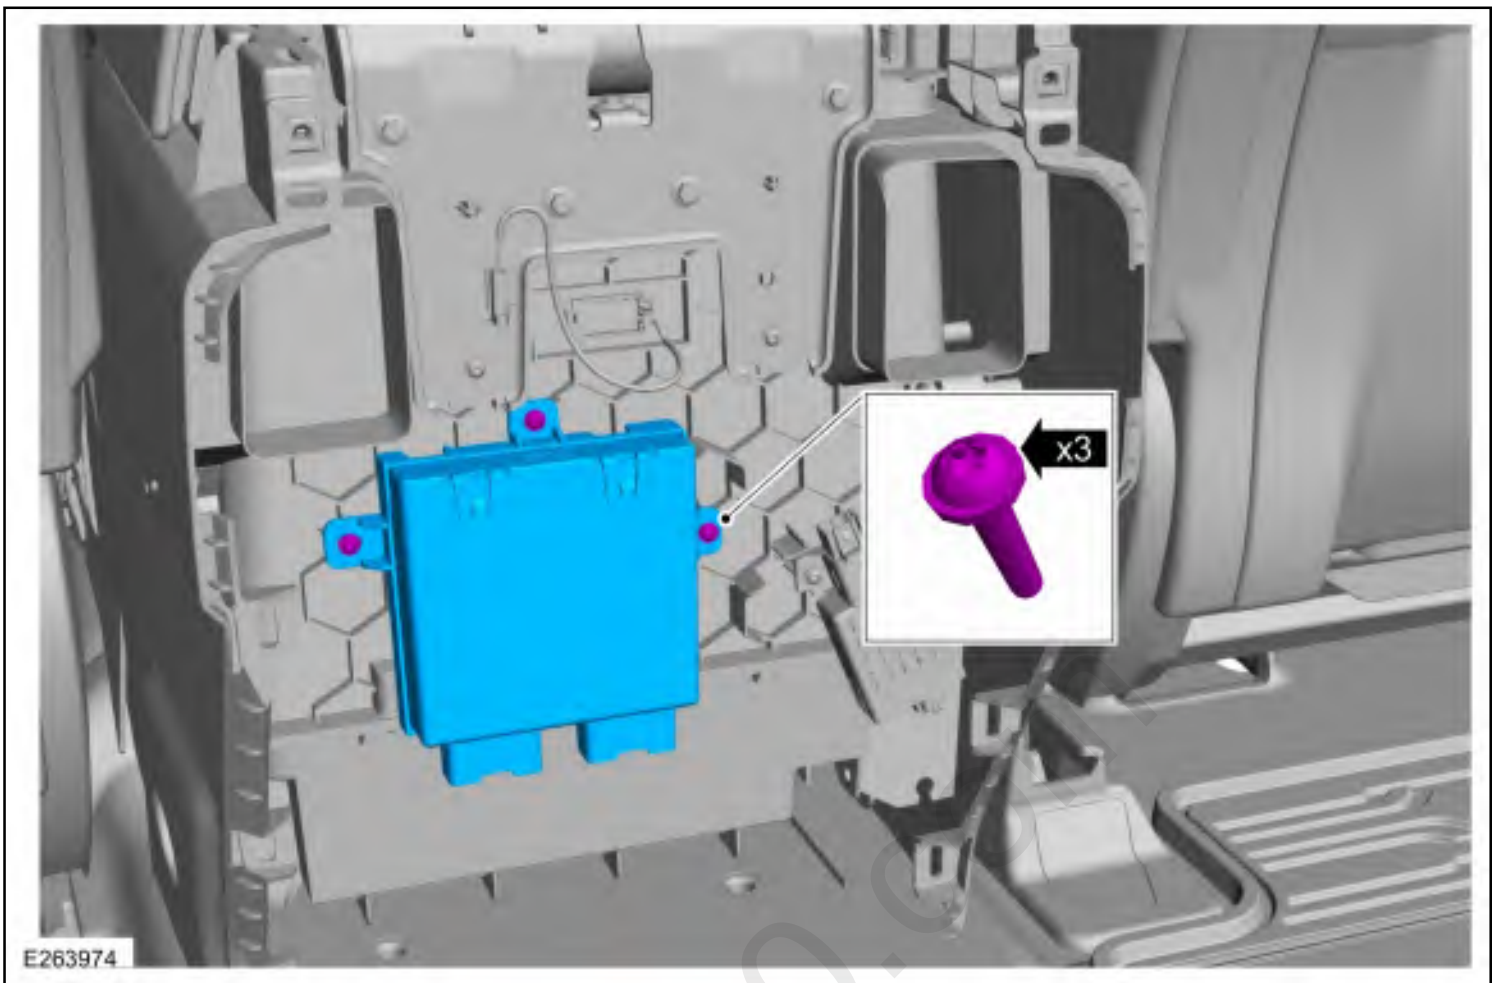

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company