


## Radiator Grille - Raptor

### Removal


**NOTE:** Removal steps in this procedure may contain installation details.

1. Remove the push pin retainers and remove the air deflector.

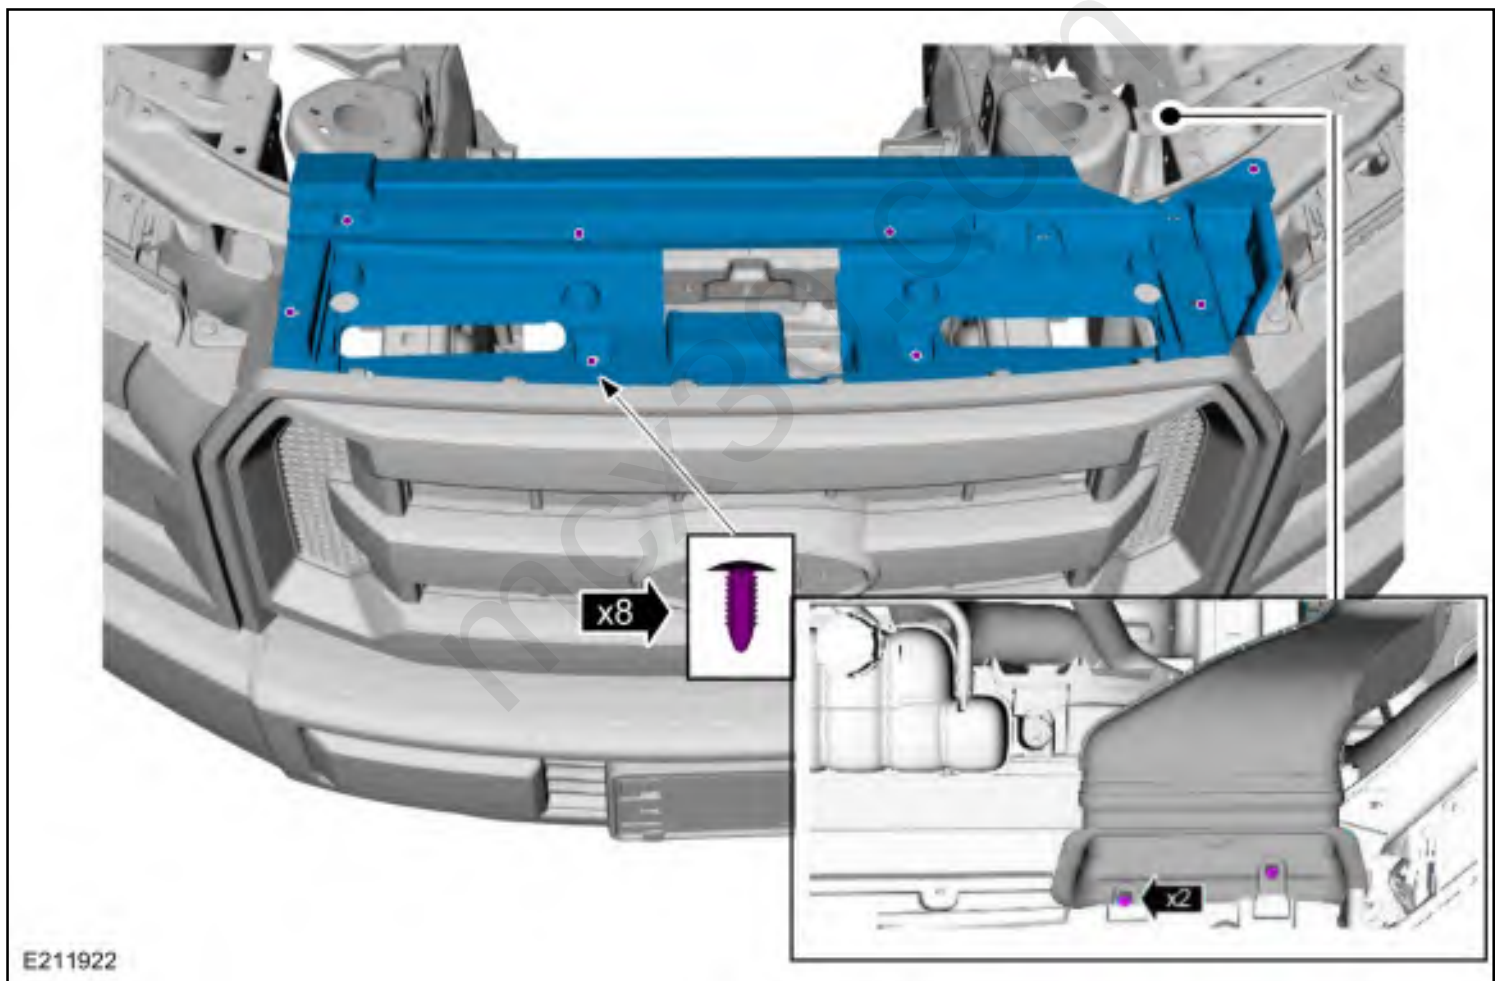

2. **NOTE:** As equipped.

Disconnect the electrical connectors and washer hose.

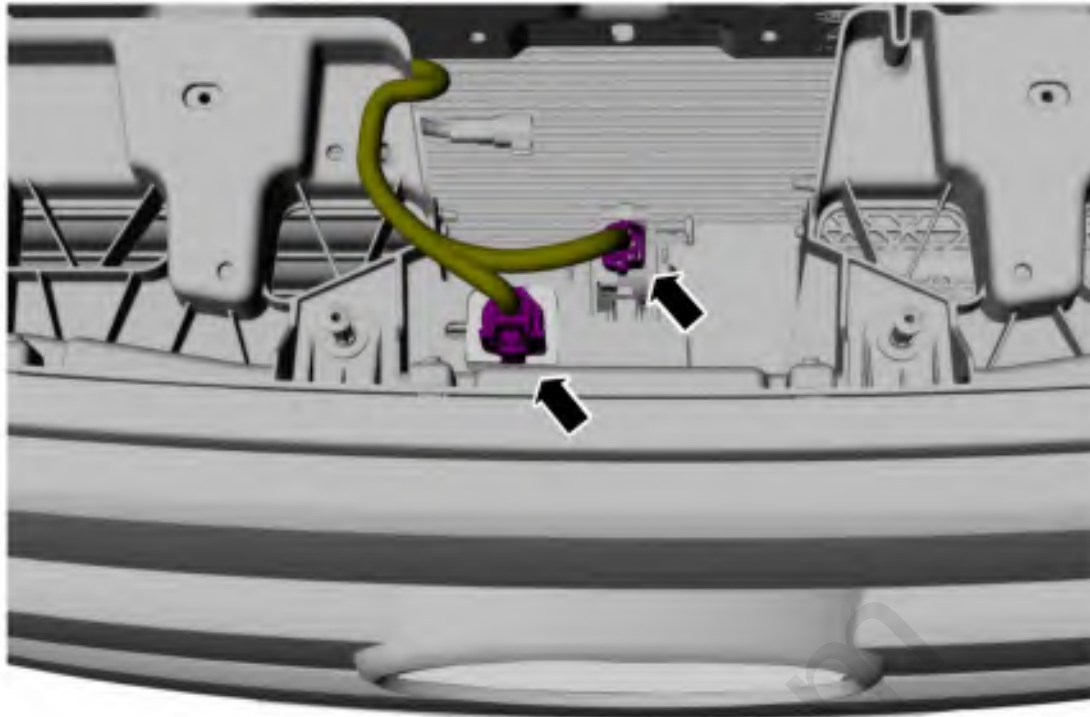

3. Raise the vehicle on a hoist.


Refer to: [Jacking and Lifting - Overview](#) (100-02 Jacking and Lifting, Description and Operation).

4. **NOTE:** Vehicles equipped with fender mouldings.


*On both sides.*

Remove the 2 screws and release the 3 front fender moulding retainers and position the fender moulding out.

*Torque:* 22 lb.in (2.5 Nm)

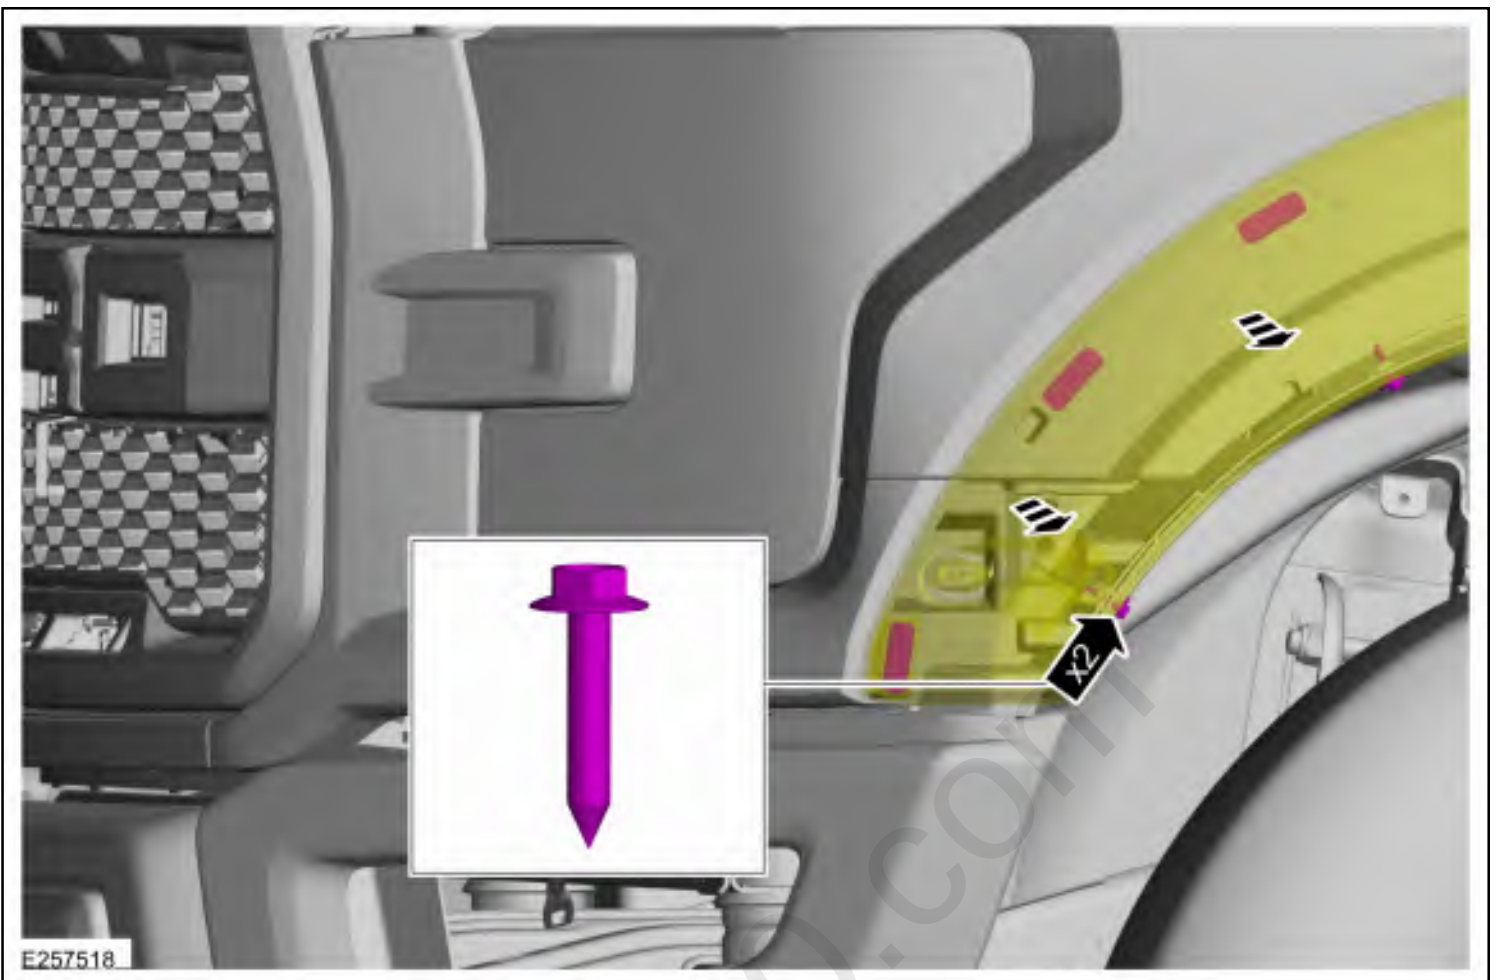


5. Remove the pin-type retainer.

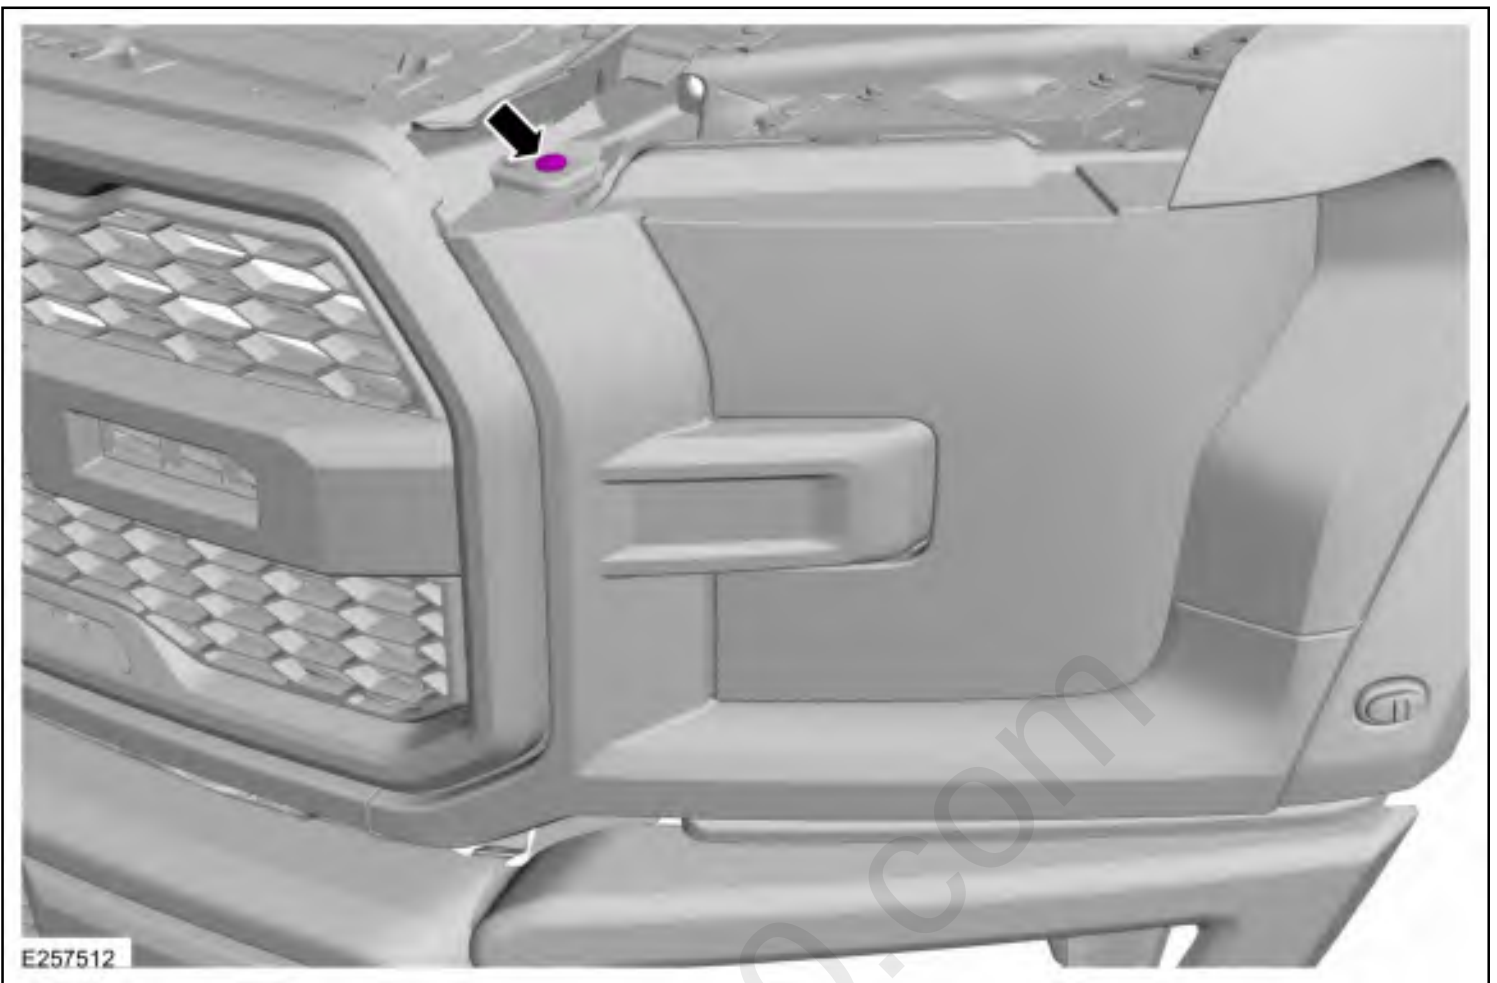


6. Remove the headlamp assembly trim panel.
  - Starting at the inner edge, release the headlamp assembly trim panel clips.
  - Starting at the outer edge, release the headlamp assembly trim panel.
  - Using a flat-blade screwdriver release the locking tabs and remove the headlamp trim panel.



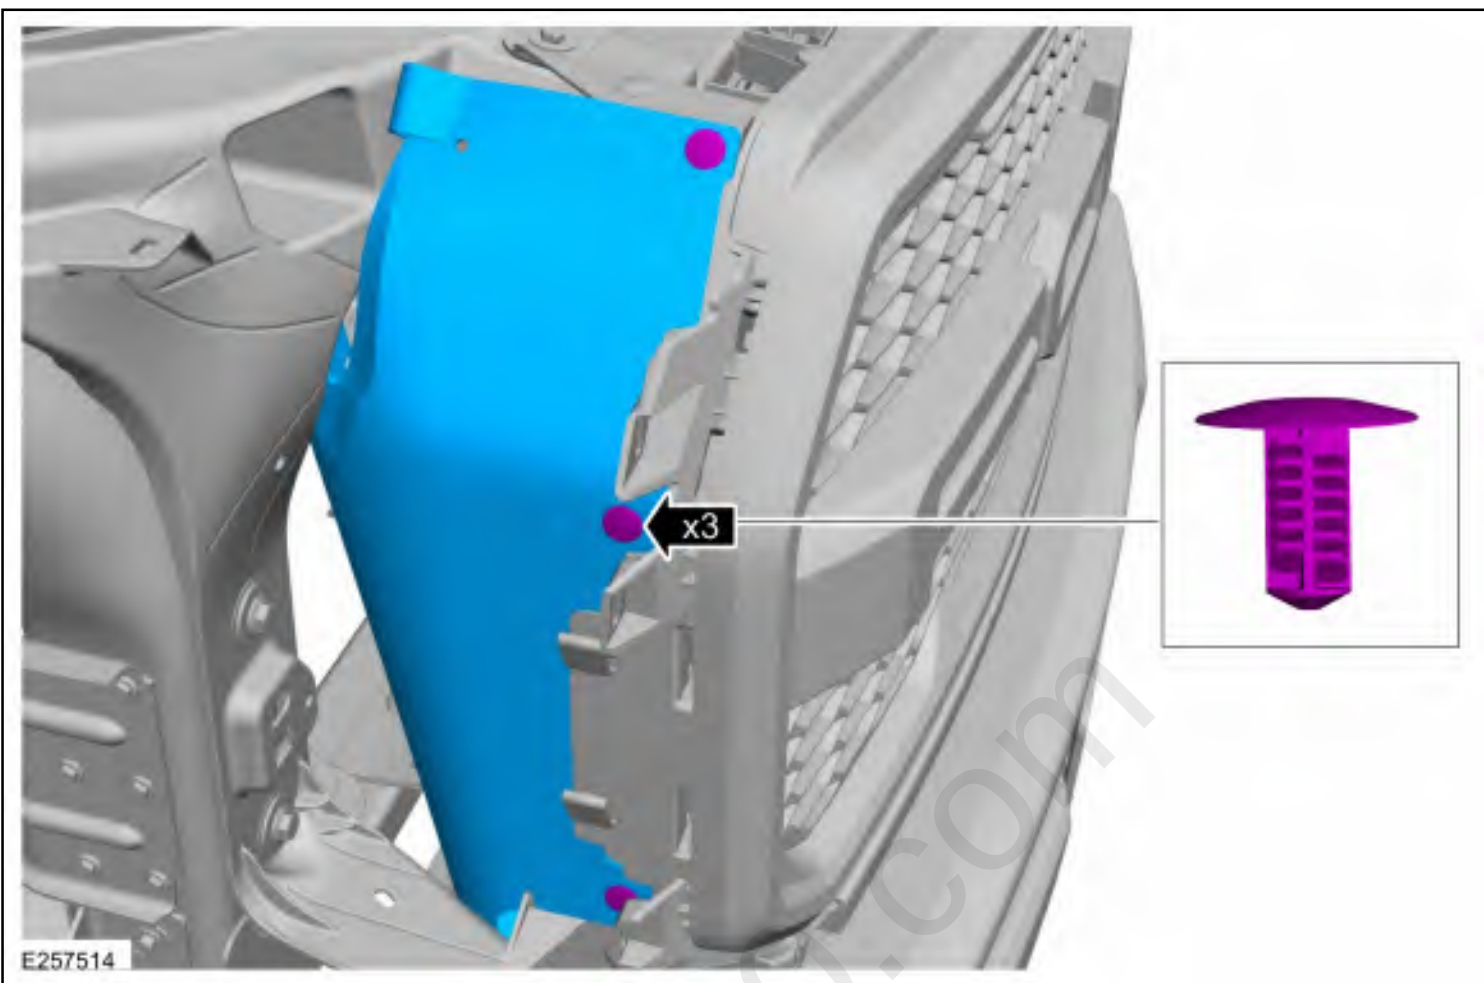


8. Remove the upper screws.  
*Torque: 42 lb.in (4.8 Nm)*

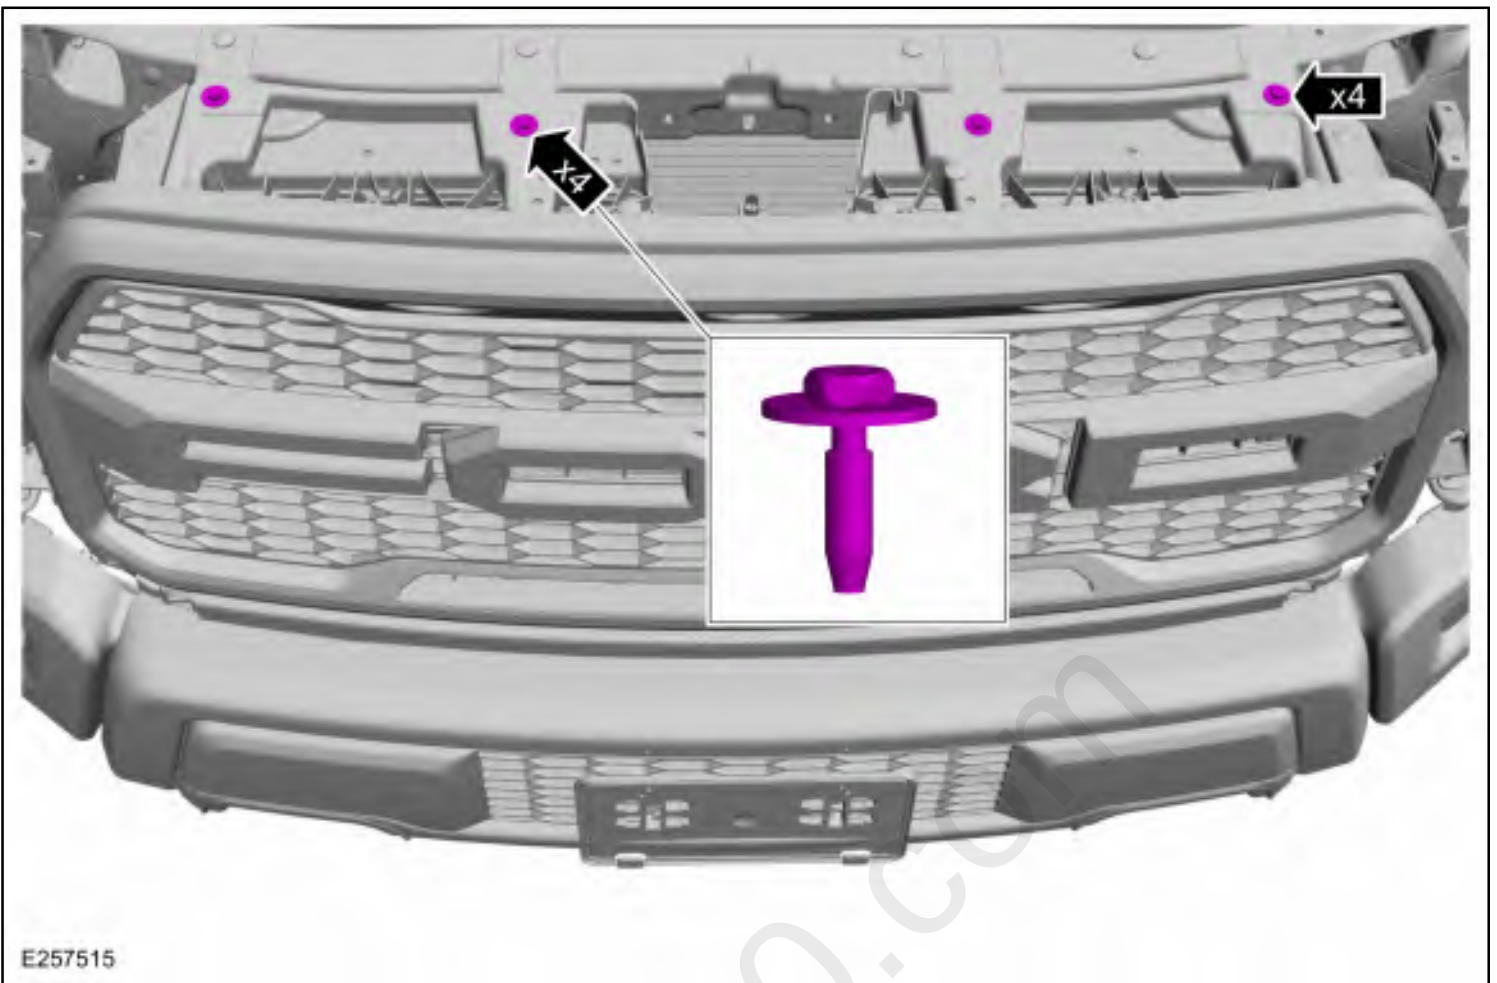

9. Remove the screw on the RH and LH side.  
*Torque: 155 lb.in (17.5 Nm)*



- Pull up to disengage the locating pins along the top of the grille.
- Pull forward on center of the grill to remove.

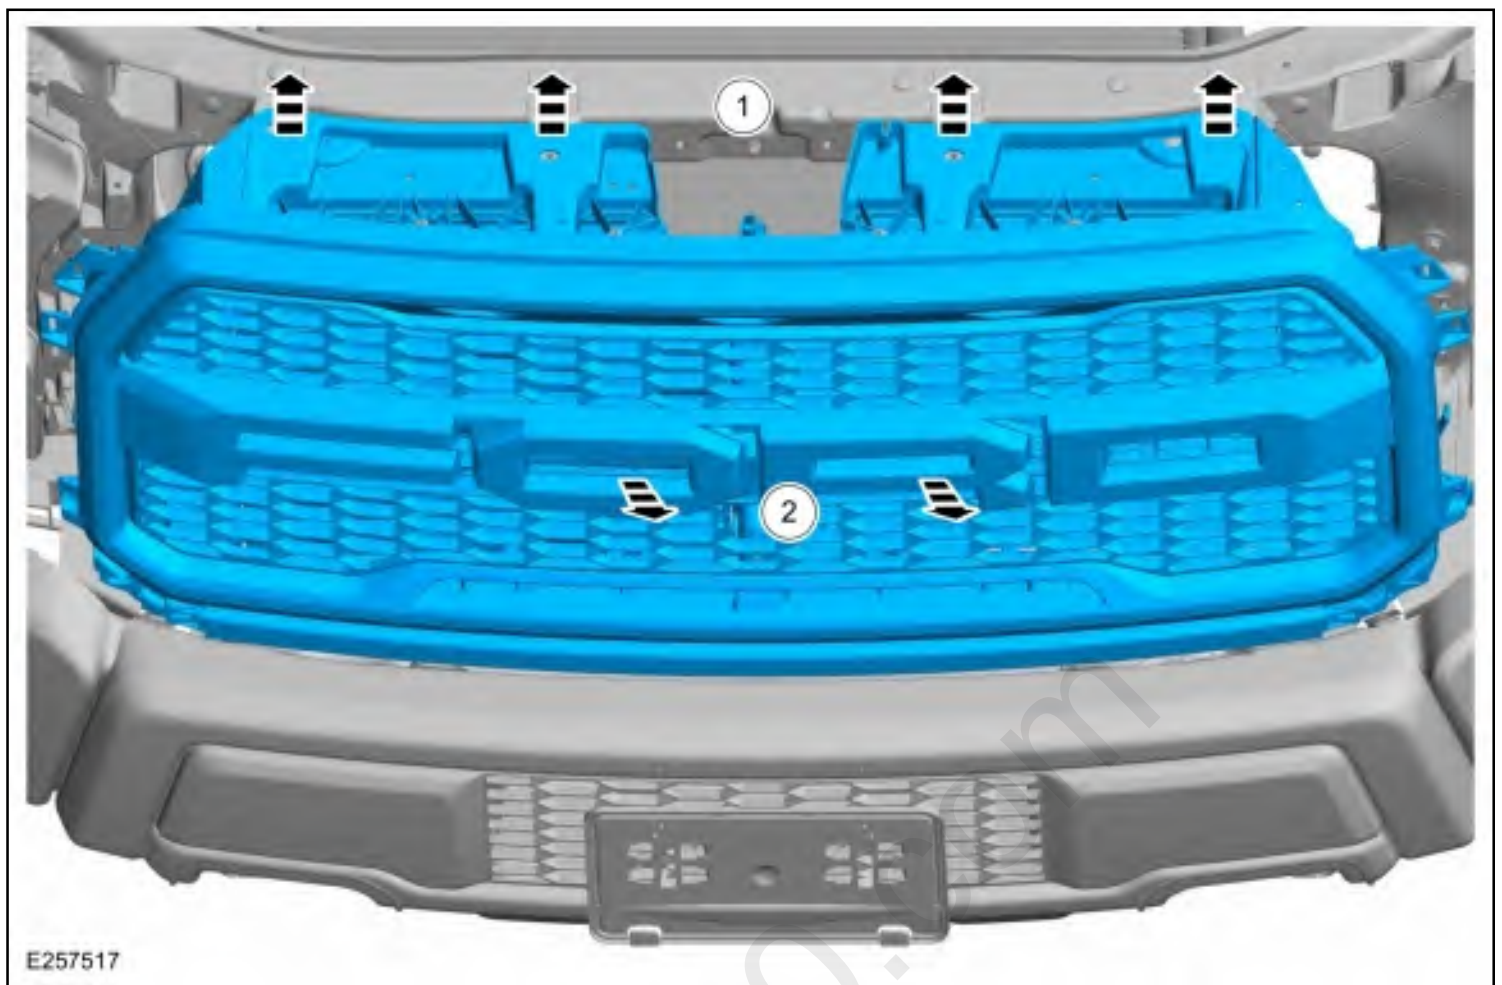

## Installation

1. To install, reverse the removal procedure.
2. If the radiator grille is being replaced, transfer parts as required.  
Refer to: [Active Grille Shutter](#) (501-02 Front End Body Panels, Removal and Installation).
3. If installing a new front parking aid camera, it is necessary to configure the new camera.  
Refer to: [Front Parking Aid Camera](#) (413-13B Parking Aid - Vehicles With: Parking Aid Camera, Removal and Installation).