


Rear Quarter Panel Moulding - Raptor

Removal


NOTE: Removal steps in this procedure may include installation details.

1. Remove the screws.
Torque: 10 lb.in (1.1 Nm)

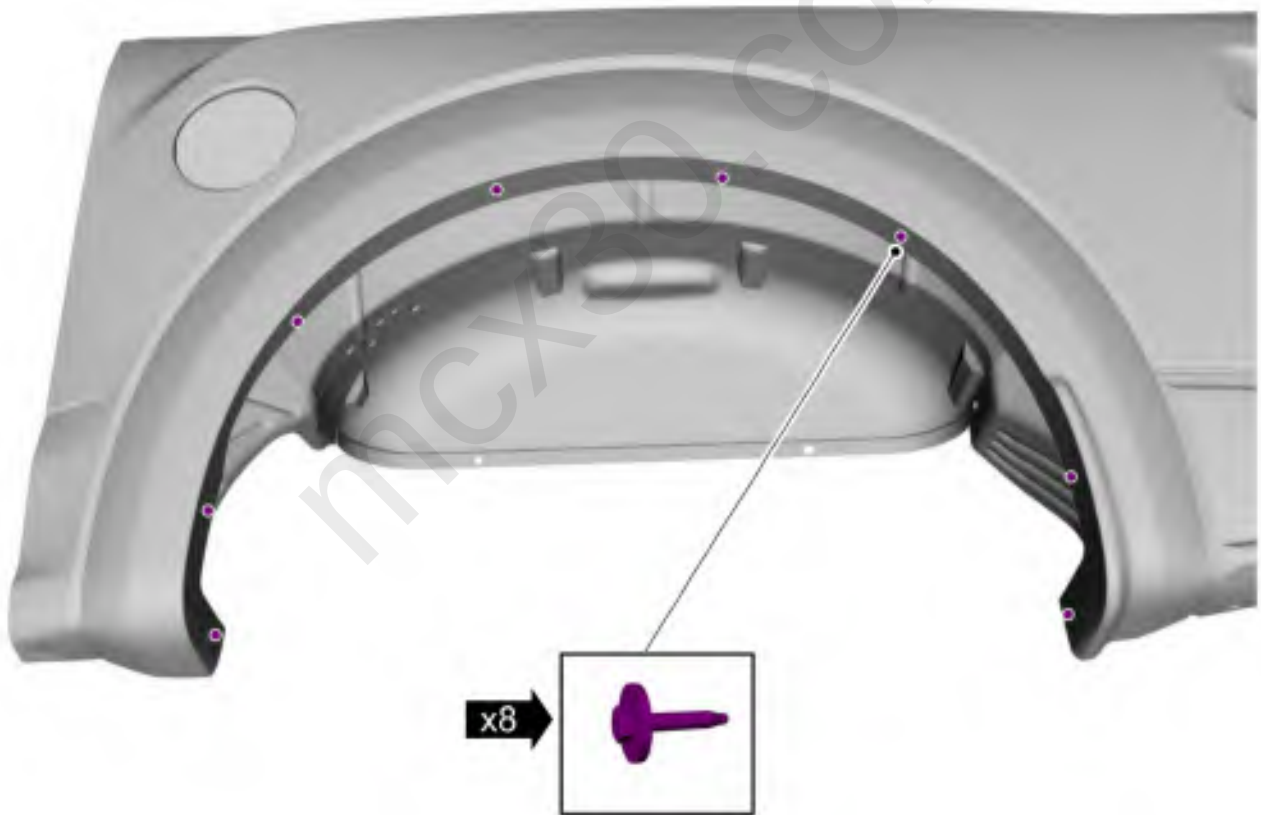


E243940

2. Using a non-marring trim tool, detach the retainers and remove the moulding.

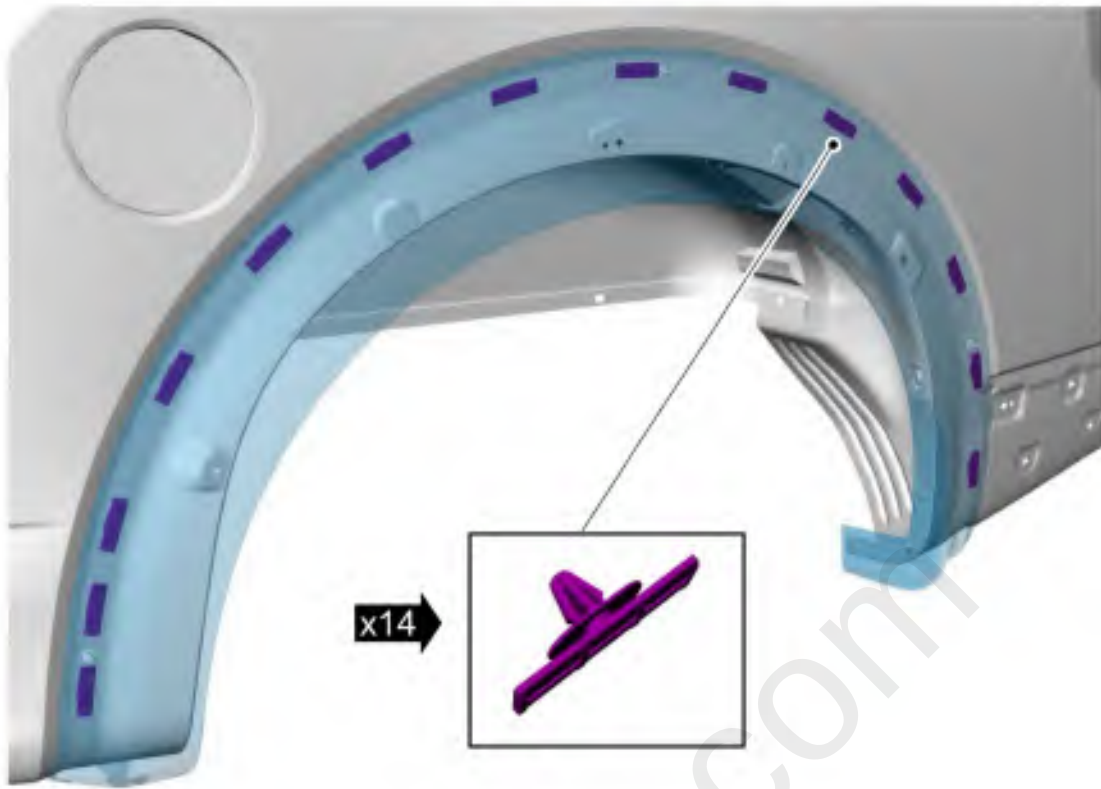

E243941


3. Using a non-marring trim tool, detach the pushpins.

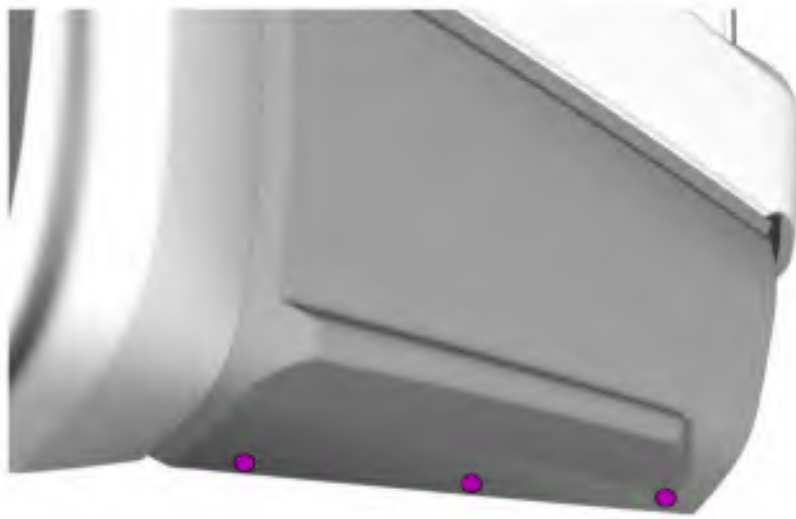

E243942

4. **NOTICE:** Compress the retainers from the inside of the quarter panel using an 8 mm socket to compress clip tangs to prevent damage to the moulding.

Using a non-marring trim tool, detach the retainers and remove the moulding.

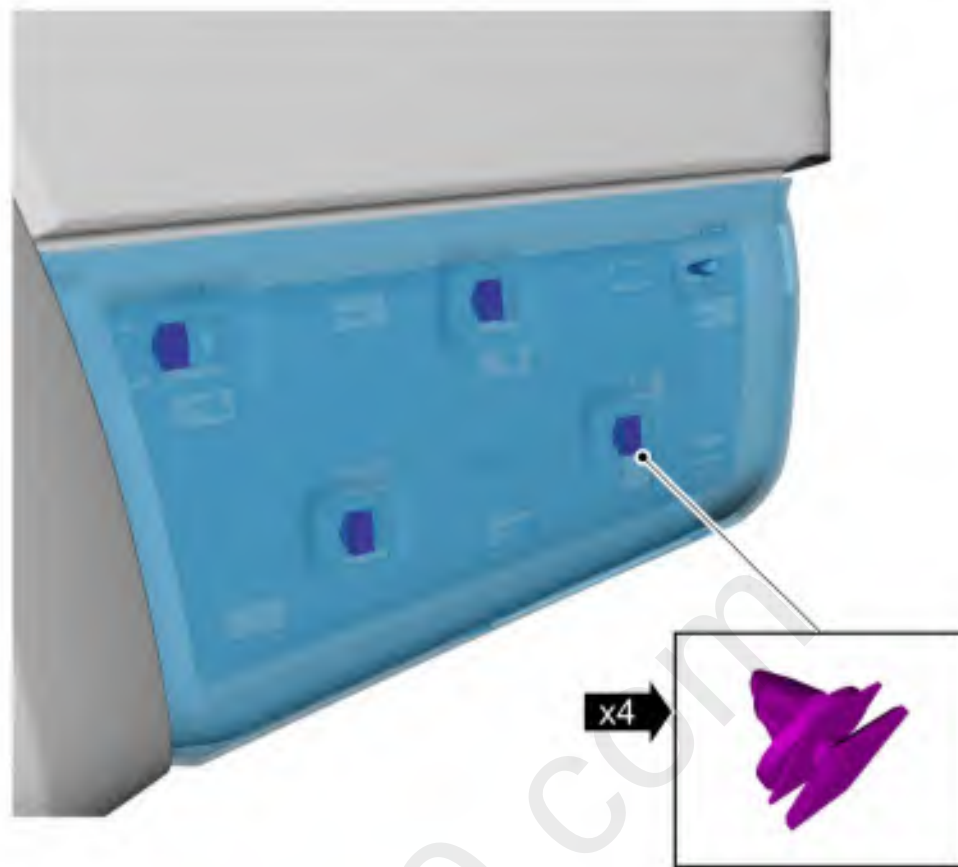

E243943



Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company