


Power Running Board (PRB) Motor

Removal

NOTE: Removal steps in this procedure may contain installation details.

NOTE: The power running board motor and drive bracket are serviced as an assembly.

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: [Jacking and Lifting - Overview](#) (100-02 Jacking and Lifting, Description and Operation).
2. Disconnect the electrical connector.

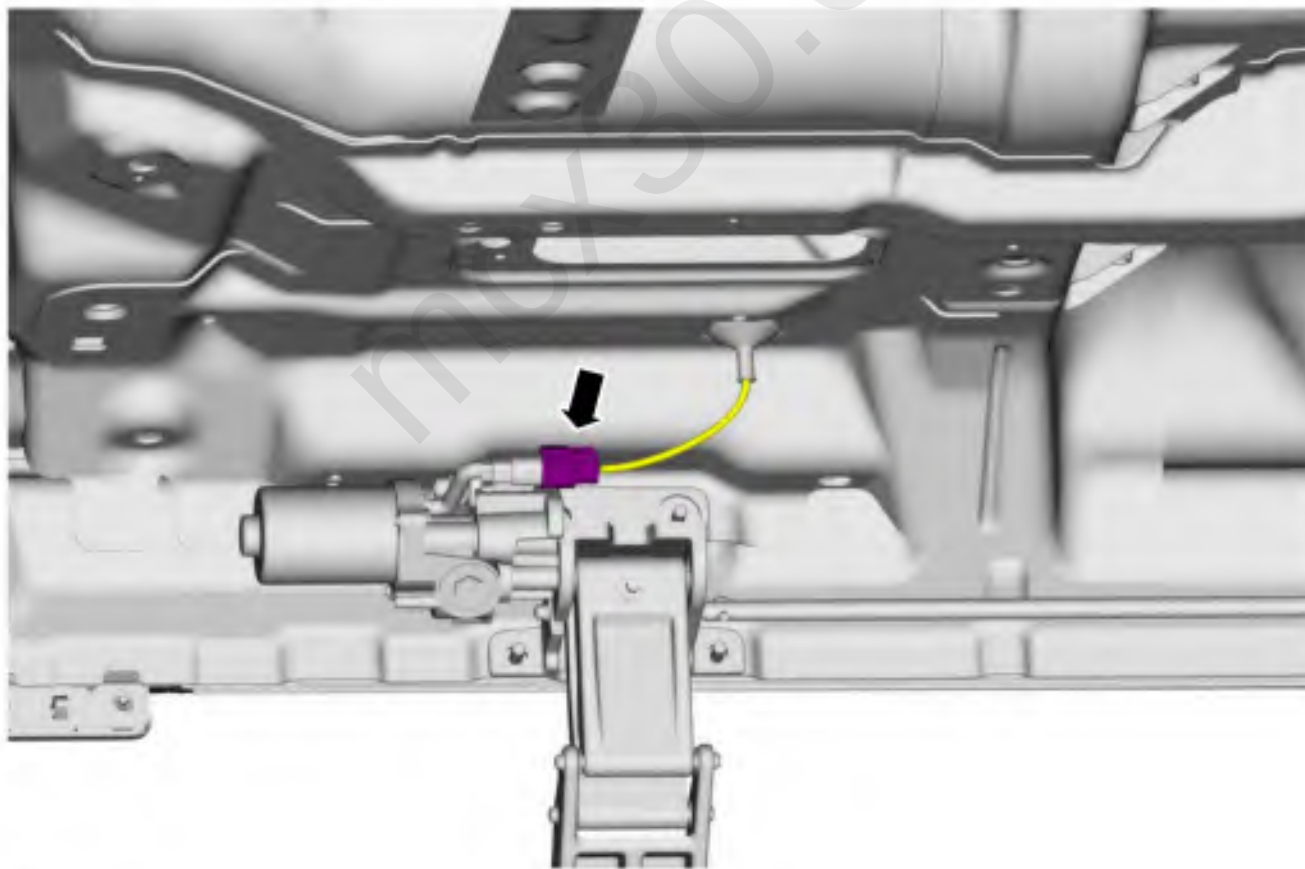


E193254



3. **NOTE:** Support the running board with a jackstand.


Remove the 2 screws.

Torque: 16 lb.ft (22 Nm)

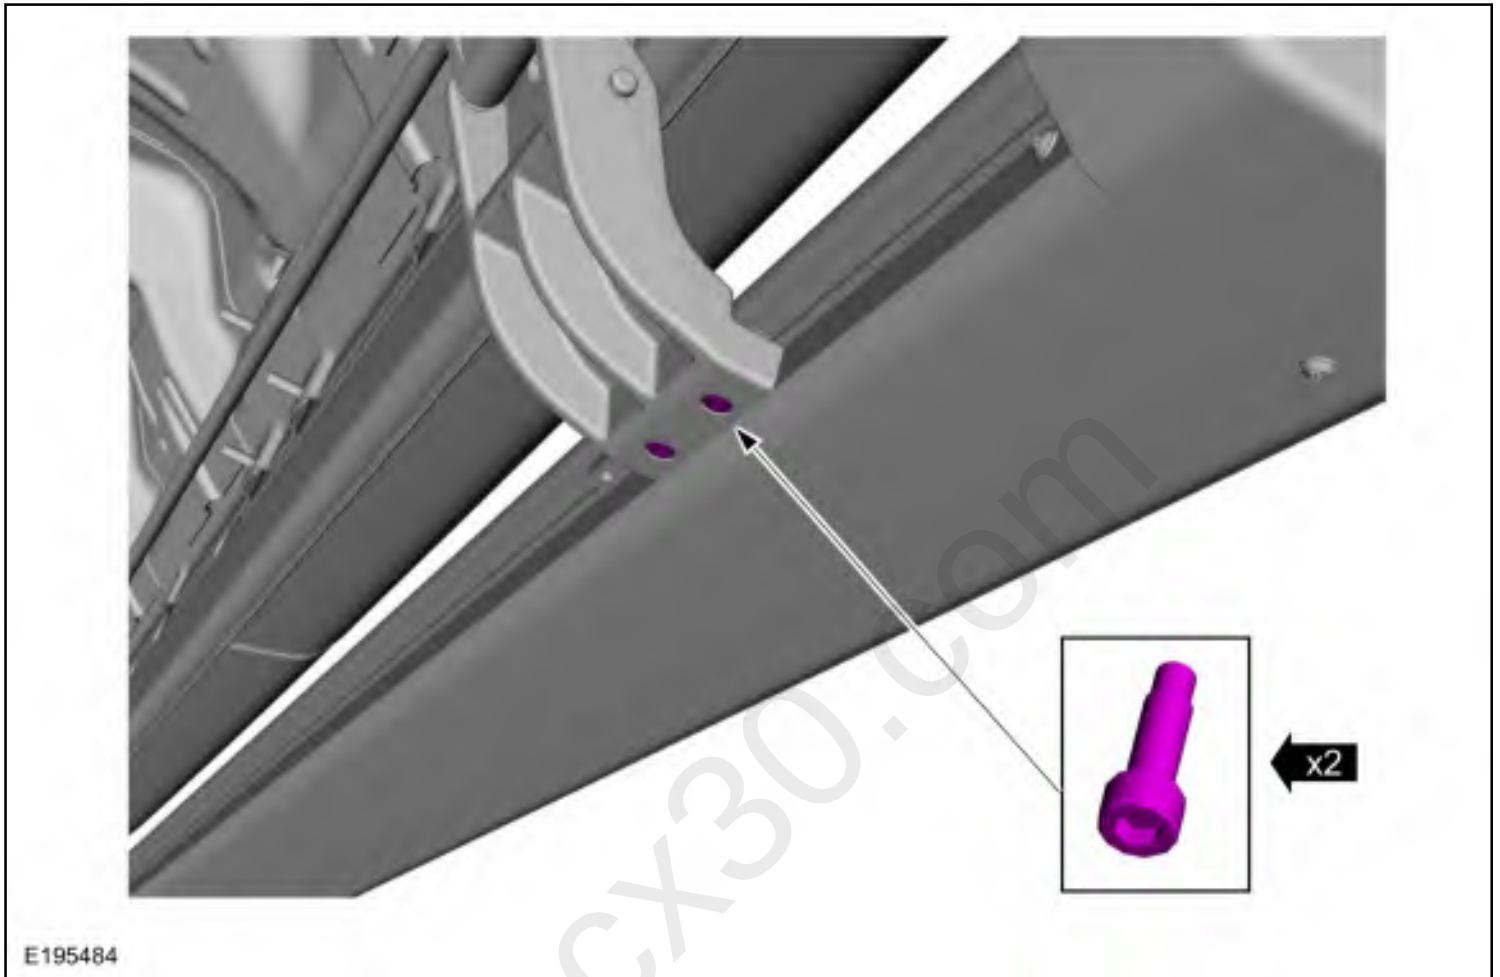


4. Remove the 3 nuts and 1 screw.

Torque: 16 lb.ft (22 Nm)

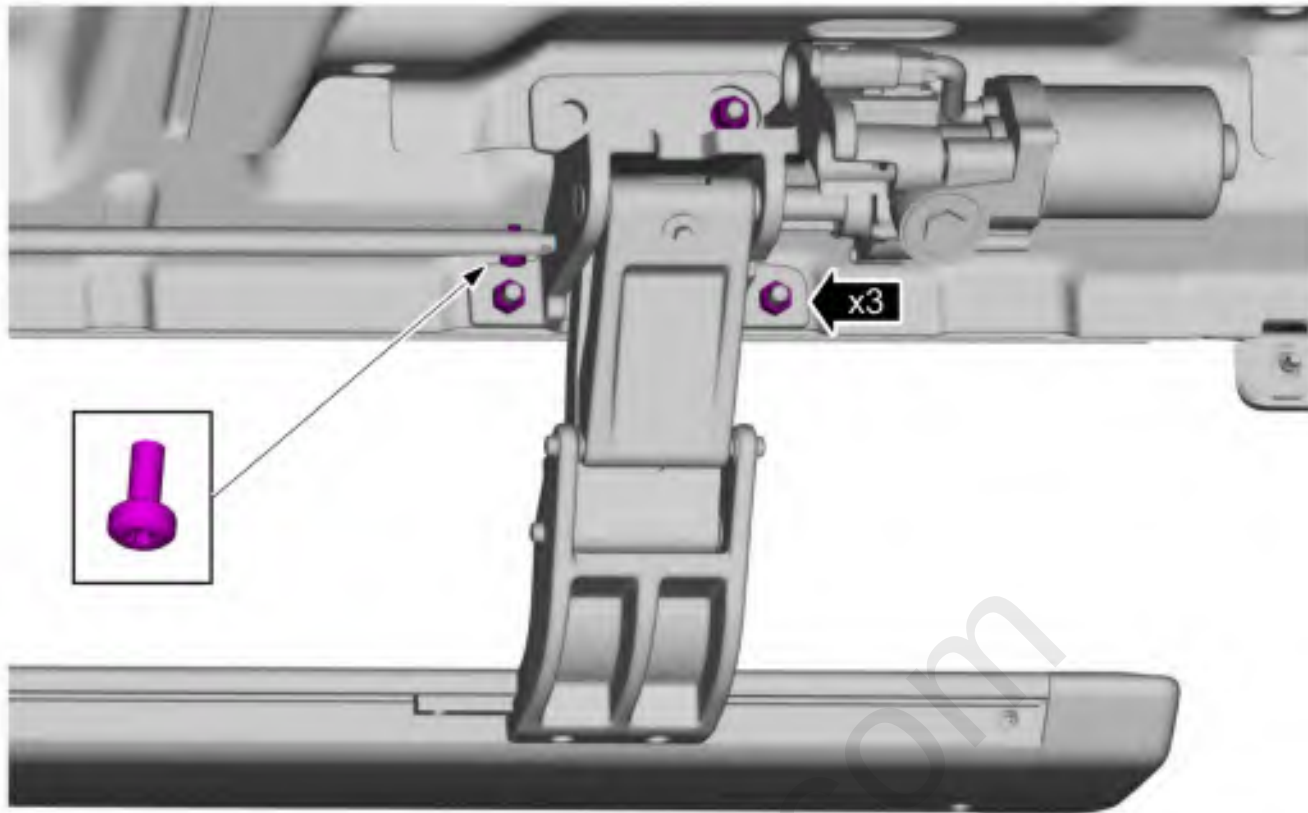

5. Disengage the motor drive shaft from the torque rod and remove the motor and bracket assembly.

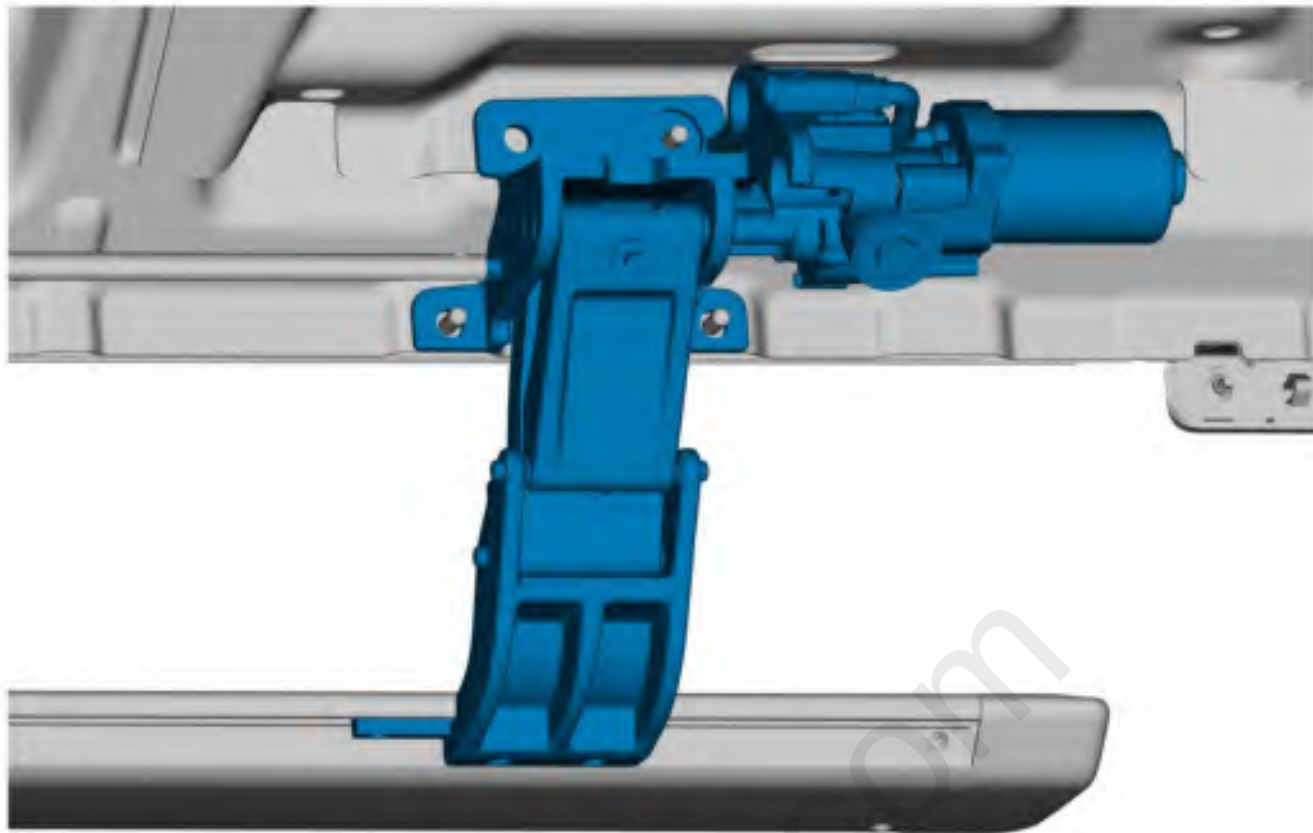

E195282



Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company
