

Power Running Board (PRB) Hinge


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: [Jacking and Lifting - Overview](#) (100-02 Jacking and Lifting, Description and Operation).
2. **NOTE:** LH side shown, RH side similar.

NOTE: Support the running board with a jackstand.


Remove the 2 screws.

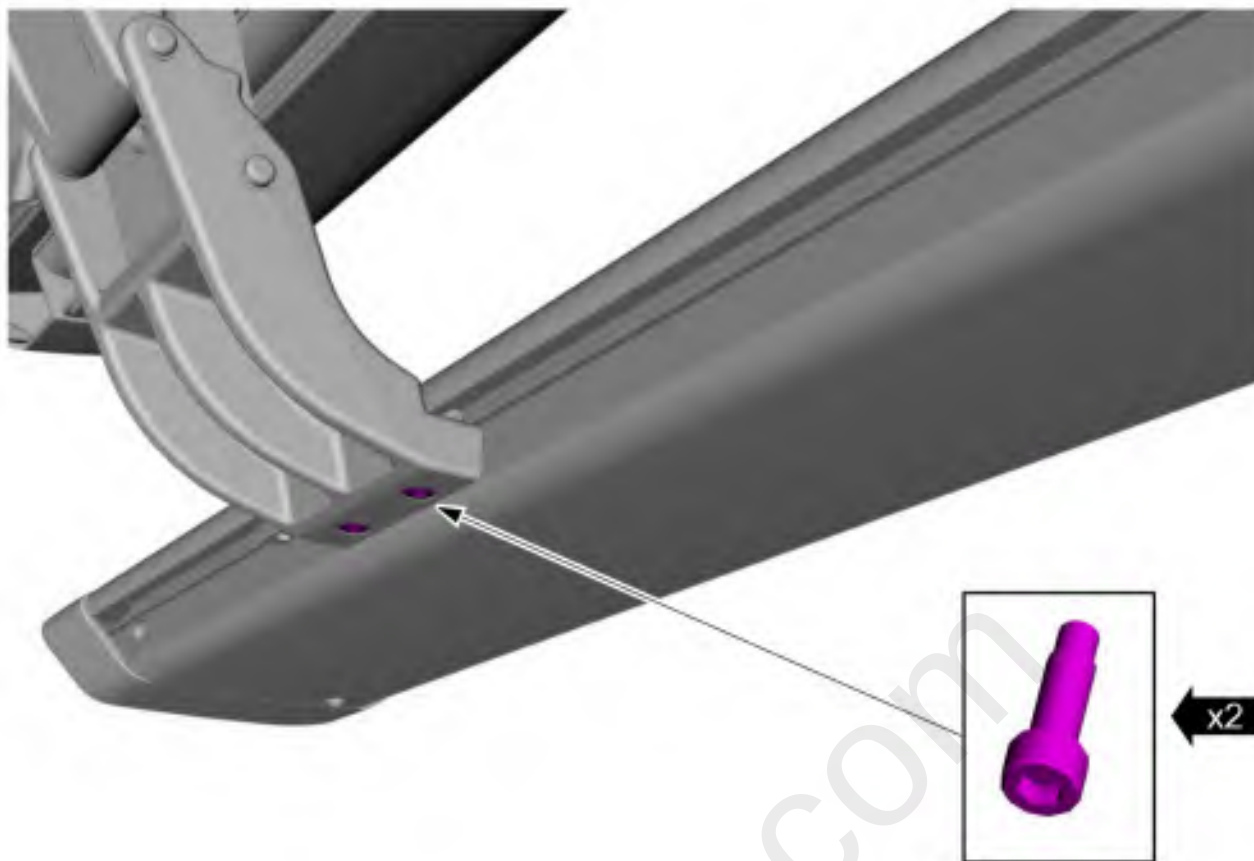

E195485

3. Remove the 3 nuts and 1 screw.
Torque: 16 lb.ft (22 Nm)




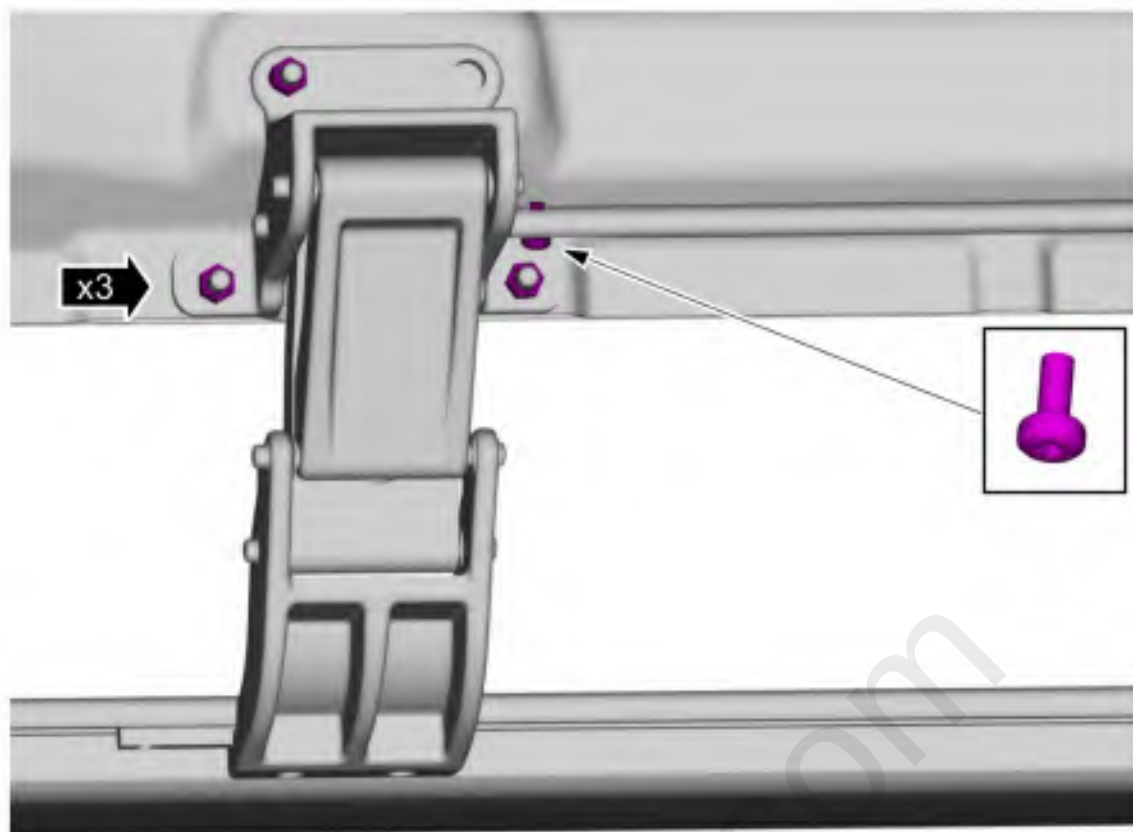

E195487



4. Disengage the torque rod and remove the bracket assembly.

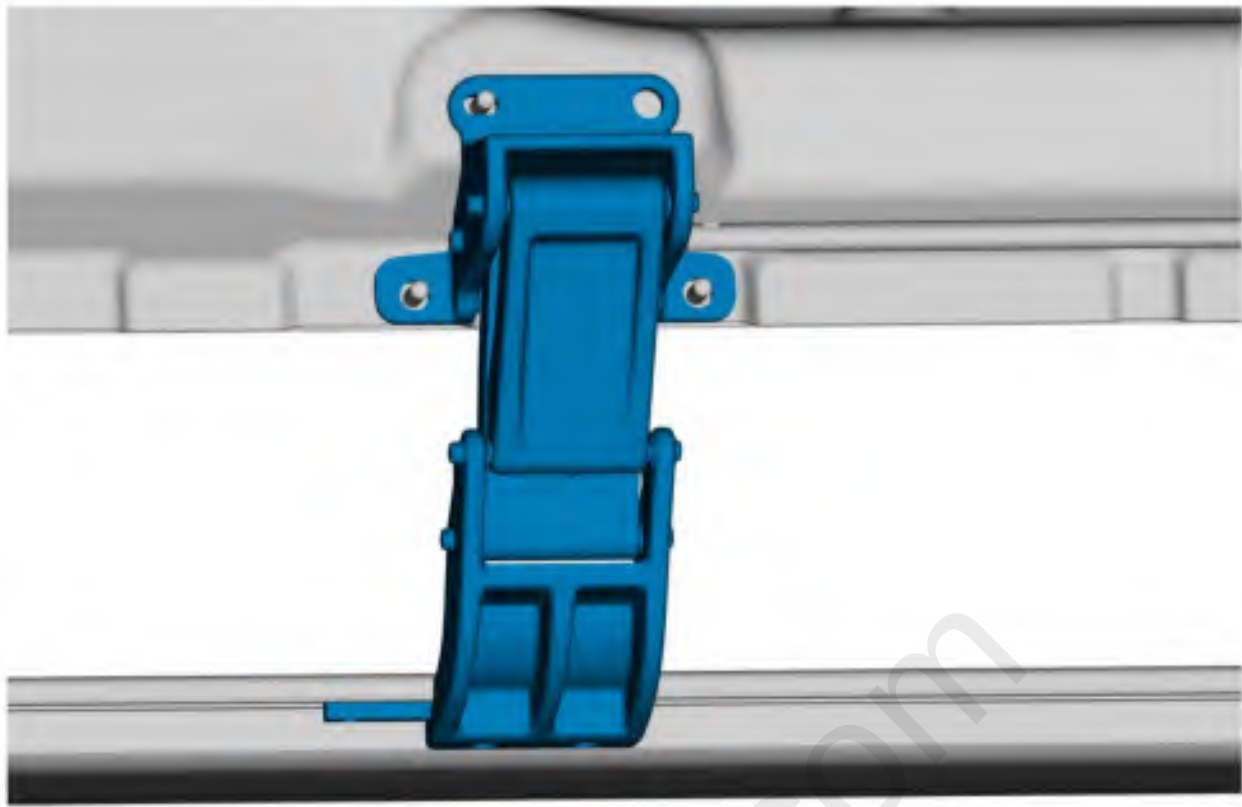

E195488



Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company
