


Power Running Board (PRB) Connecting Rod

Removal

NOTE: Removal steps in this procedure may contain installation details.


NOTE: LH side shown, RH similar.

1. Remove the rear running board bracket.
Refer to: [Power Running Board \(PRB\) Hinge](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).
2. Remove the screw.
Torque: 16 lb.ft (22 Nm)

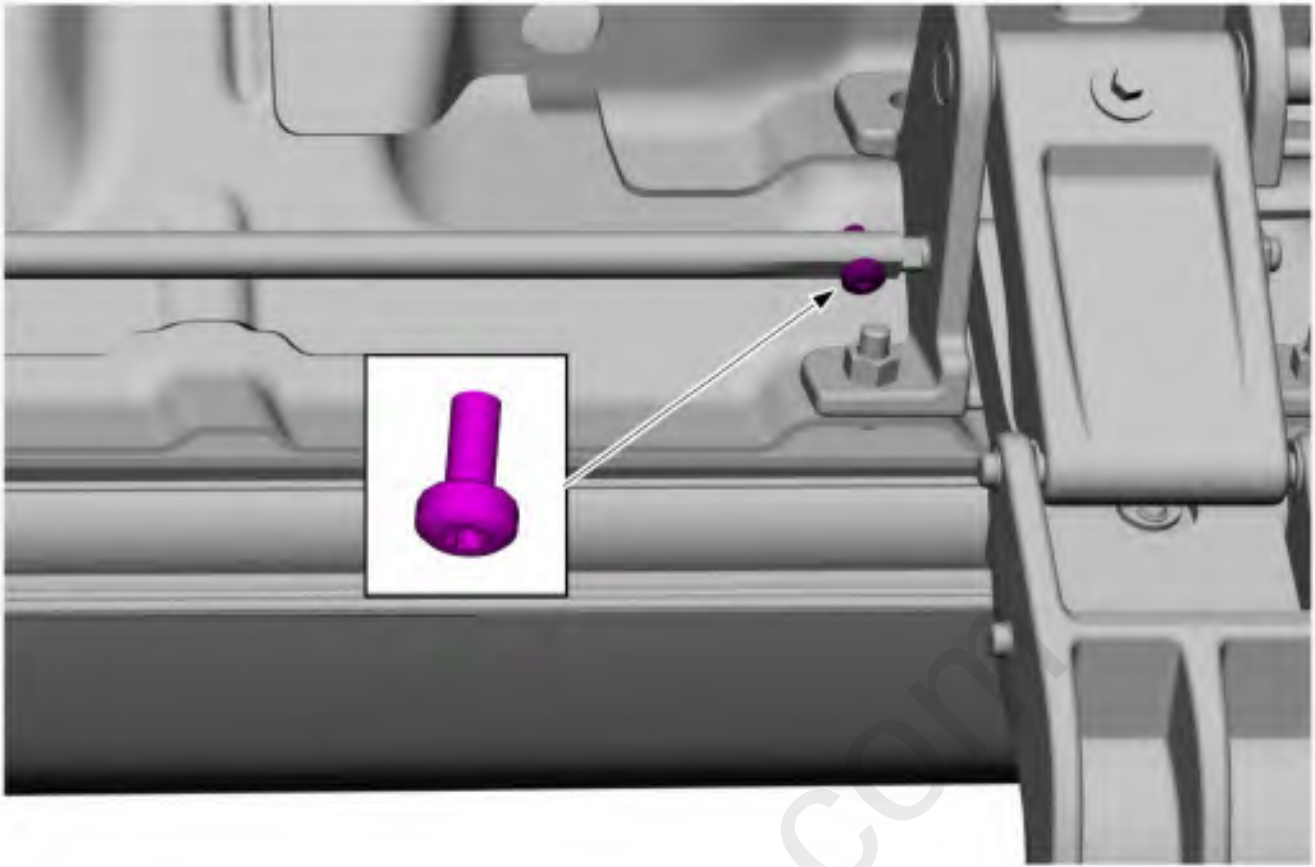

E195707

3. Remove the connecting rod.

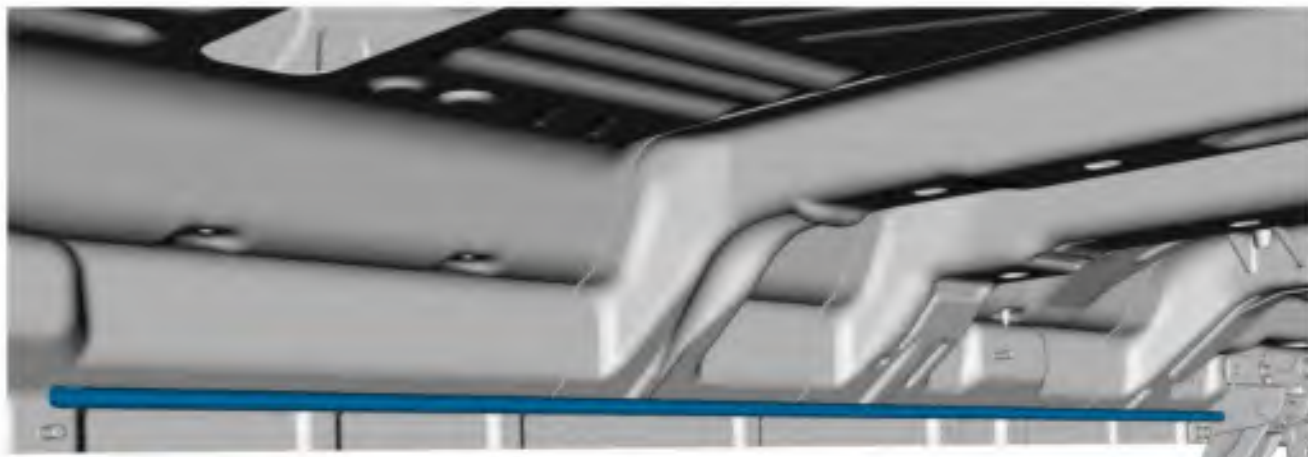

E195708



Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company