

Running Board

Removal


NOTE: Removal steps in this procedure may contain installation details.

LH side shown, RH similar.

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: [Jacking and Lifting - Overview](#) (100-02 Jacking and Lifting, Description and Operation).
2. **NOTE:** *Regular Cab shown, SuperCab and Super Crew similar.*

Remove the 6 nuts from the attachment brackets.


Torque: 16 lb.ft (22 Nm)

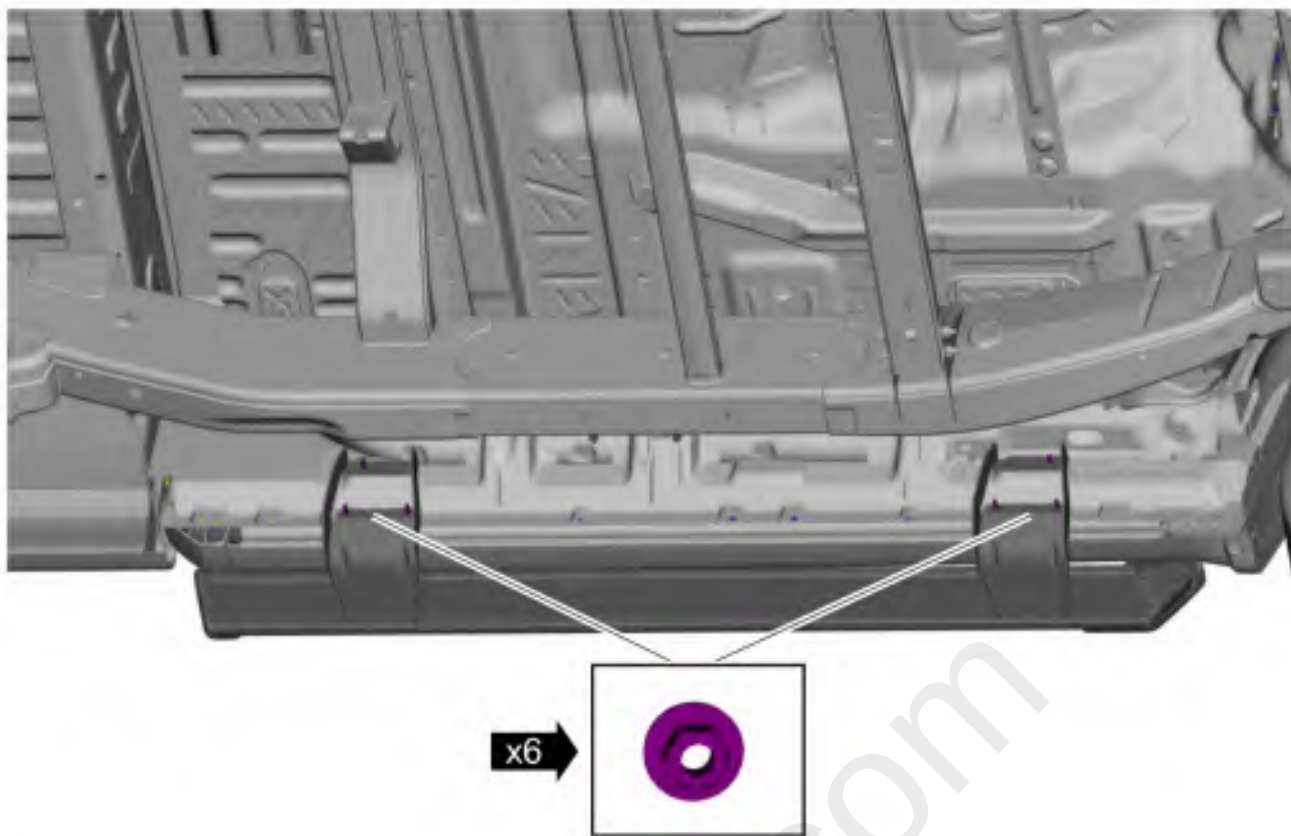

E193152



3. Remove the running board assembly.

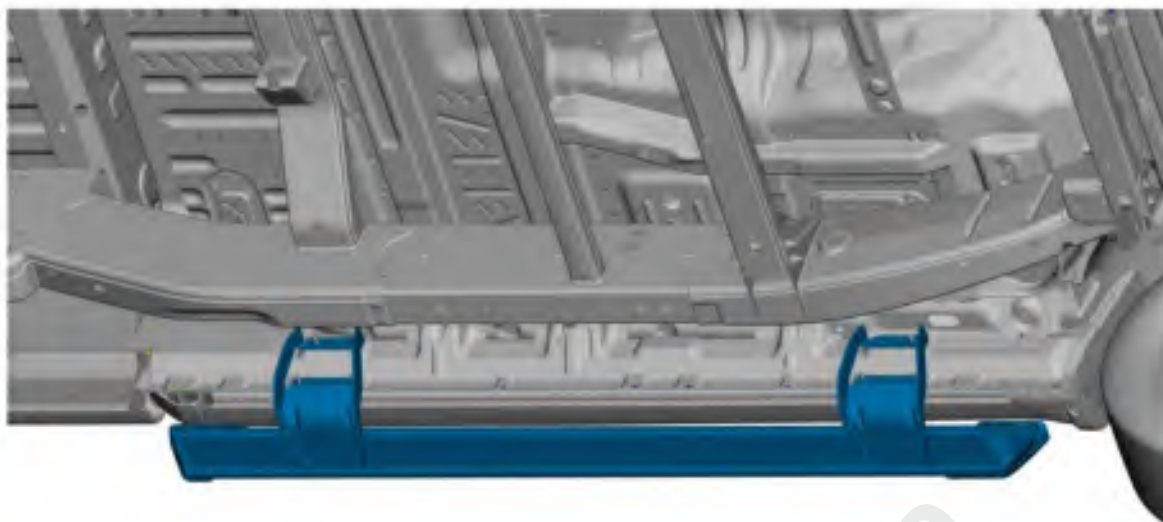

E193153



Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company