

Power Running Board (PRB)


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: [Jacking and Lifting - Overview](#) (100-02 Jacking and Lifting, Description and Operation).

2. **NOTE:** RH side shown, LH side similar.


Disconnect the electrical connector.

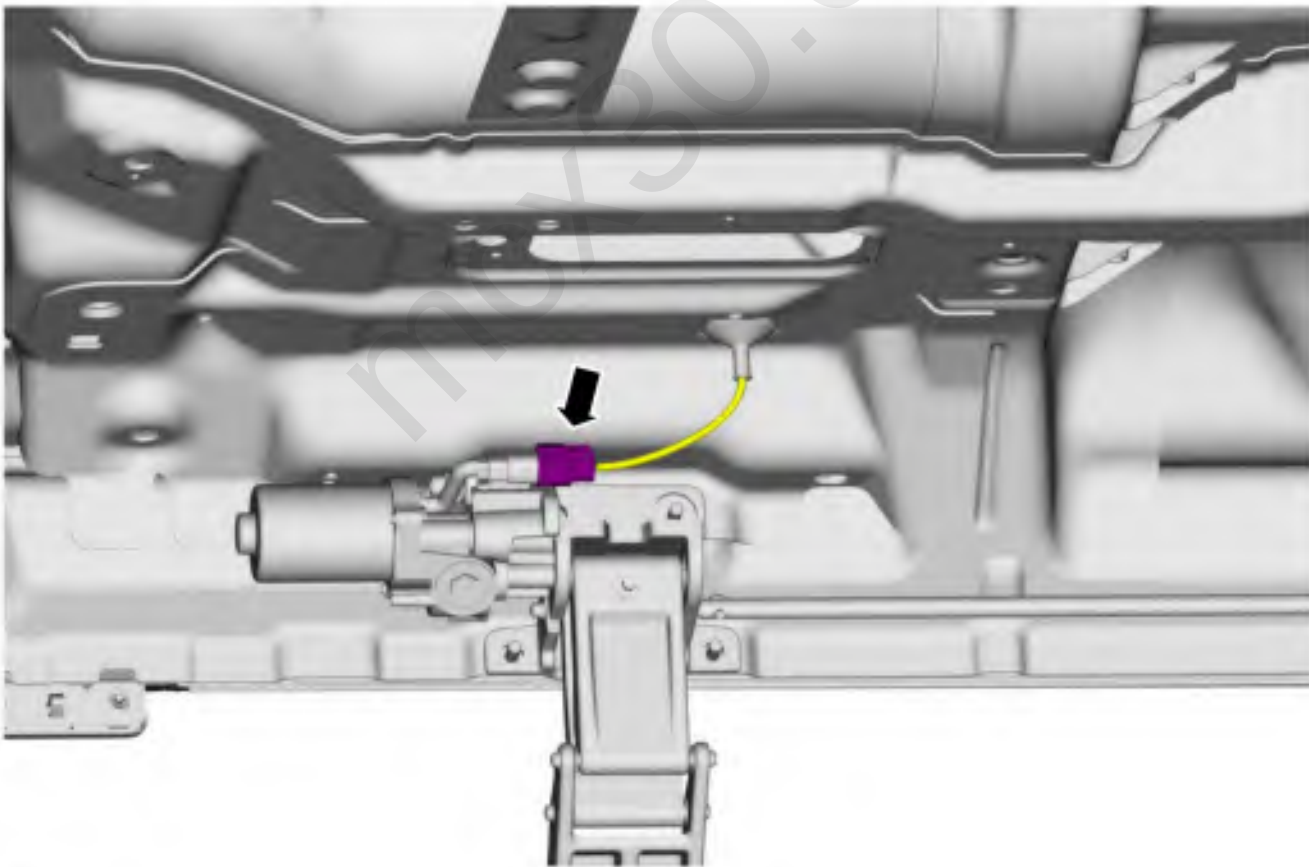

E193254




3. Remove the 6 nuts from the attachment brackets.
Torque: 16 lb.ft (22 Nm)

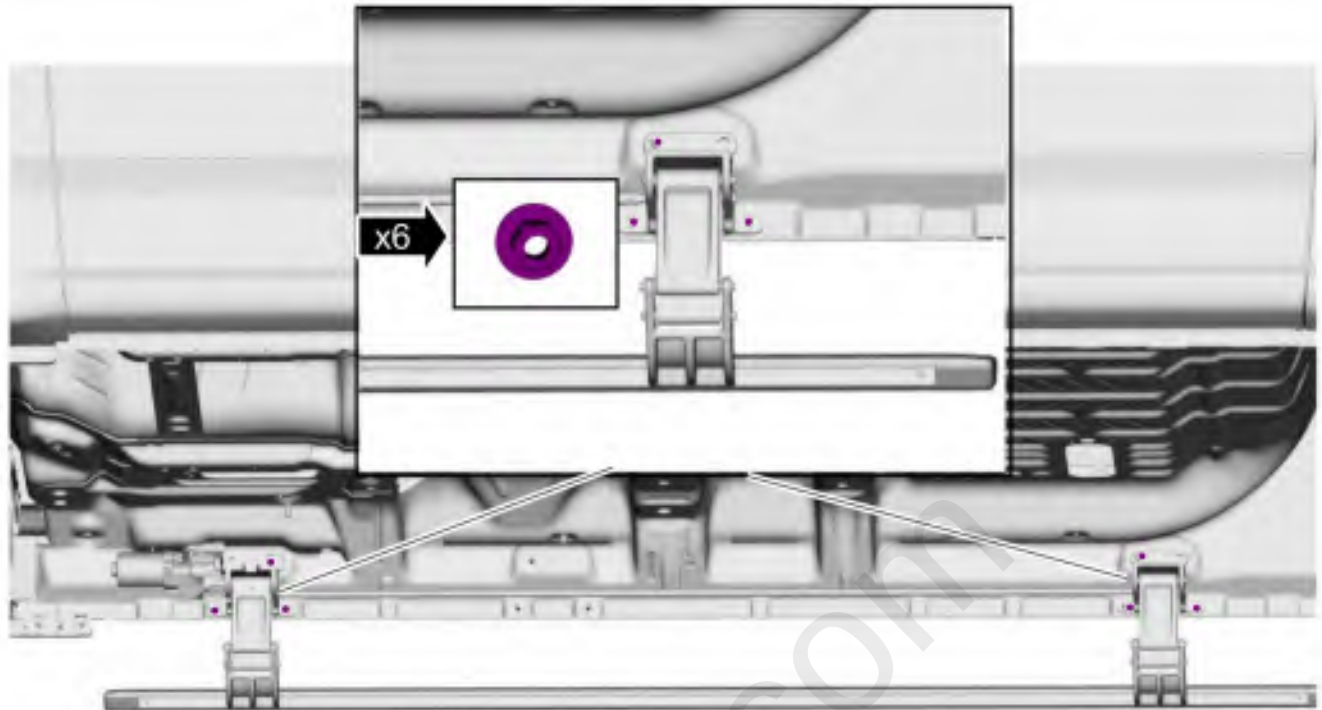

E193255

4. Remove the power running board assembly.



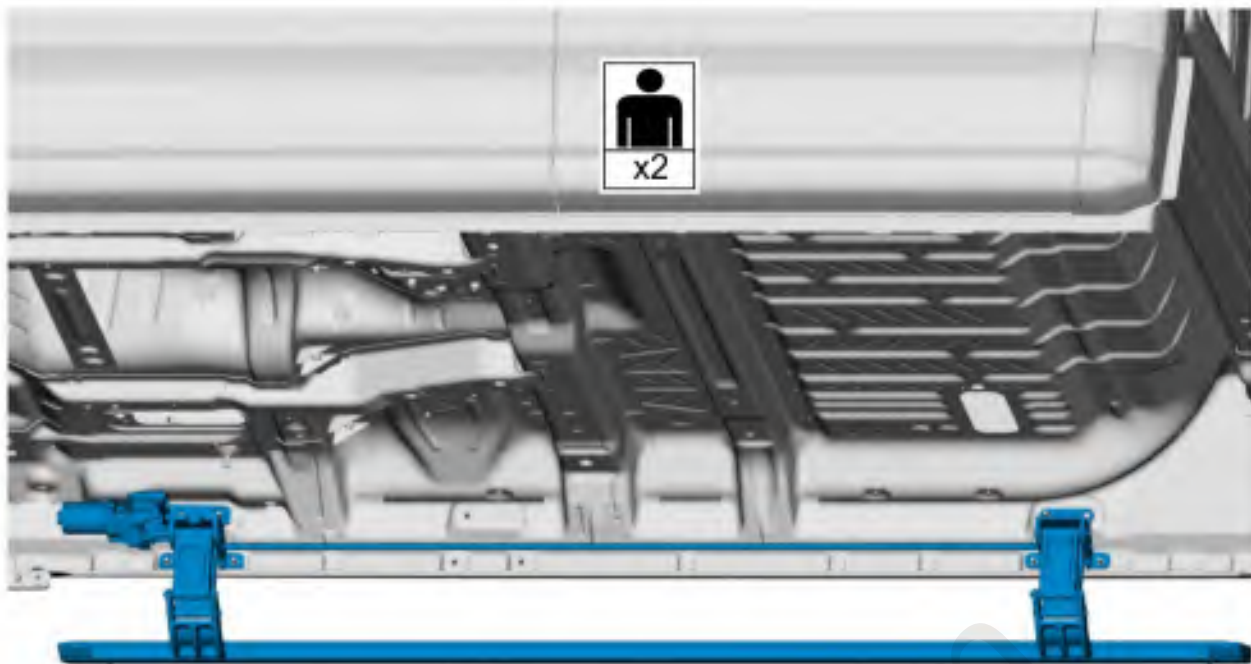

E193256

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company