

Front Seat Cushion Adjuster - Vehicles With: Multi-Contour Seats

Removal

NOTE: Driver seat shown, passenger seat similar.

NOTE: For the **passenger seat**, the front seat cushion adjuster is not serviced separately. If a new front seat cushion adjuster is needed, install an OCS service kit equipped with a front seat cushion adjuster.


NOTE: When equipped with an OCS service kit, the seat cushion adjuster is adhered to the bottom of the seat cushion foam. This requires the cushion cover, foam, seat cushion adjuster and OCS be removed and replaced as an assembly.

1. **NOTE:** This step is necessary only when installing a new component.

For passenger seat, install a new OCS.


Refer to: [Occupant Classification System \(OCS\) Sensor - Vehicles With: Multi-Contour Seats](#) (501-20B Supplemental Restraint System, Removal and Installation).

2. Remove the front seat cushion cover and foam as an assembly.
Refer to: [Front Seat Cushion Cover](#) (501-10A Front Seats, Removal and Installation).
3. Detach the backrest cover lower J-clips.

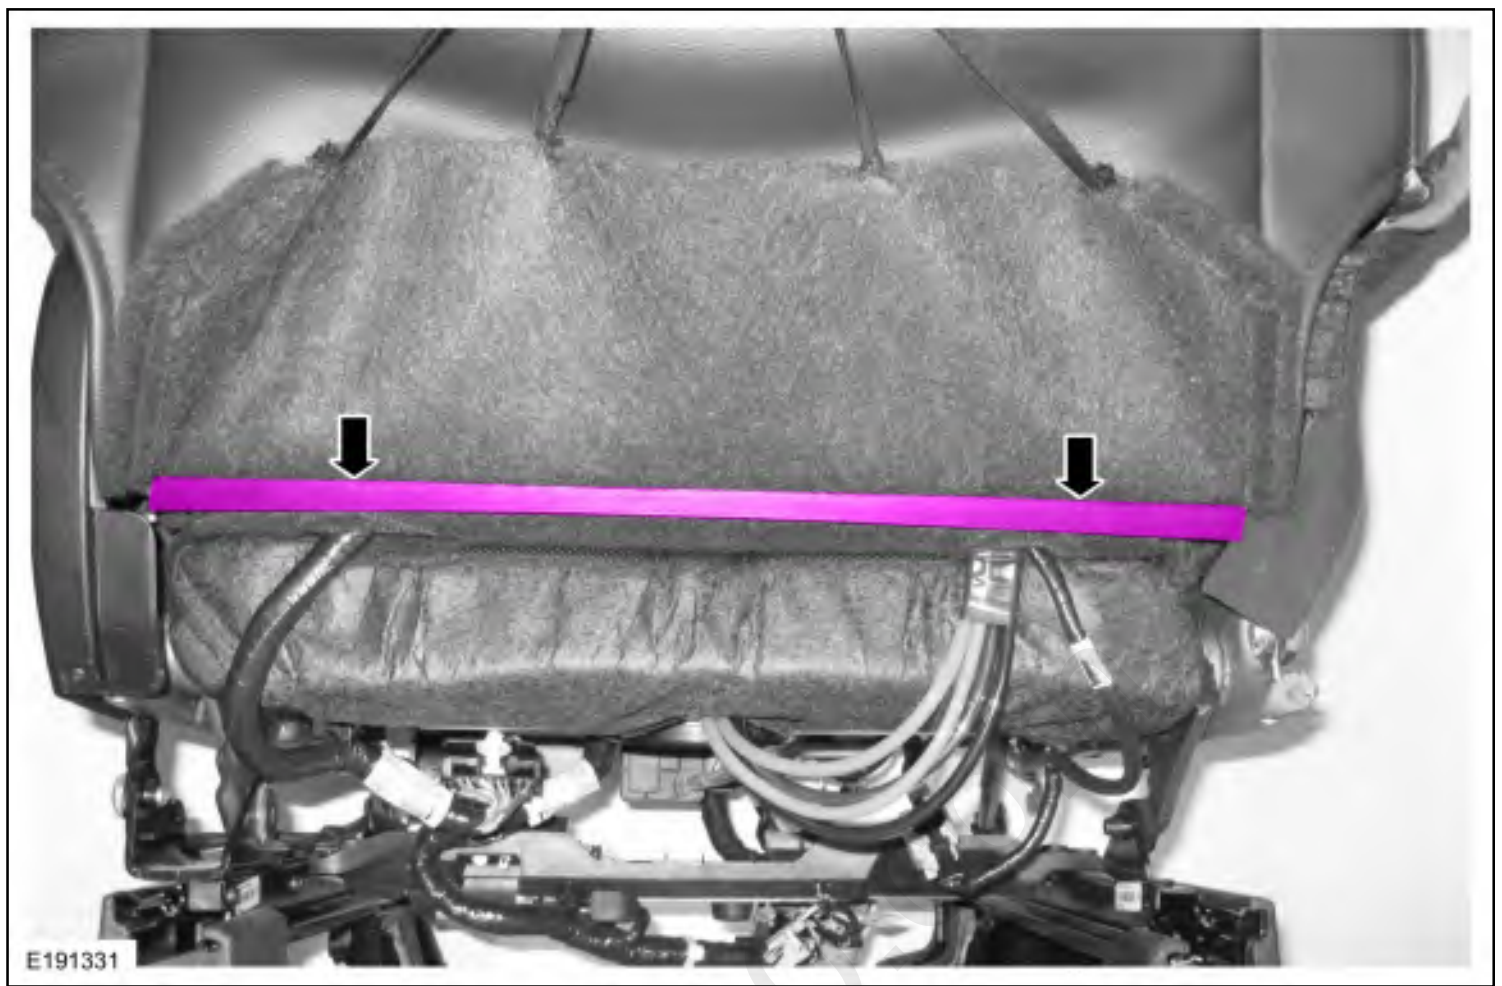


4. **NOTE:** *For installation of a backrest blower motor with snorkel, note the routing of the snorkel.*

Detach the hook-and-loop retainer and position the backrest cover strap aside.

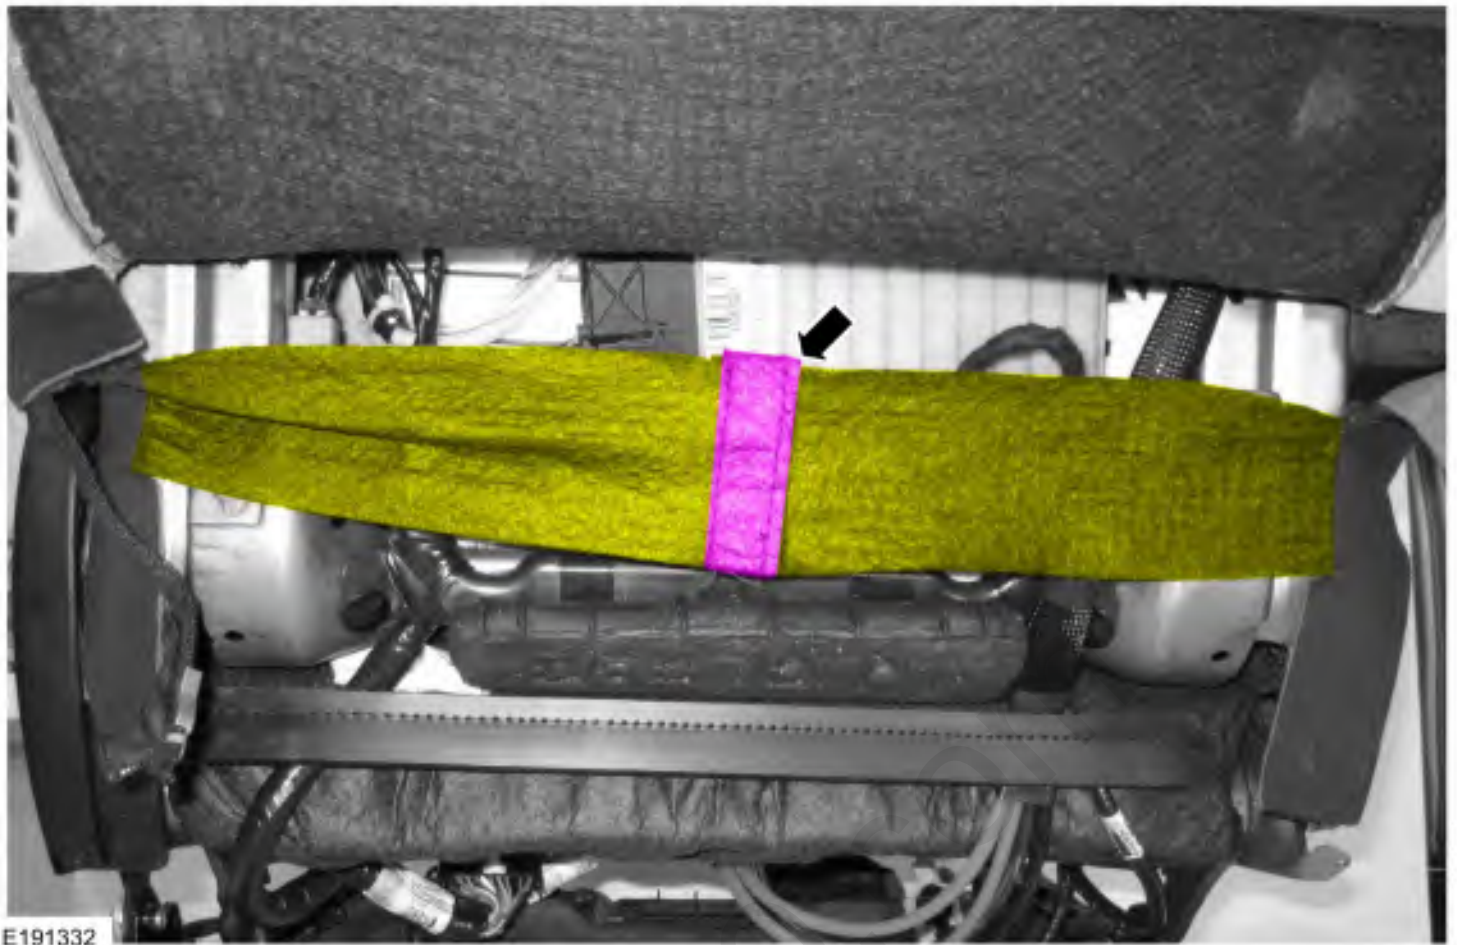

5. **NOTE:** *To install, gradually alternate the left and right seat backrest cover zippers to prevent damage to the seat backrest cover.*


1. Unzip the backrest cover zipper on each side.
2. Position the backrest cover upward.
3. Detach the J-clips from the lumbar wire.

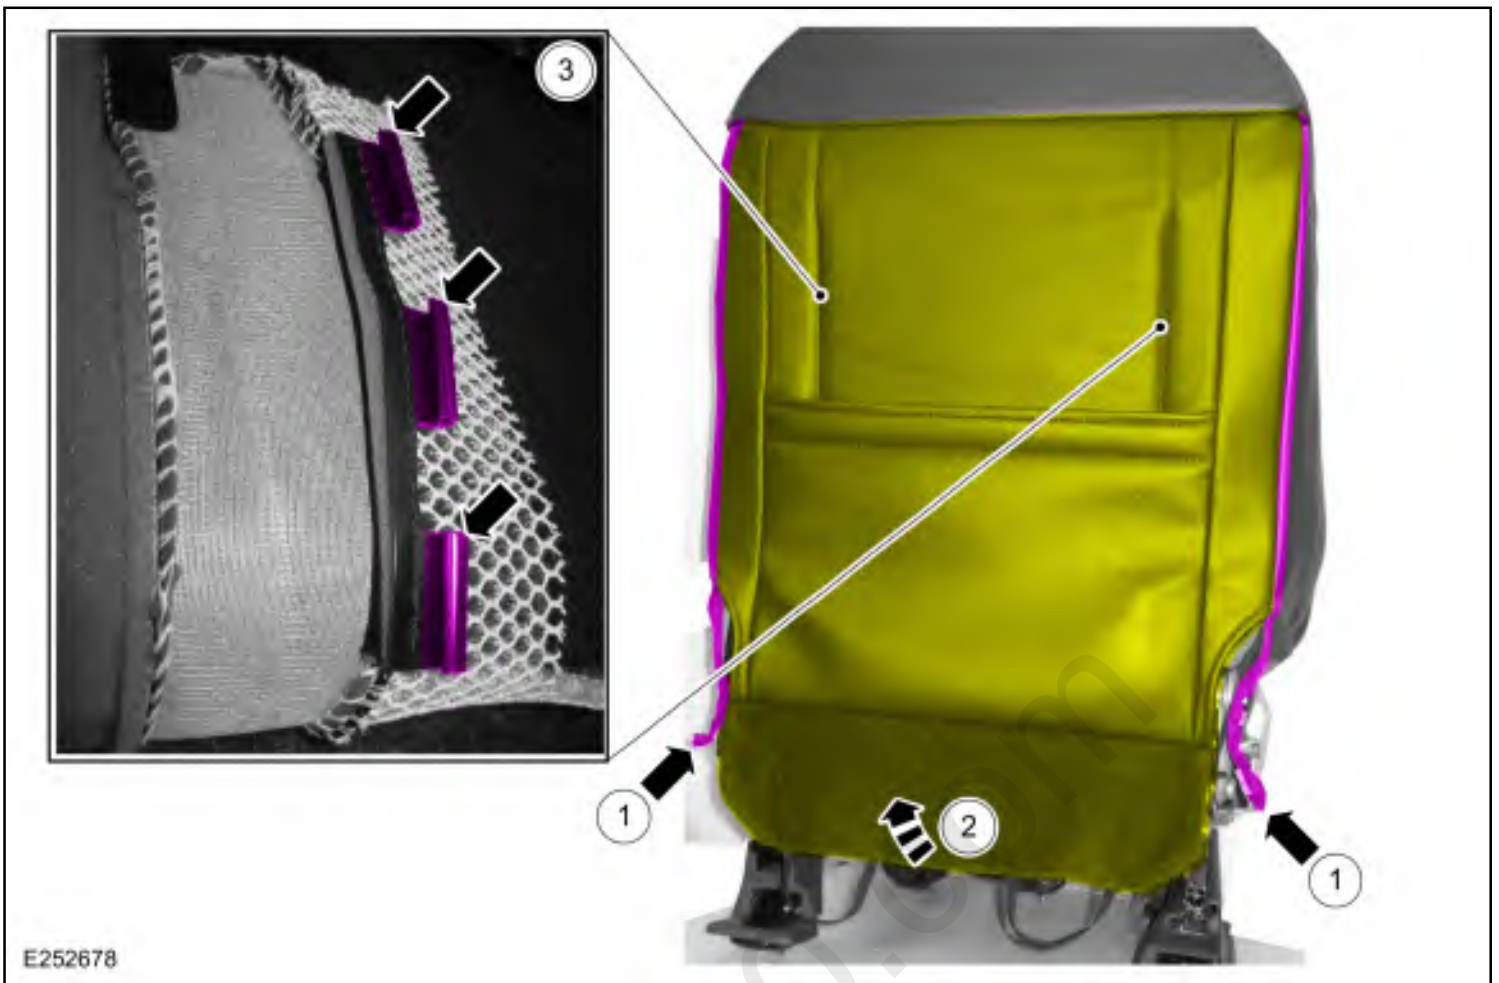


6. Detach the multi-contour seat cushion hose retainer. Release the locking tab and disconnect the hose coupling assembly (Red) from the SCMG.



7. Feed the multi-contour seat hose assembly out through the backrest cover opening.

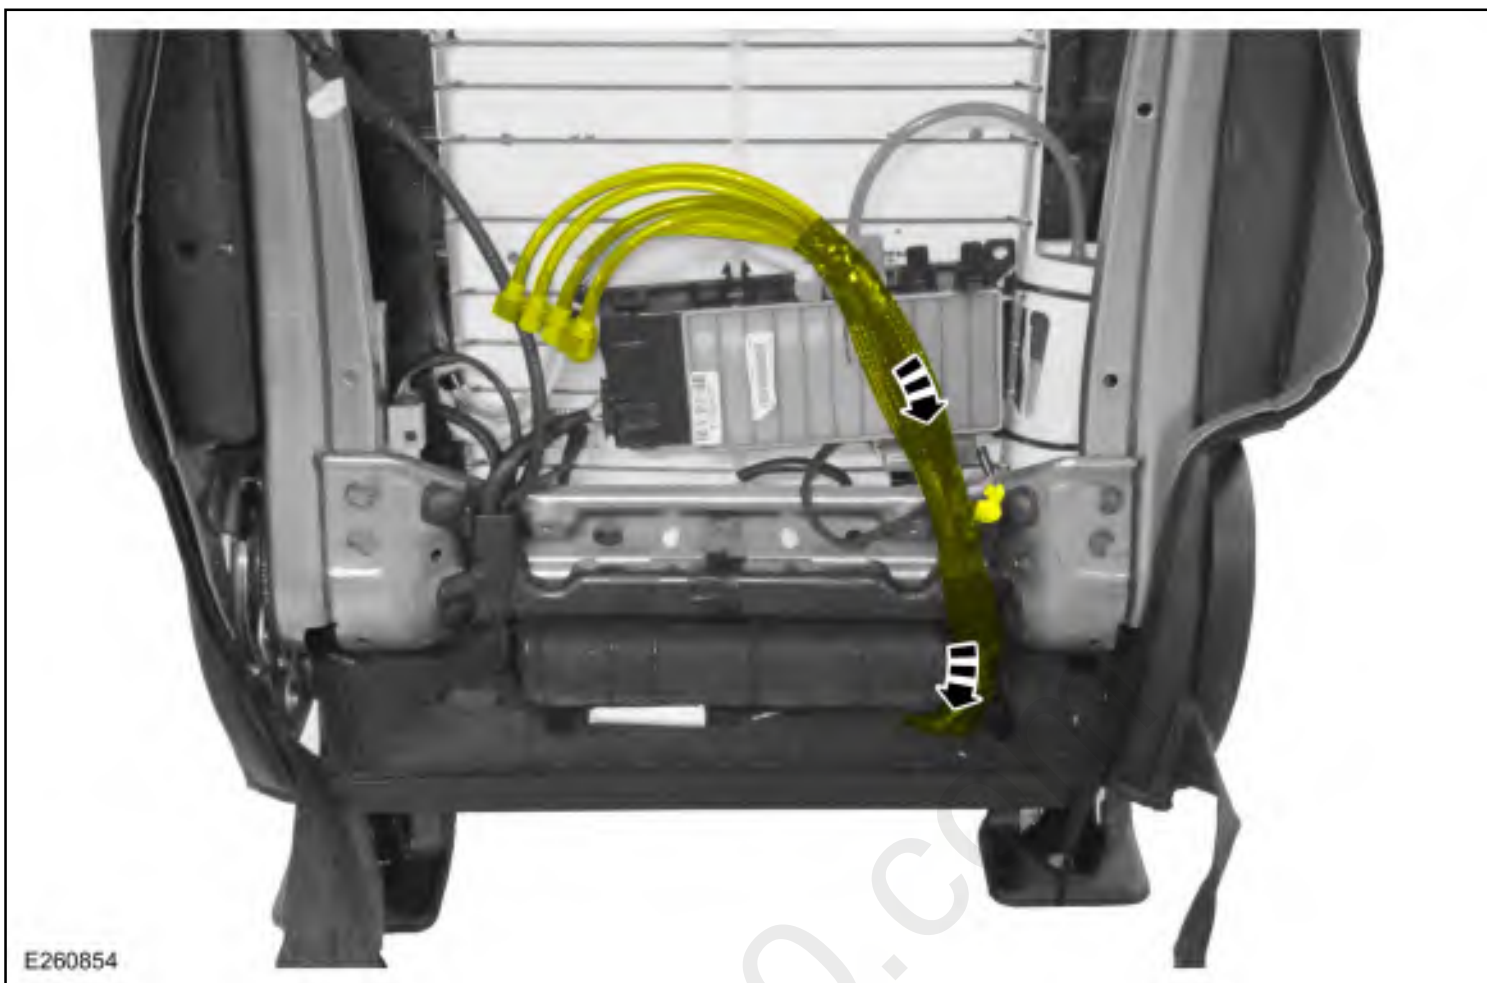

8. Remove the pin-type retainers and the front seat cushion adjuster.

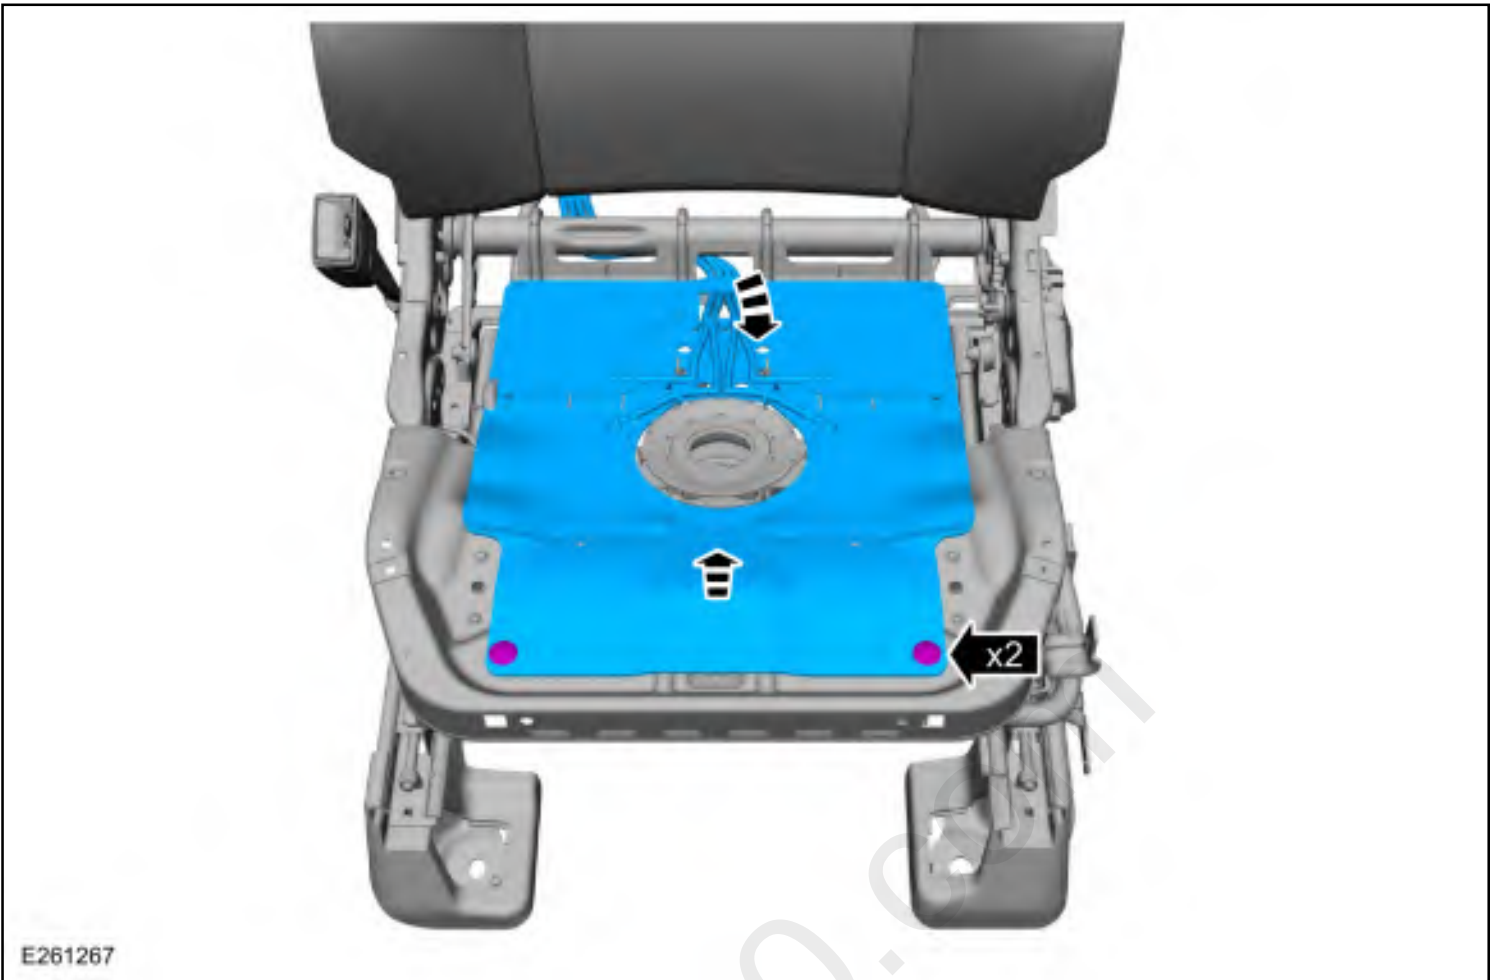

Installation

1. To install reverse the removal procedure.

Copyright © 2018 Ford Motor Company