


Front Seat Cushion Blower Motor

Removal


NOTE: Driver seat shown, passenger seat similar.

1. Remove the front seat cushion cover and foam as an assembly.
Refer to: [Front Seat Cushion Cover](#) (501-10A Front Seats, Removal and Installation).
2. Lift the edge of the front seat cushion blower motor air duct and remove the screws.

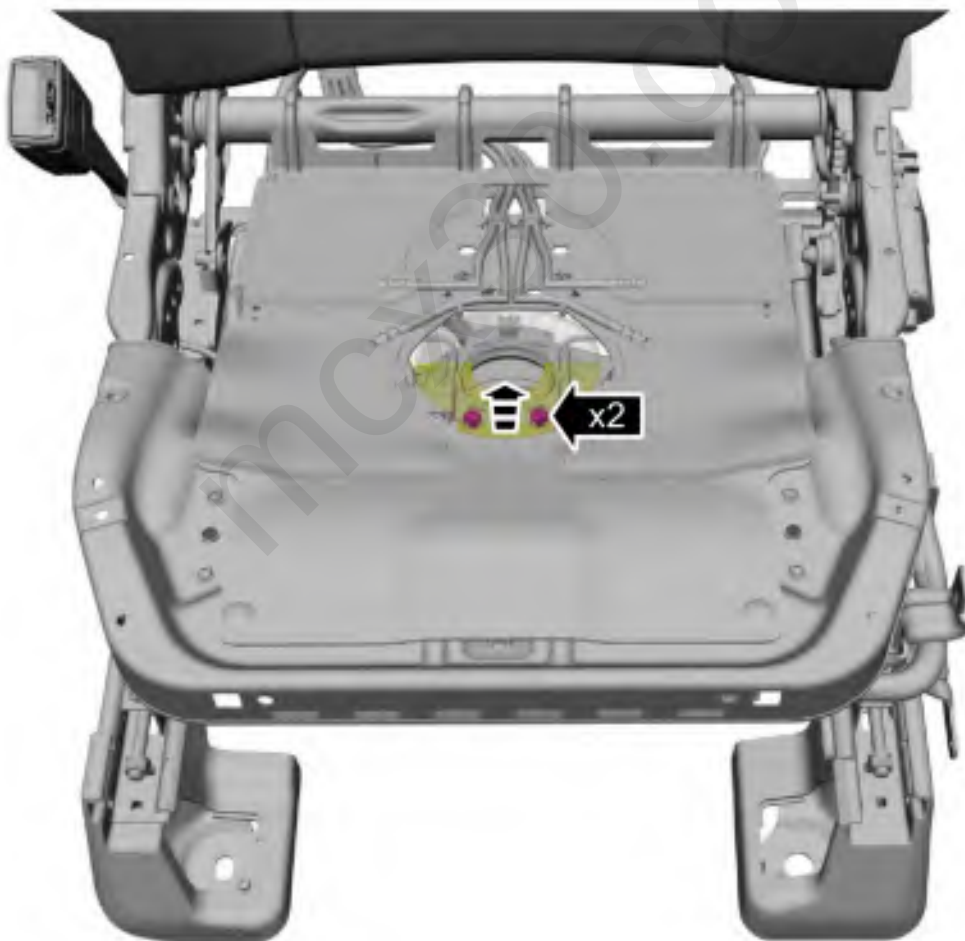

3. Remove the front seat cushion blower motor.
 1. Disconnect the electrical connector.

2. Release the retainer.

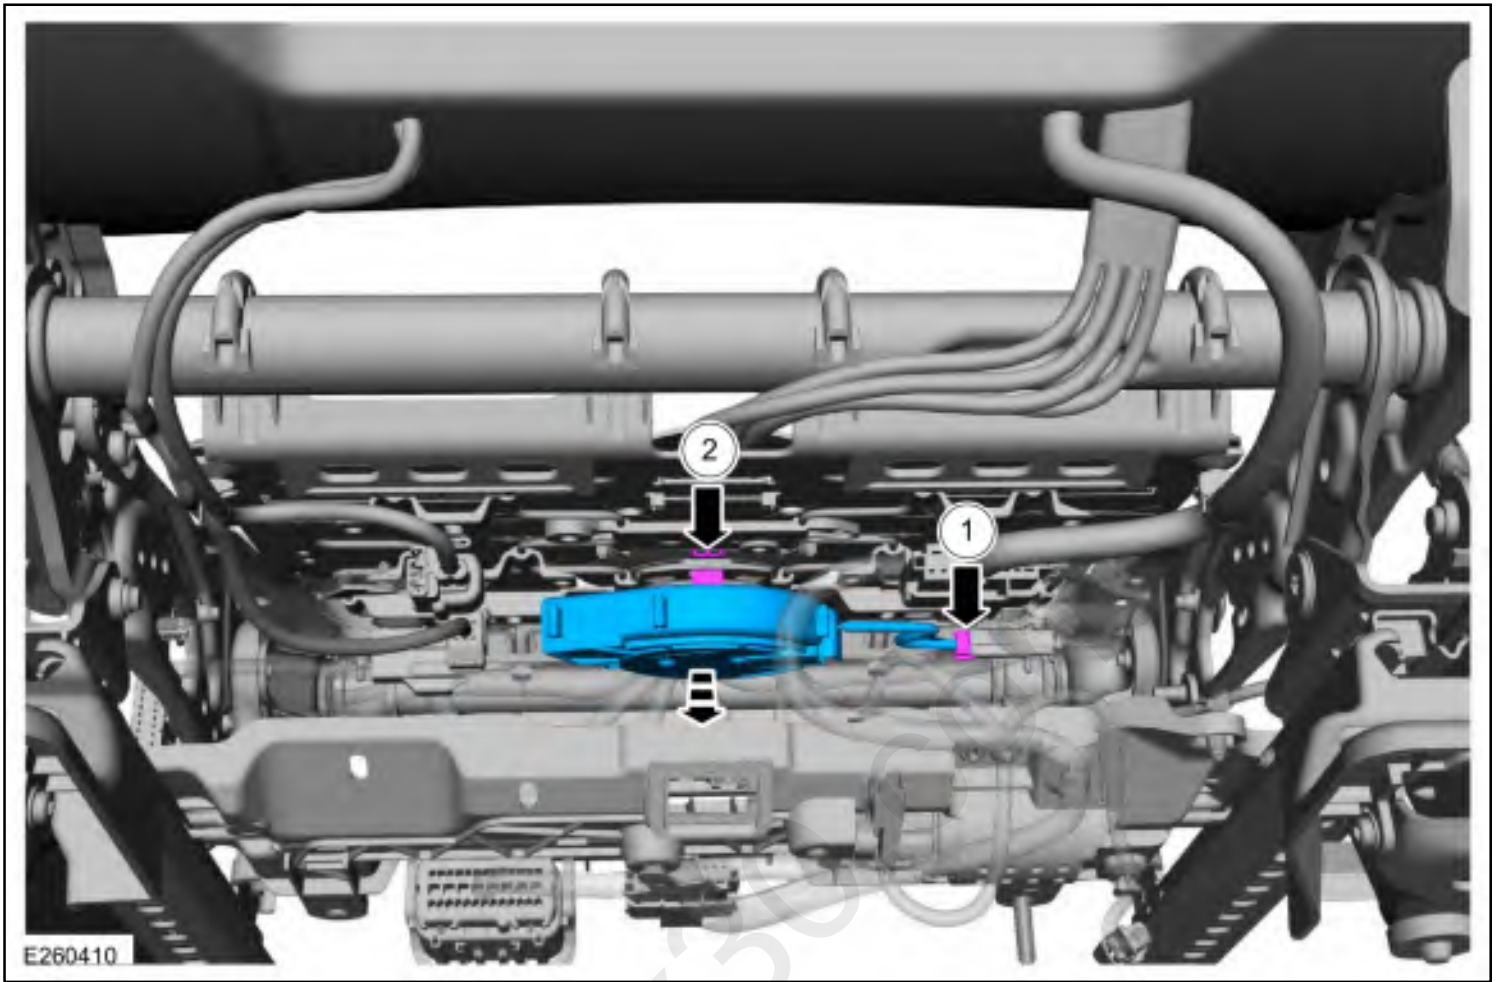

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company