


Front Center Seat Cushion Cover

Removal


NOTE: Removal steps in this procedure may contain installation details.

All vehicles

1. Remove the front center seat.
Refer to: [Front Center Seat](#) (501-10A Front Seats, Removal and Installation).
2. If equipped with rear cup holder.
Disconnect the USB module electrical connectors.
 1. Disconnect the electrical connector.
 2. Disconnect the electrical connectors.
 3. Detach the retainers and position the wiring harness aside.
 4. Detach the retainer and position the wiring harness aside.

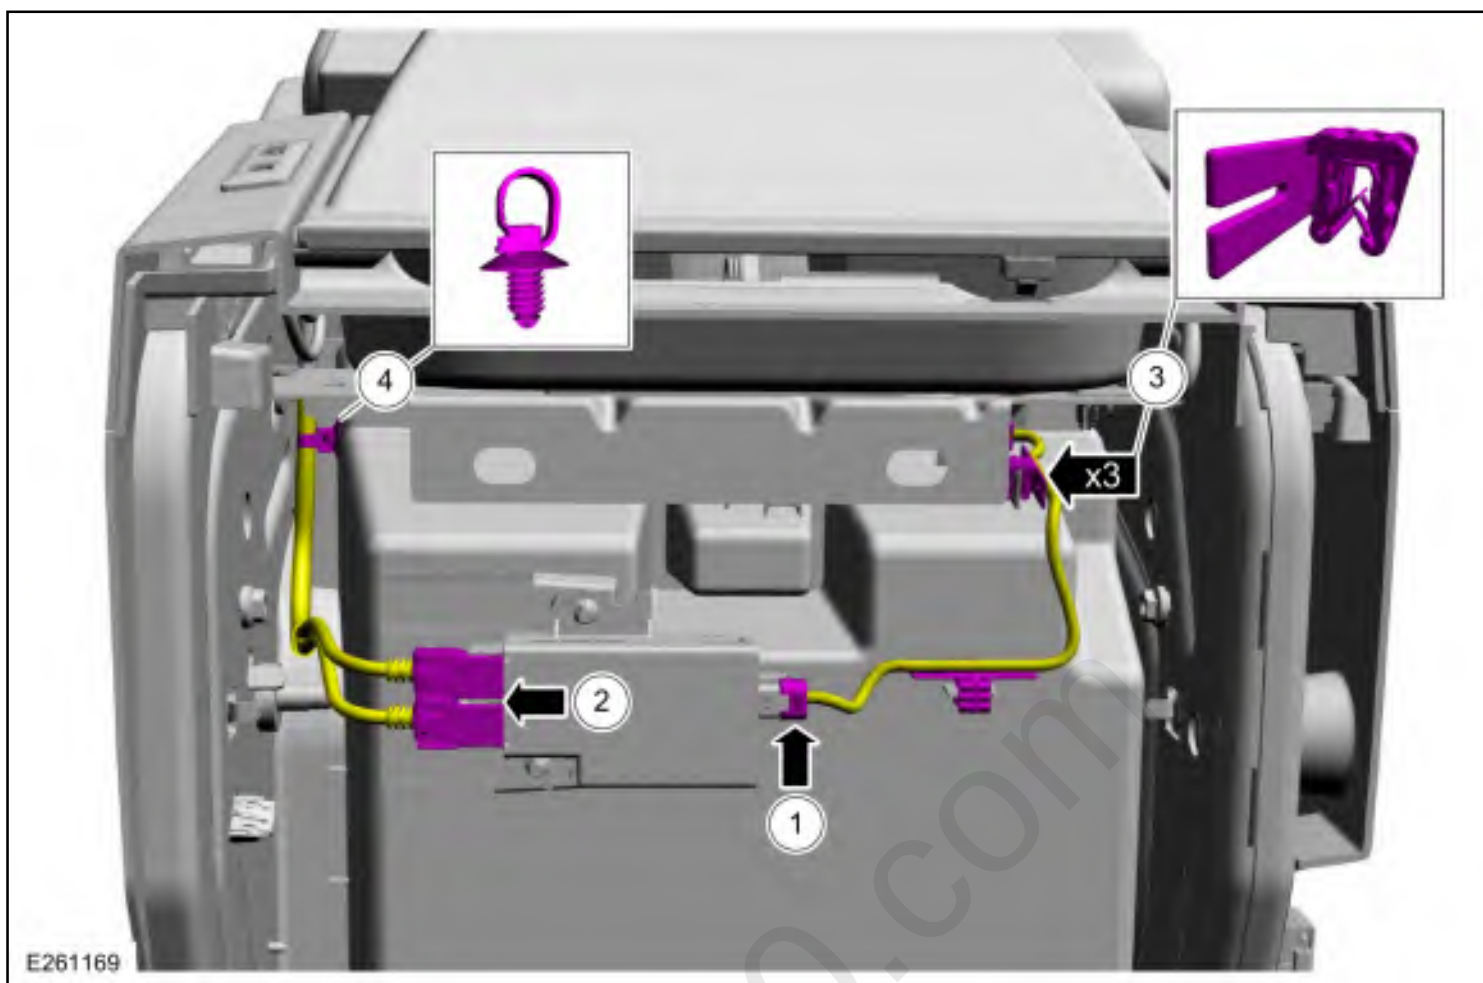

3. If equipped with rear cup holder.
Remove the rear cup holder assembly.
 1. Release the retainers.
 2. Disconnect the PATS center antenna electrical connector.
 3. Disconnect the auxiliary power point electrical connector.

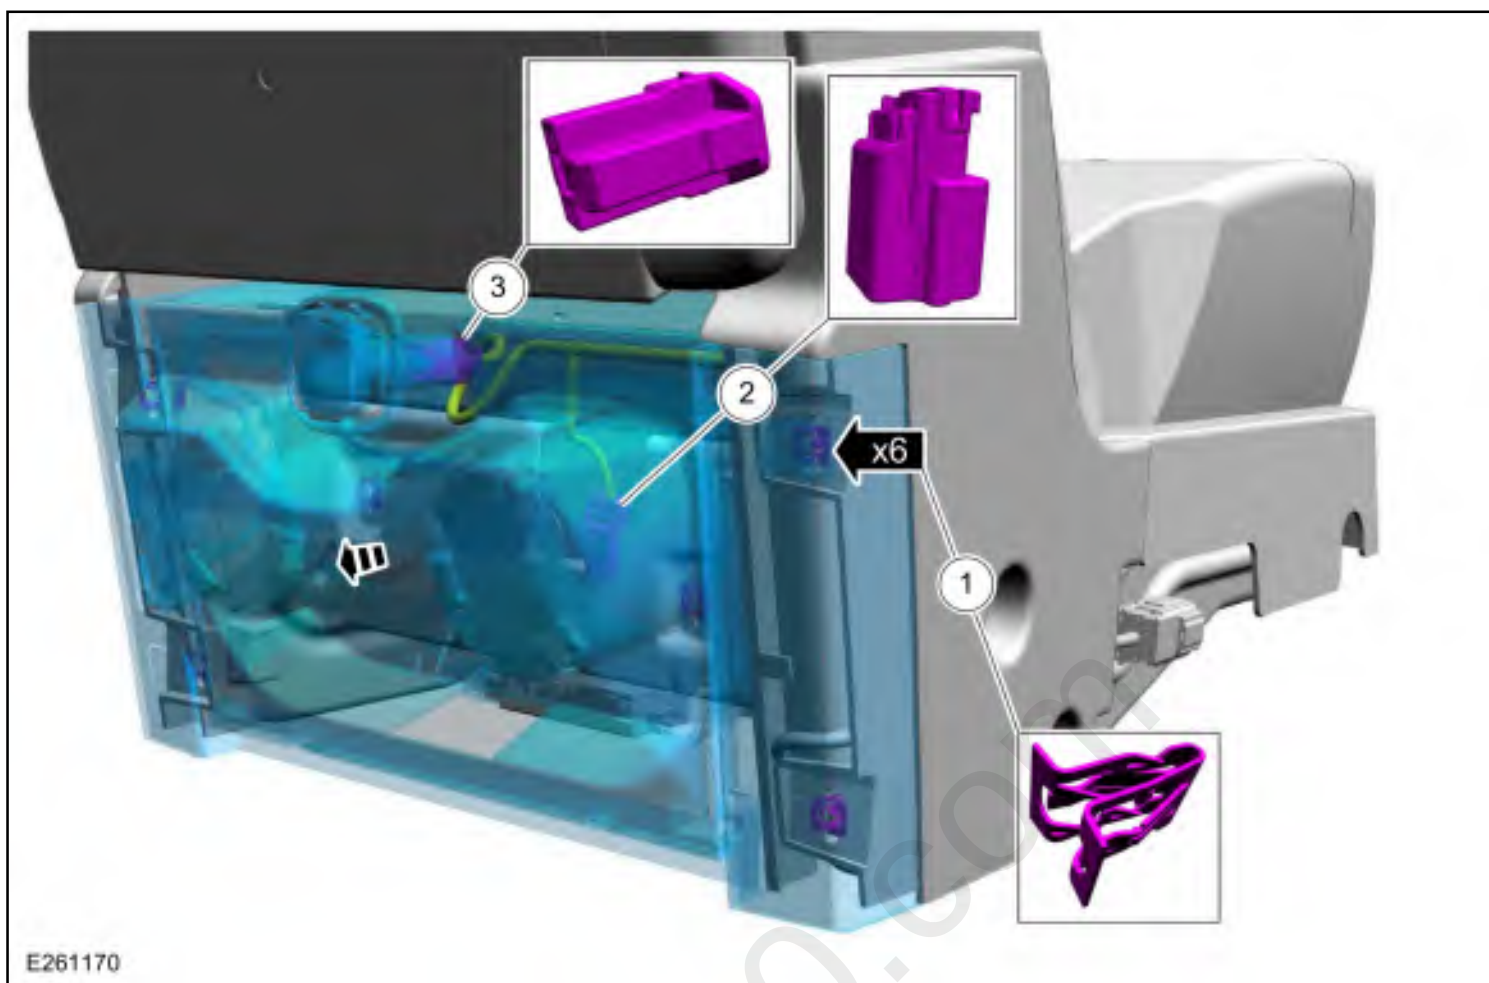

4. Position the seat cushion up.



E193434



5. Remove the cup holder.



E195565



6. Remove screws and the seat storage tray.



E195571




7. Position the seat cushion down.



E195585



8. Release the seat latch and fold the seat backrest down.

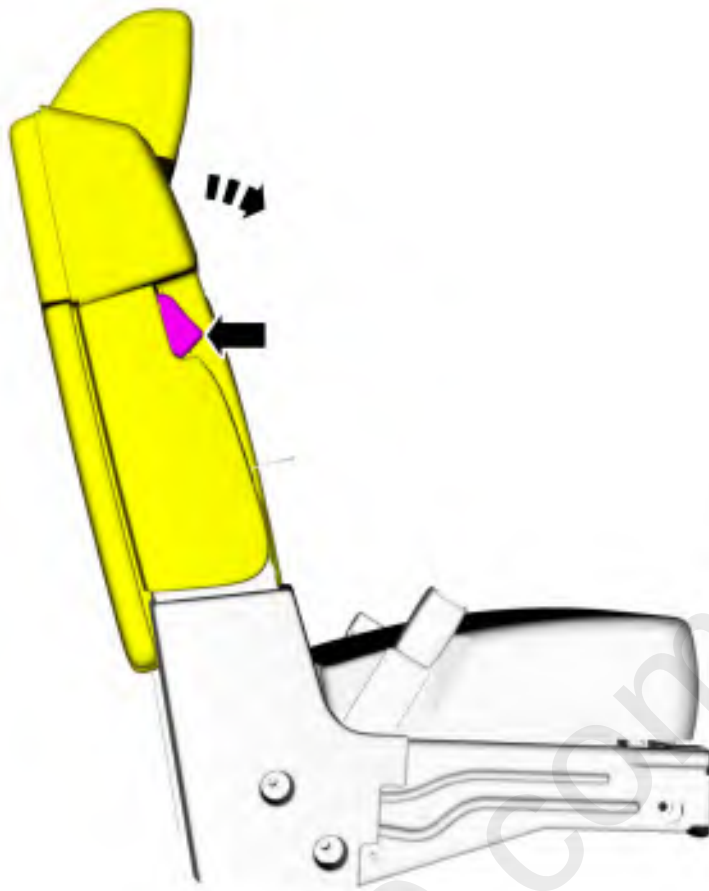


E195586





Regular Cab

9. Remove the backrest latch cover.

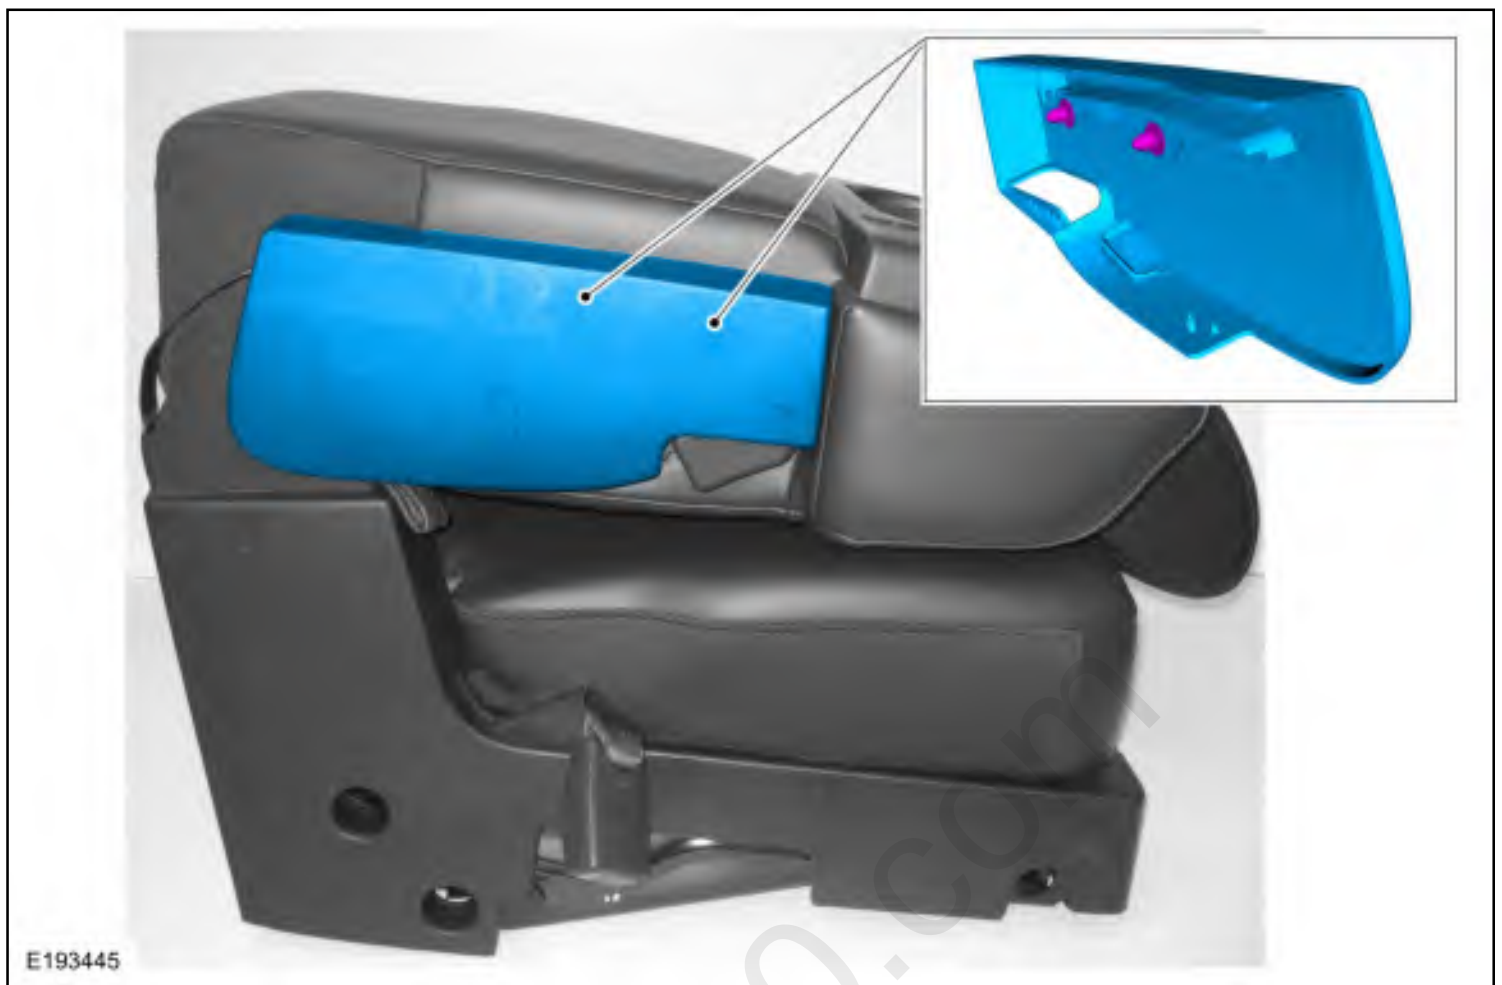


10. Remove the screws, release the retaining clip and remove the RH side shield.

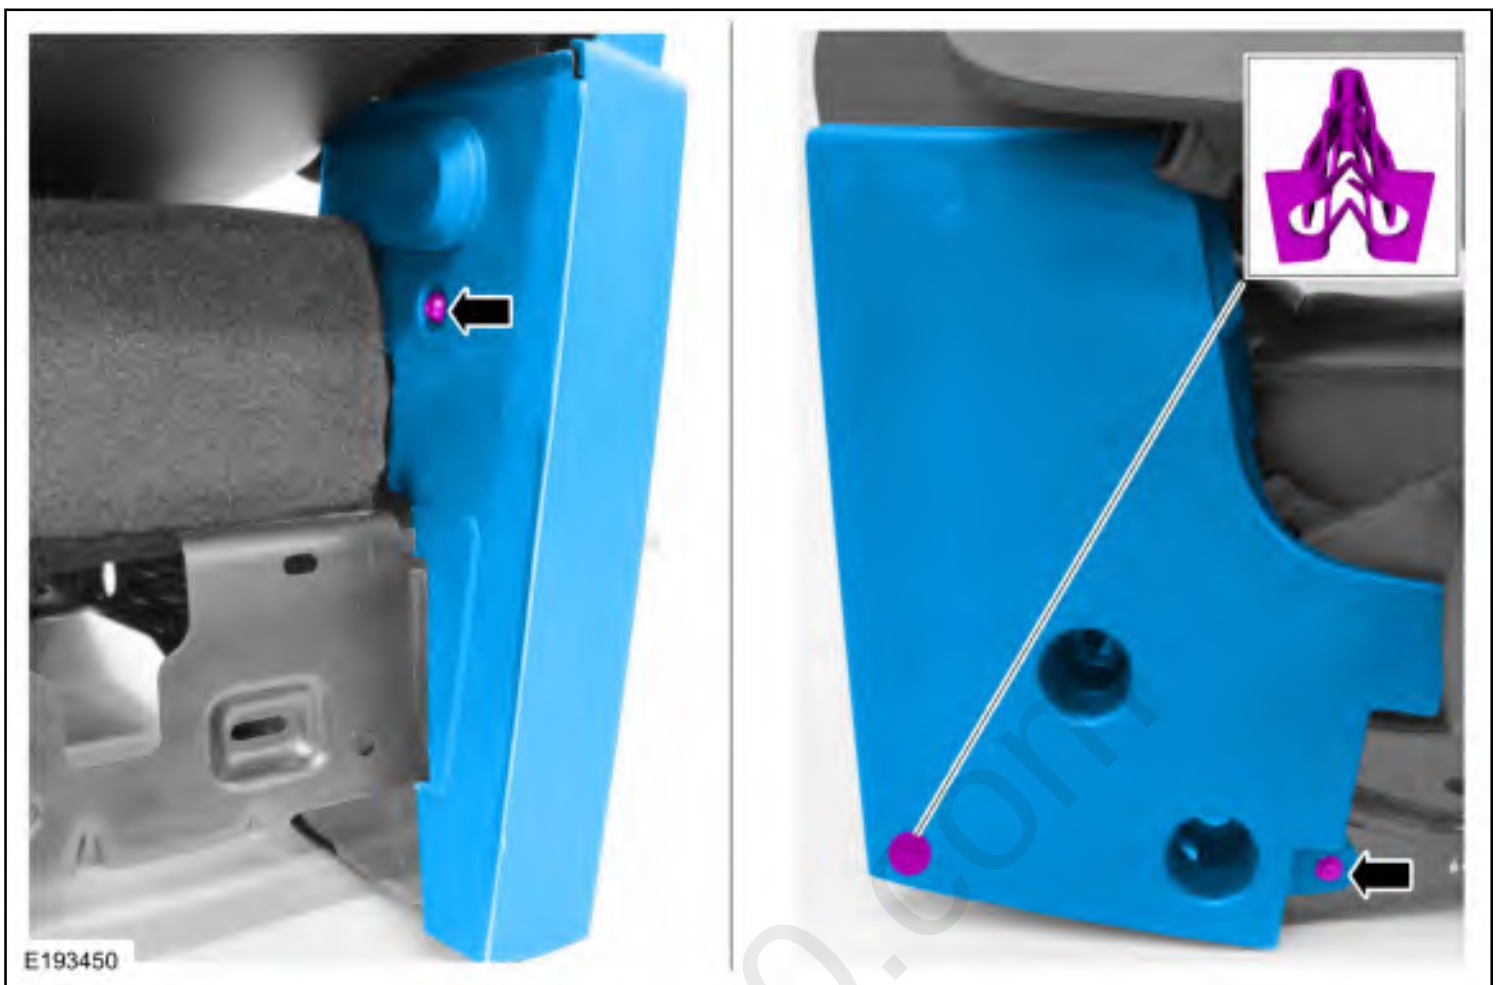

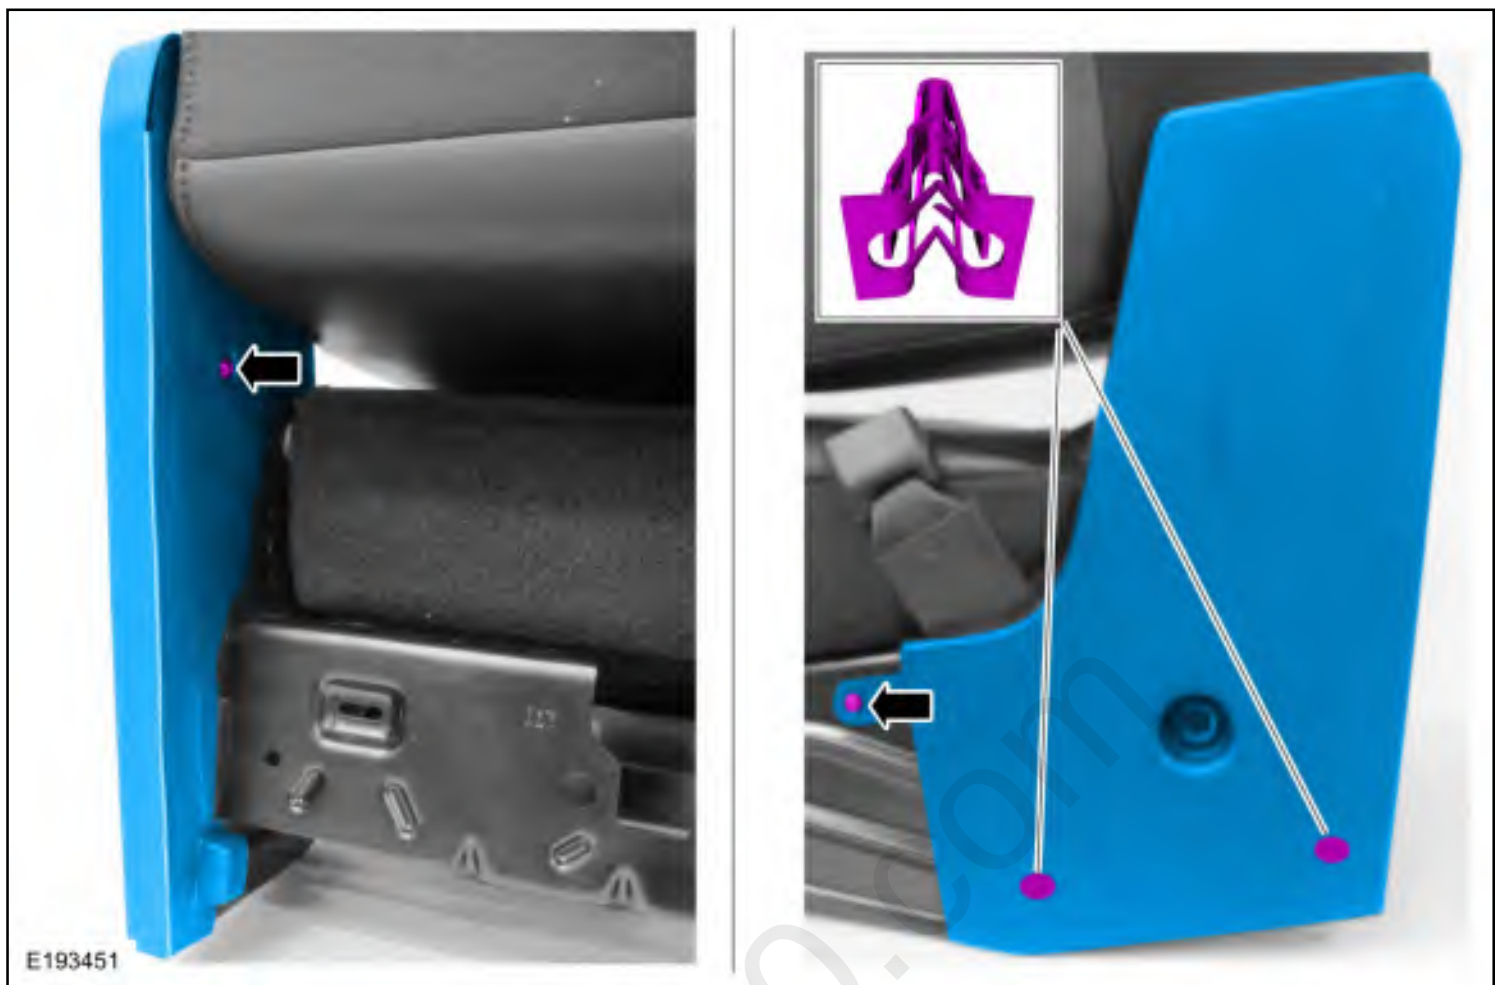


12. Release the seat latch and raise the seat backrest up.

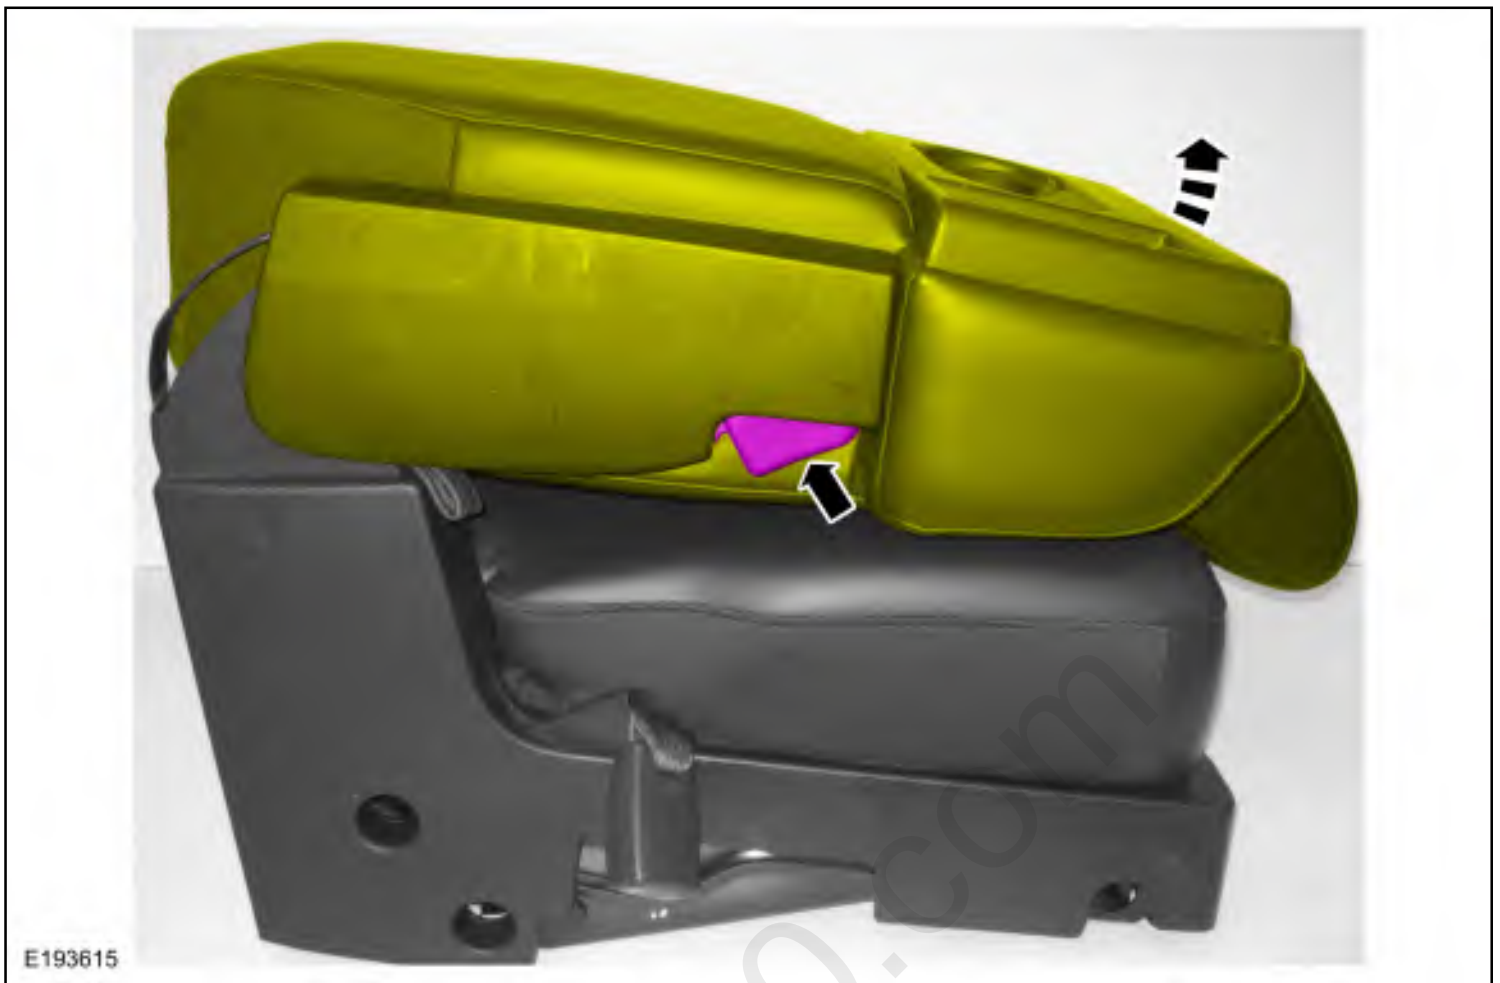


SuperCab and SuperCrew


13. Position the armrest storage compartment lid up.

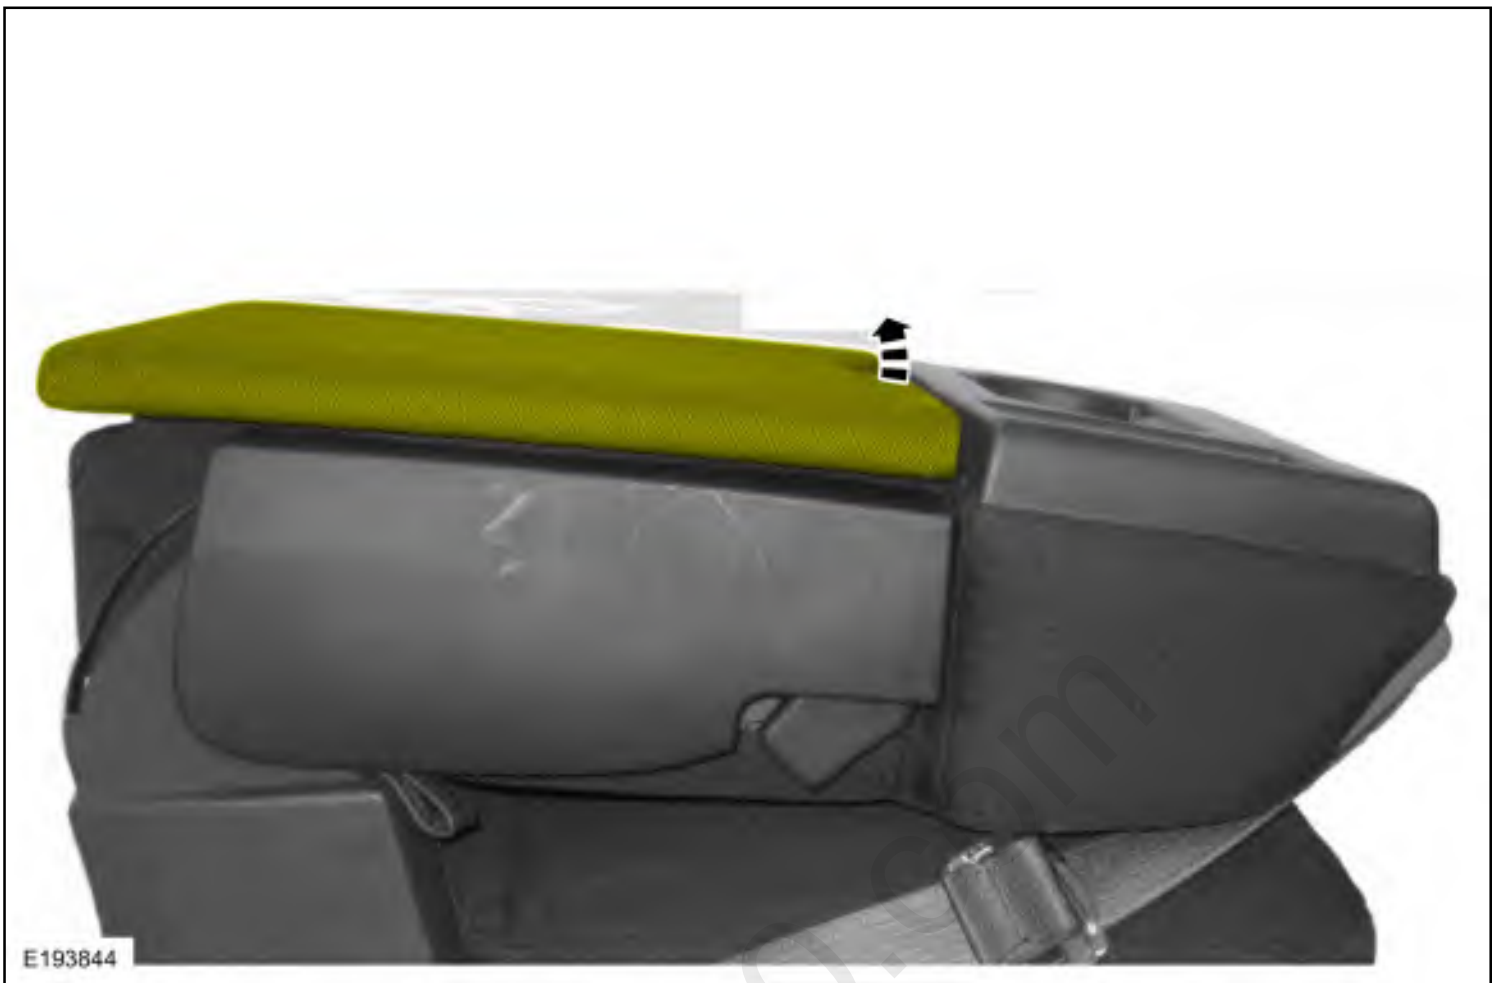


14. Remove the backrest latch cover.

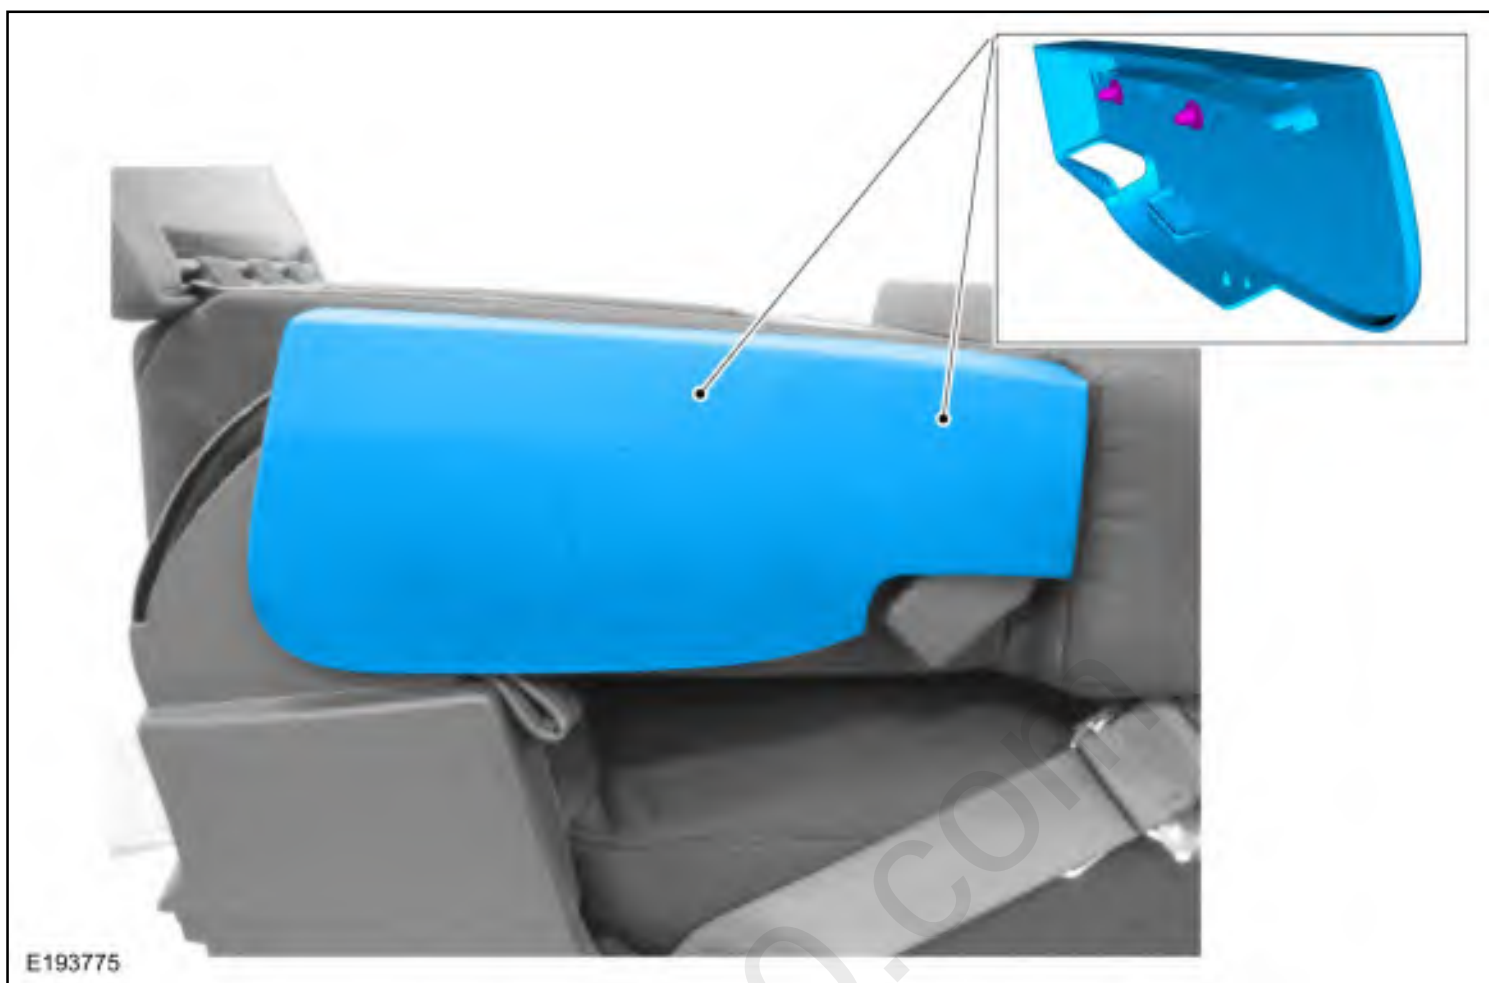


15. Remove the screws, release the retaining clip and remove the RH side shields.

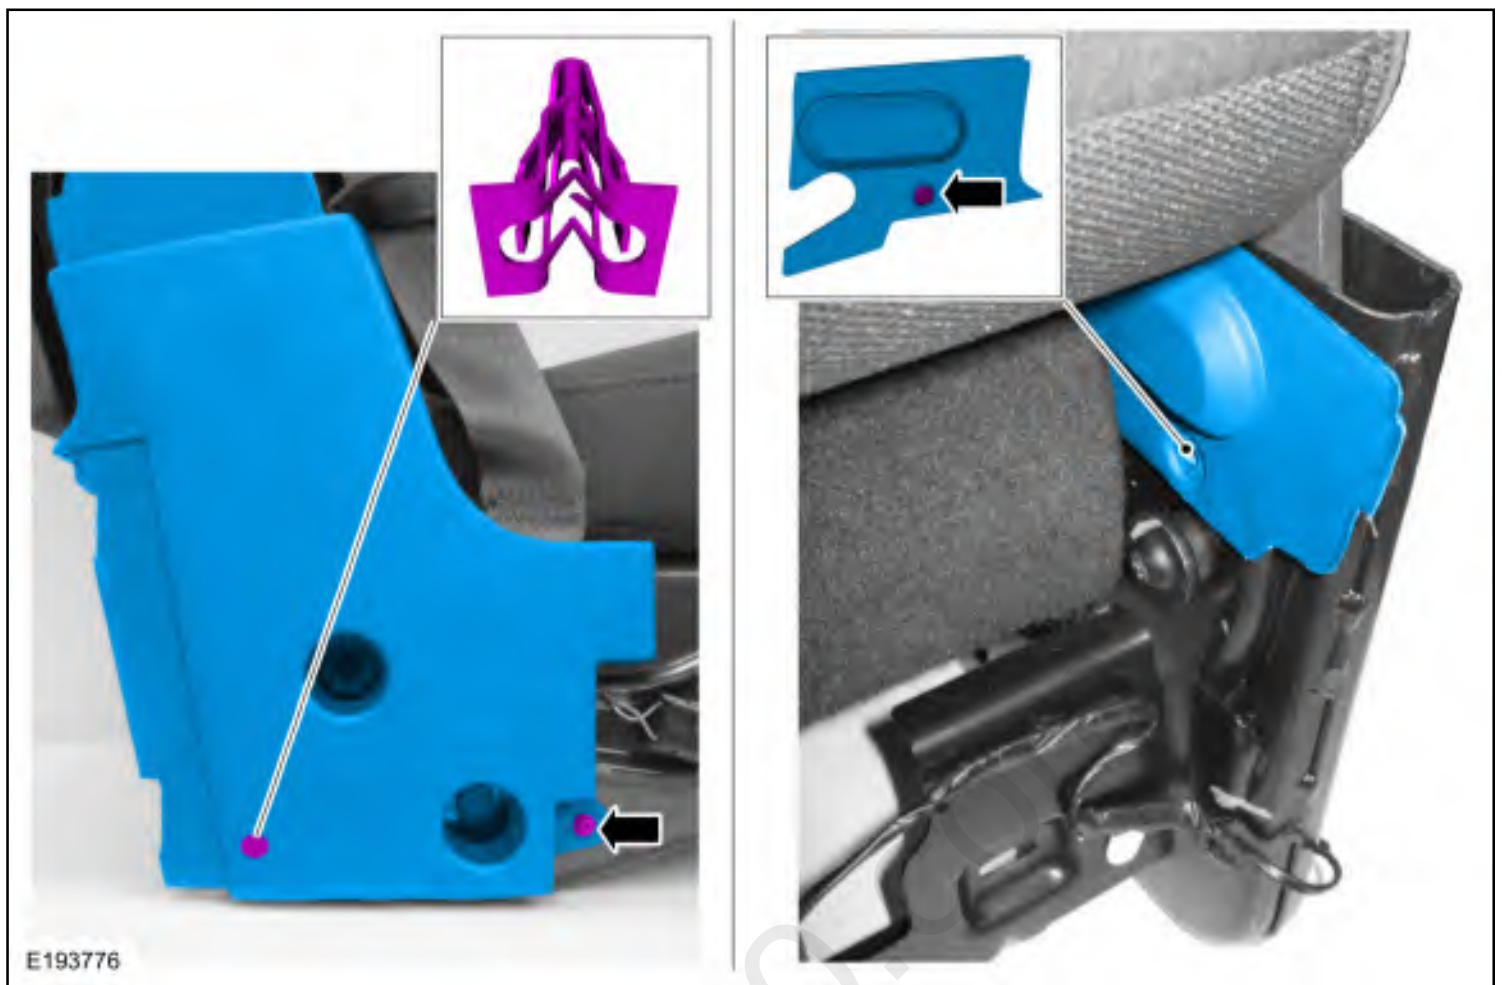

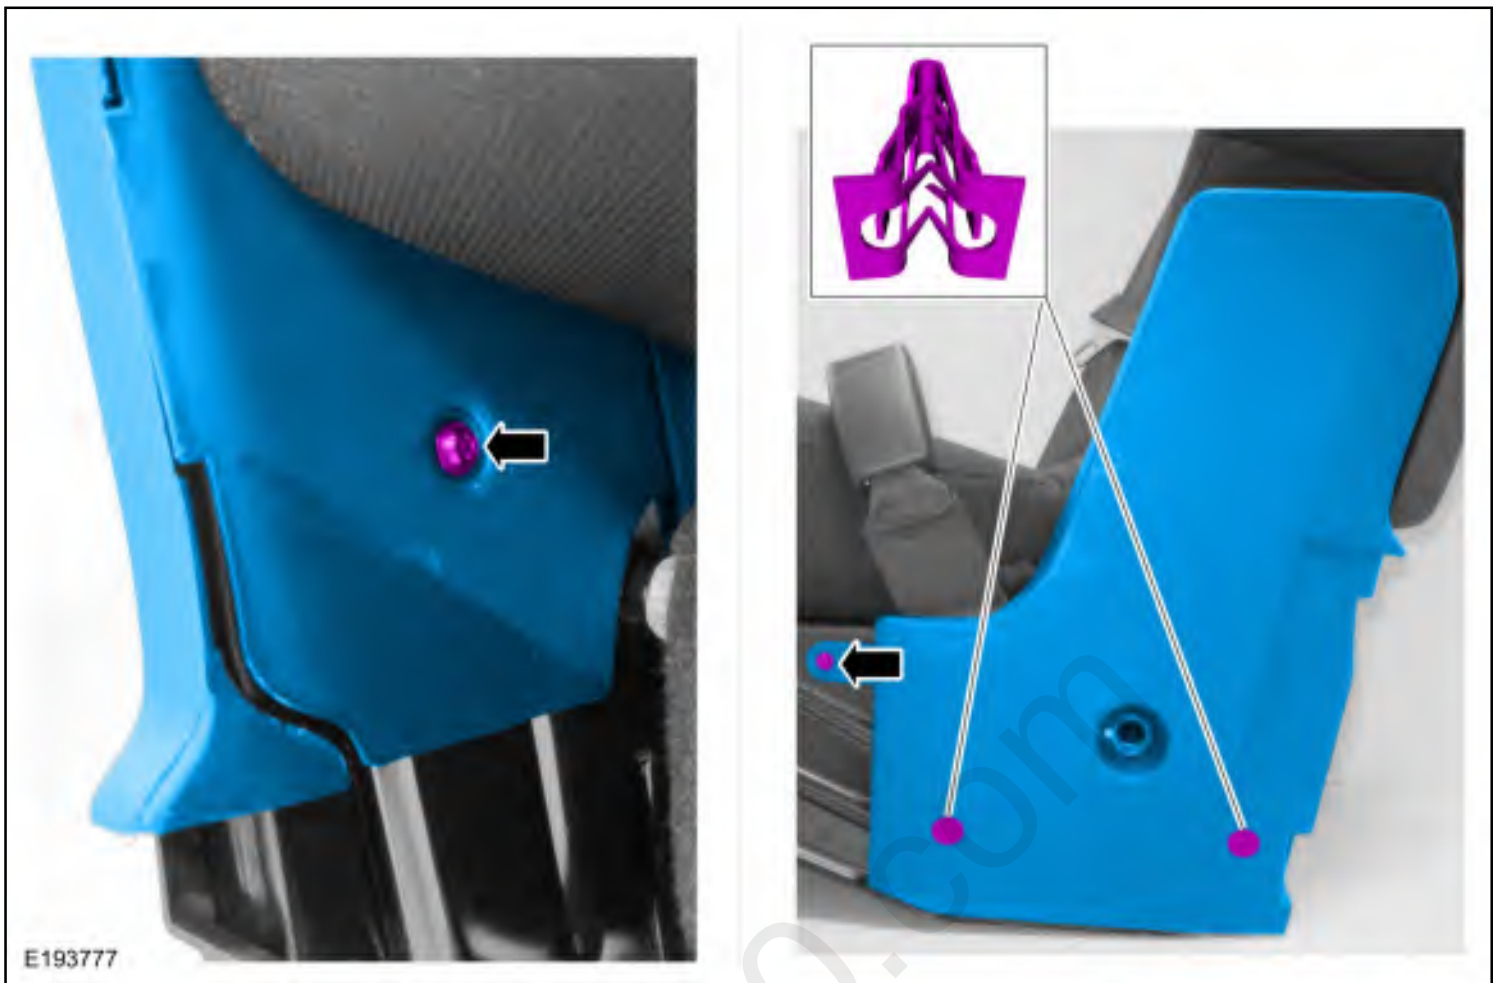


17. Release the seat latch and raise the seat backrest up.

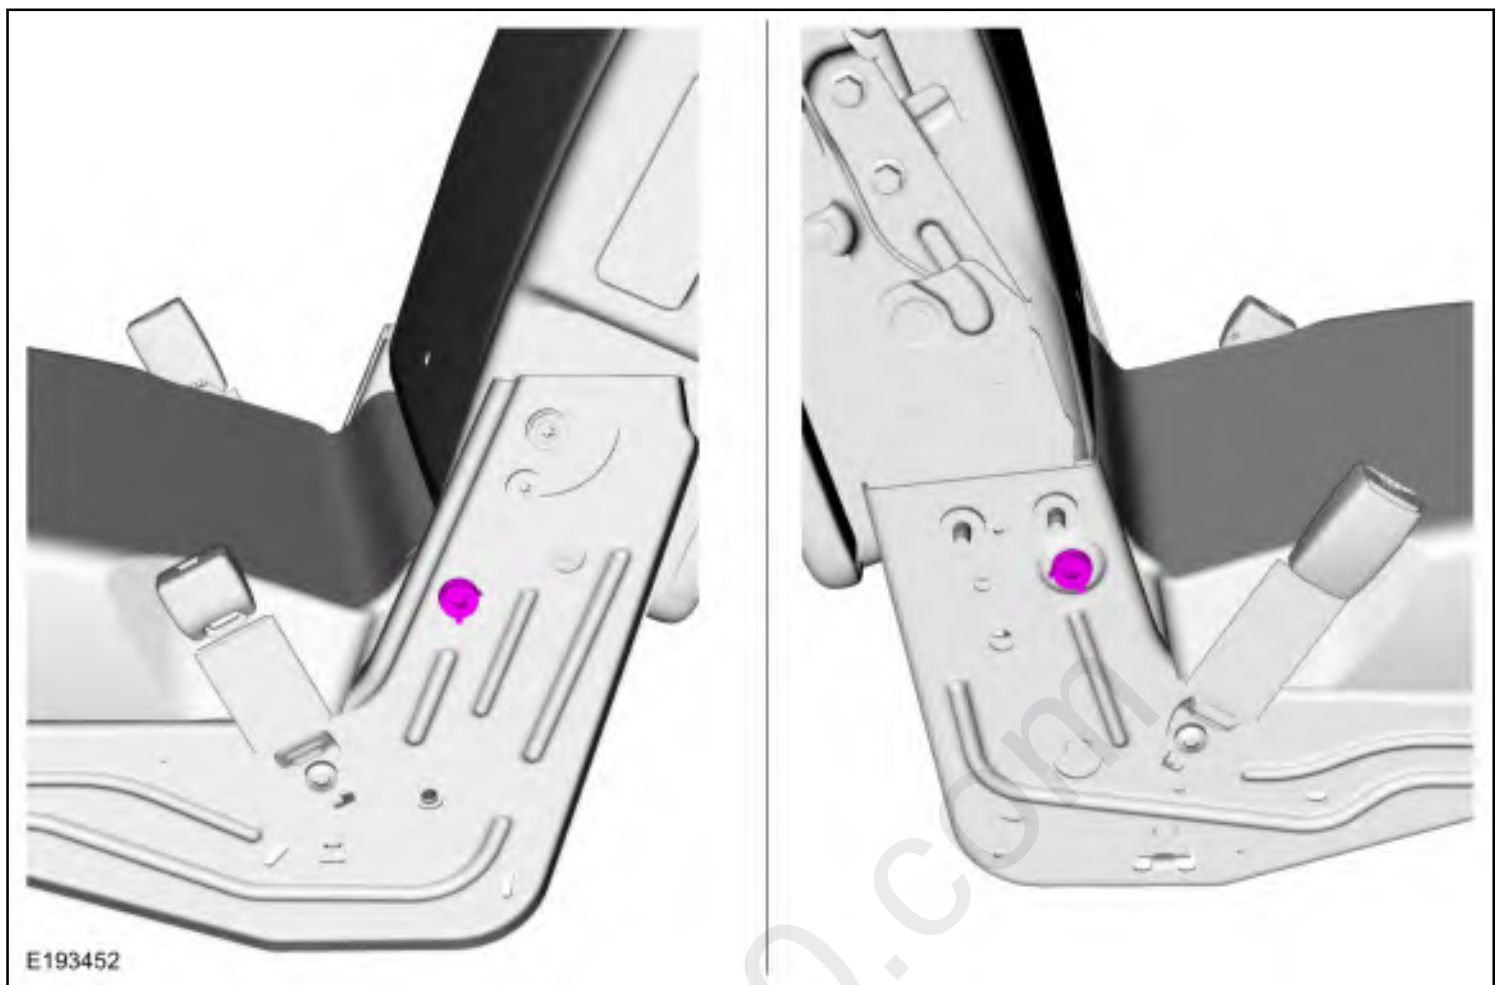

19. Release the LH side of the seat cushion from the seat cushion base and remove the seat cushion.




20. Remove the screws and the seat cushion latch.

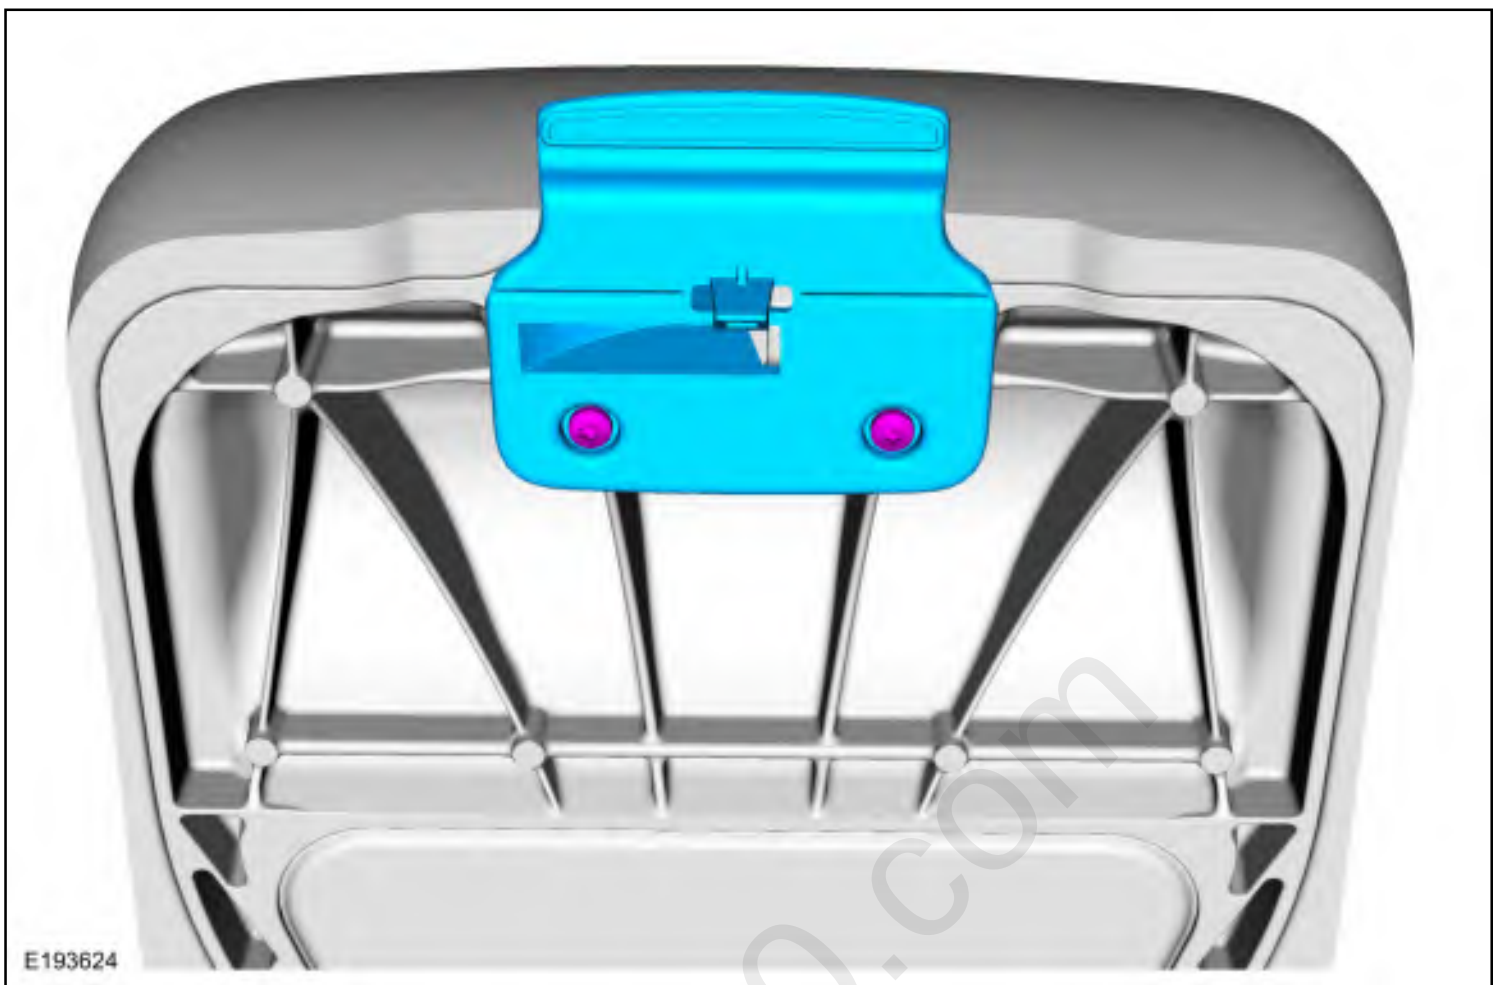

21. Release the J-hook and position the cushion cover upward.



22. Release the hook-and-loop retainer and position the cushion cover strap aside.

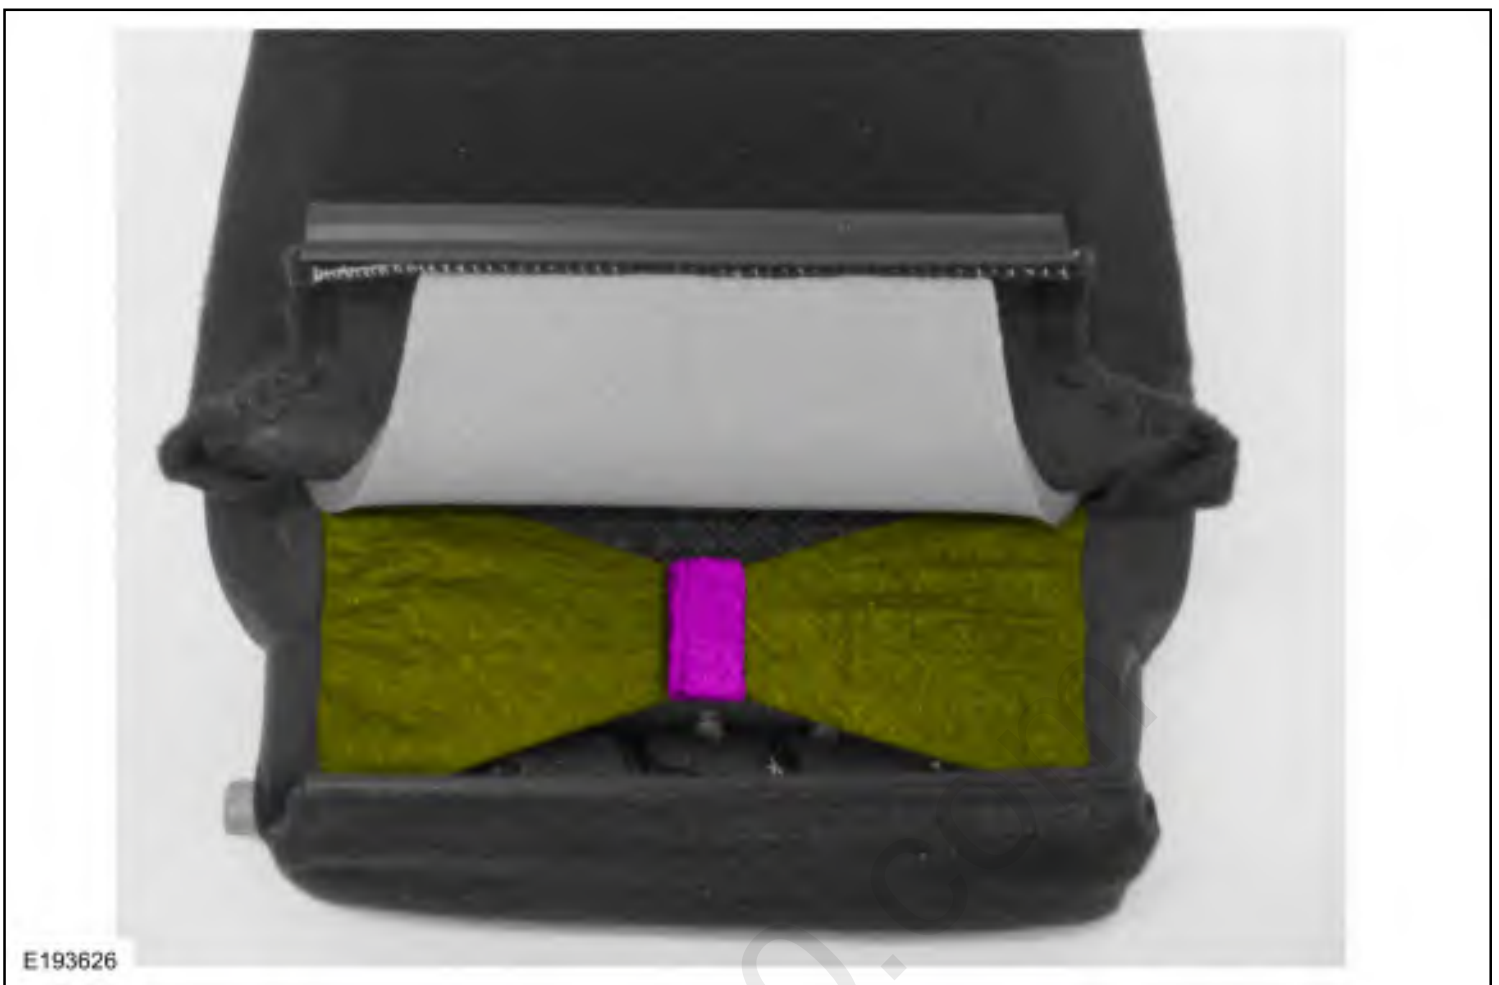

23. **NOTICE:** Use care when separating the seat cushion trim cover from the hook-and-loop strip or the hook-and-loop strip may be torn from the seat cushion foam pad.

Release the hook-and-loop strip and position the cushion cover upward.



E193628



Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company
