

Front Seat Power Lumbar Assembly

Removal

NOTE: Driver seat shown, passenger seat similar.

Regular Cab

1. Remove the front seat.
Refer to: [Front Seat](#) (501-10A Front Seats, Removal and Installation).

Seats with heated/vented seats

2. Remove the front seat backrest blower motor.
Refer to: [Front Seat Backrest Blower Motor](#) (501-10A Front Seats, Removal and Installation).

SuperCab and SuperCrew seats without heated/vented seats

3. Move the front seat to the full upward position.



E191806



4. Depower the SRS.


Refer to: [Supplemental Restraint System \(SRS\) Depowering](#) (501-20B Supplemental Restraint System, General Procedures).

Seats without heated/vented seat


5. Detach the electrical connector retainers and position the wiring harnesses aside.



7. Detach the backrest cover lower J-clip.

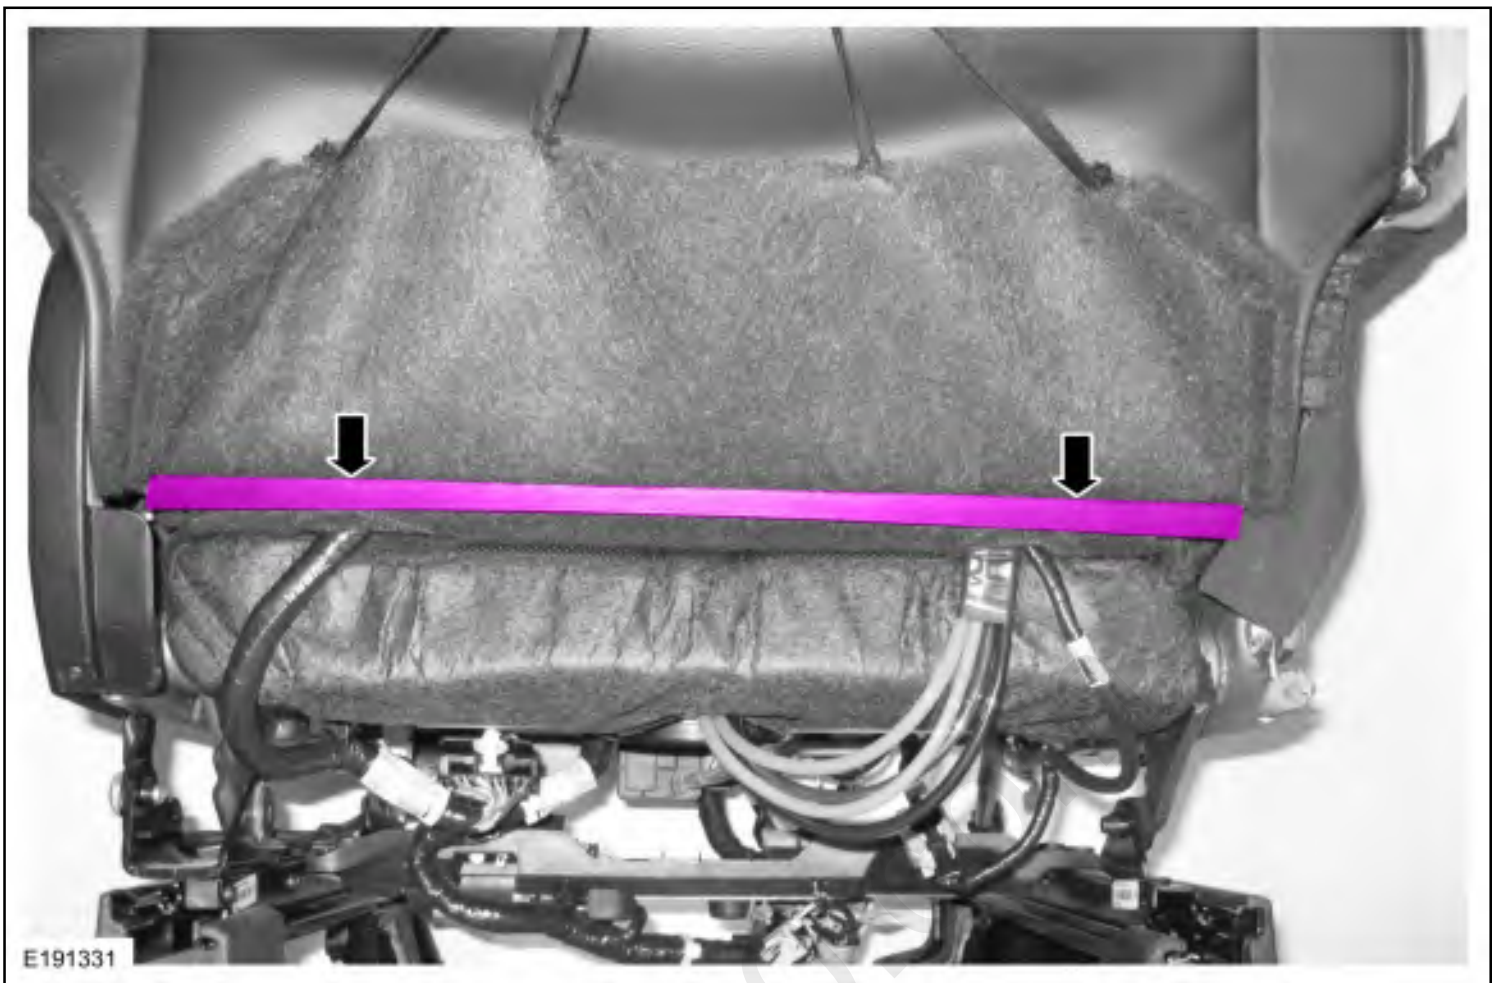


8. Detach the hook-and-loop retainer and position the backrest cover strap aside.

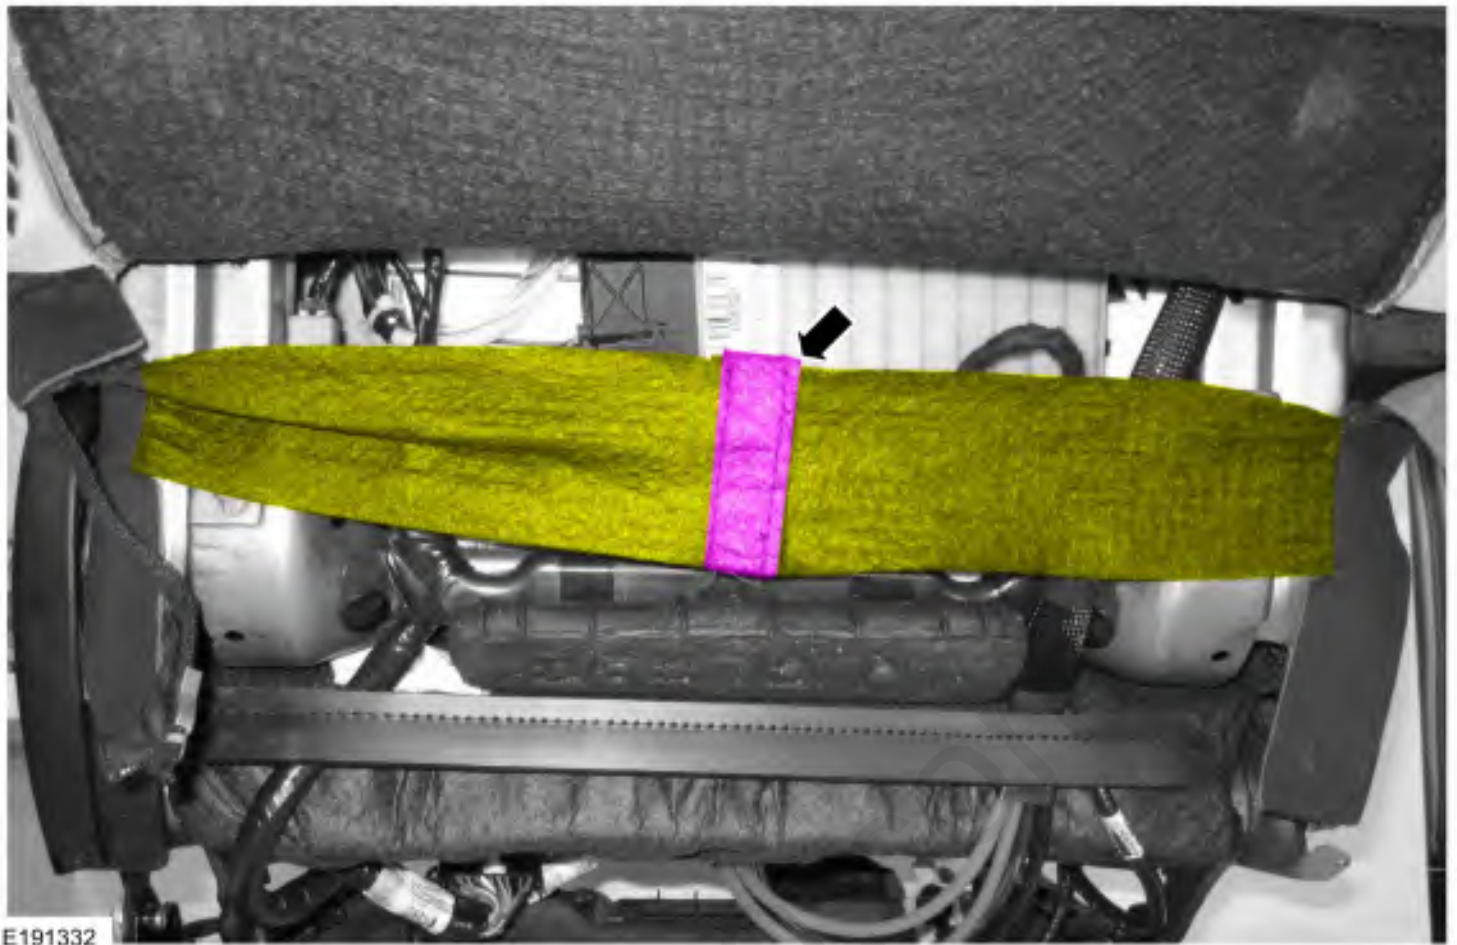


9. **NOTE:** *To install, gradually alternate the left and right seat backrest cover zippers to prevent damage to the seat backrest cover.*

1. Unzip the backrest cover zipper on each side.
2. Position the backrest cover upward.
3. Detach the J-clips from the lumbar wire.

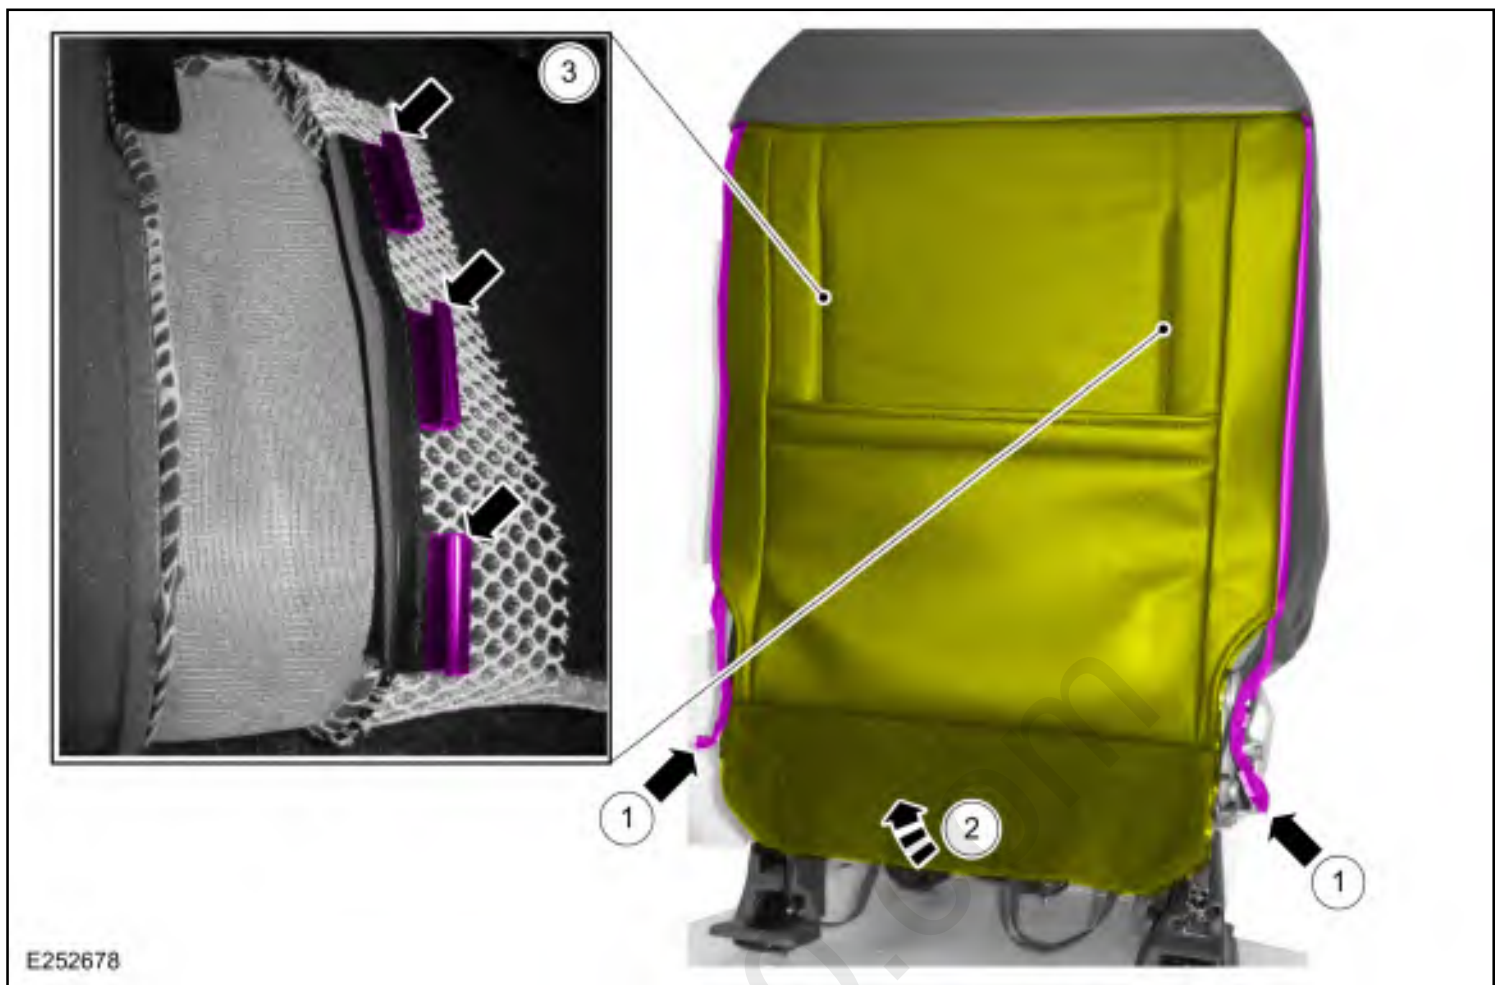

All Seats

10. Disconnect the electrical connector, release the J-hooks, and remove the power lumbar assembly.

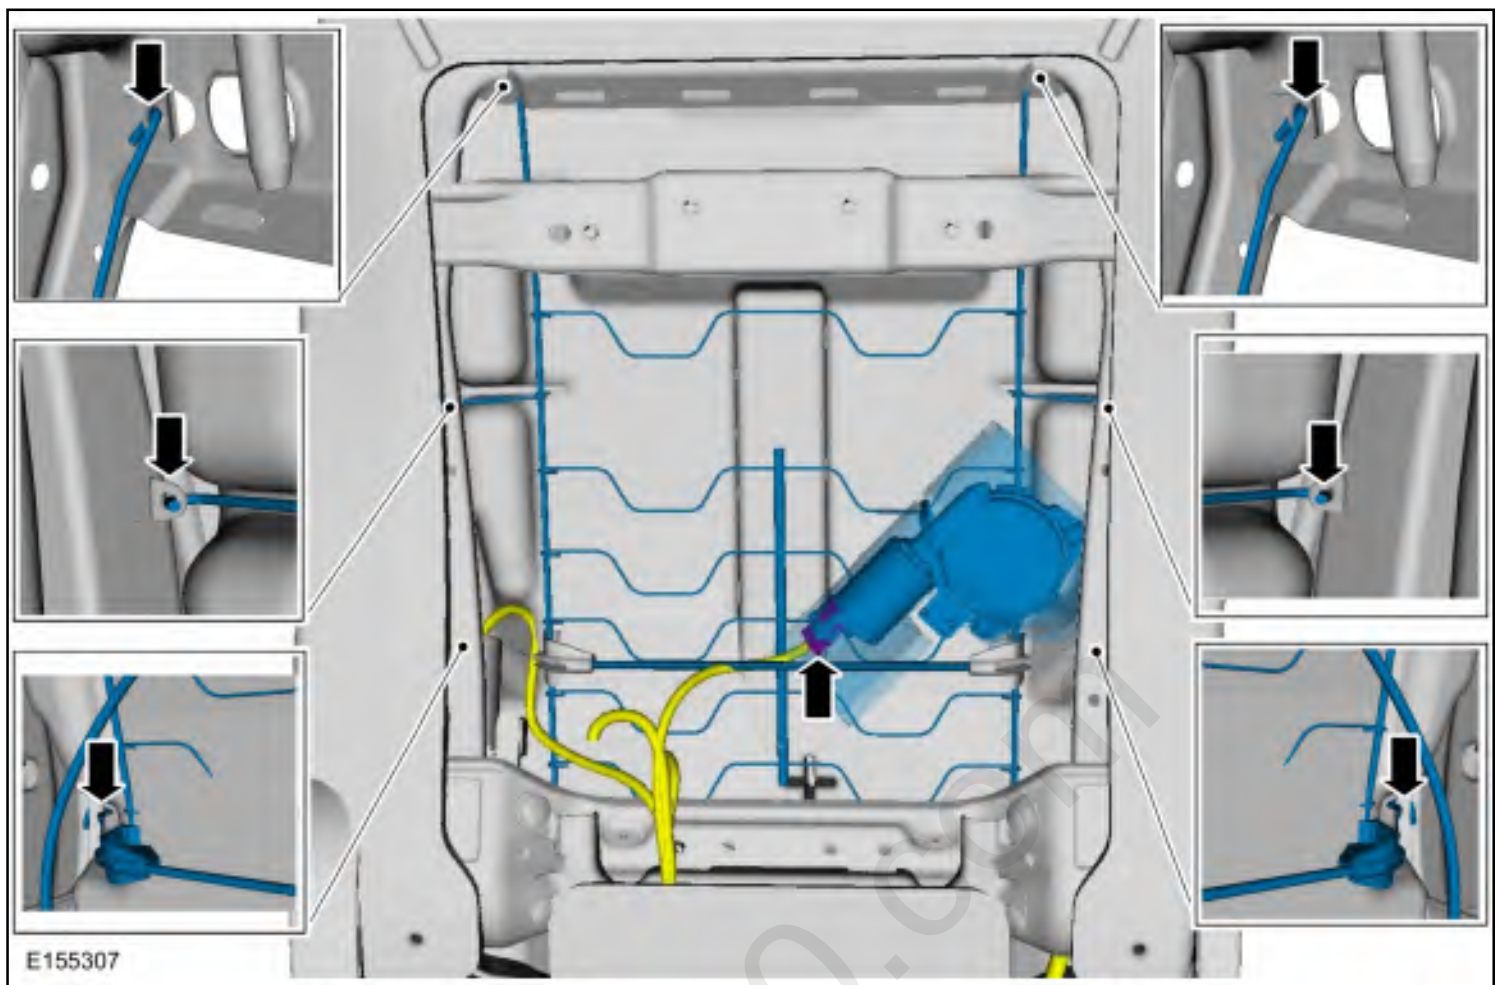

Installation

All seats

1. To install, reverse the removal procedure.

SuperCab and SuperCrew seats without heated/vented seats

2. Repower the SRS.
Refer to: [Supplemental Restraint System \(SRS\) Repowering](#) (501-20B Supplemental Restraint System, General Procedures).