

Rear Seat RH - SuperCab


Removal

NOTE: Removal steps in this procedure may contain installation details.


1.
Remove the seat front fasteners.
 1. Using the seat cushion latch handle, raise the cushion.
 2. Remove the fasteners.
Torque: 19 lb.ft (26 Nm)




2. Pull the backrest release strap and fold the seat backrest forward.

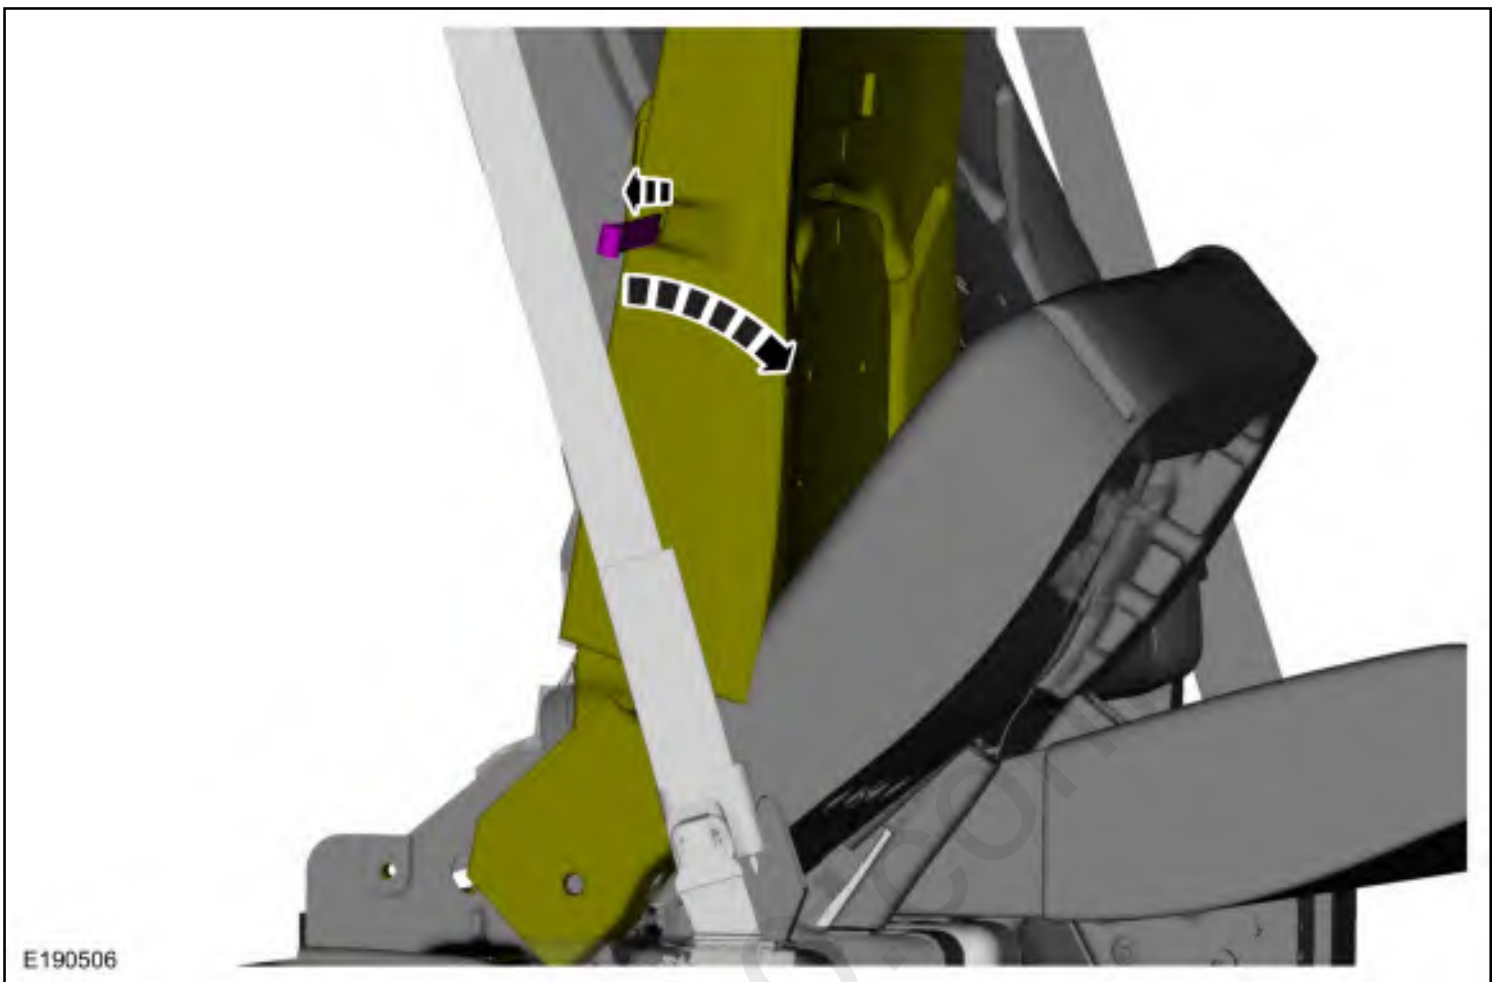

3. Remove the outboard seatbelt retractor-to-seat fastener.
Torque: 30 lb.ft (40 Nm)

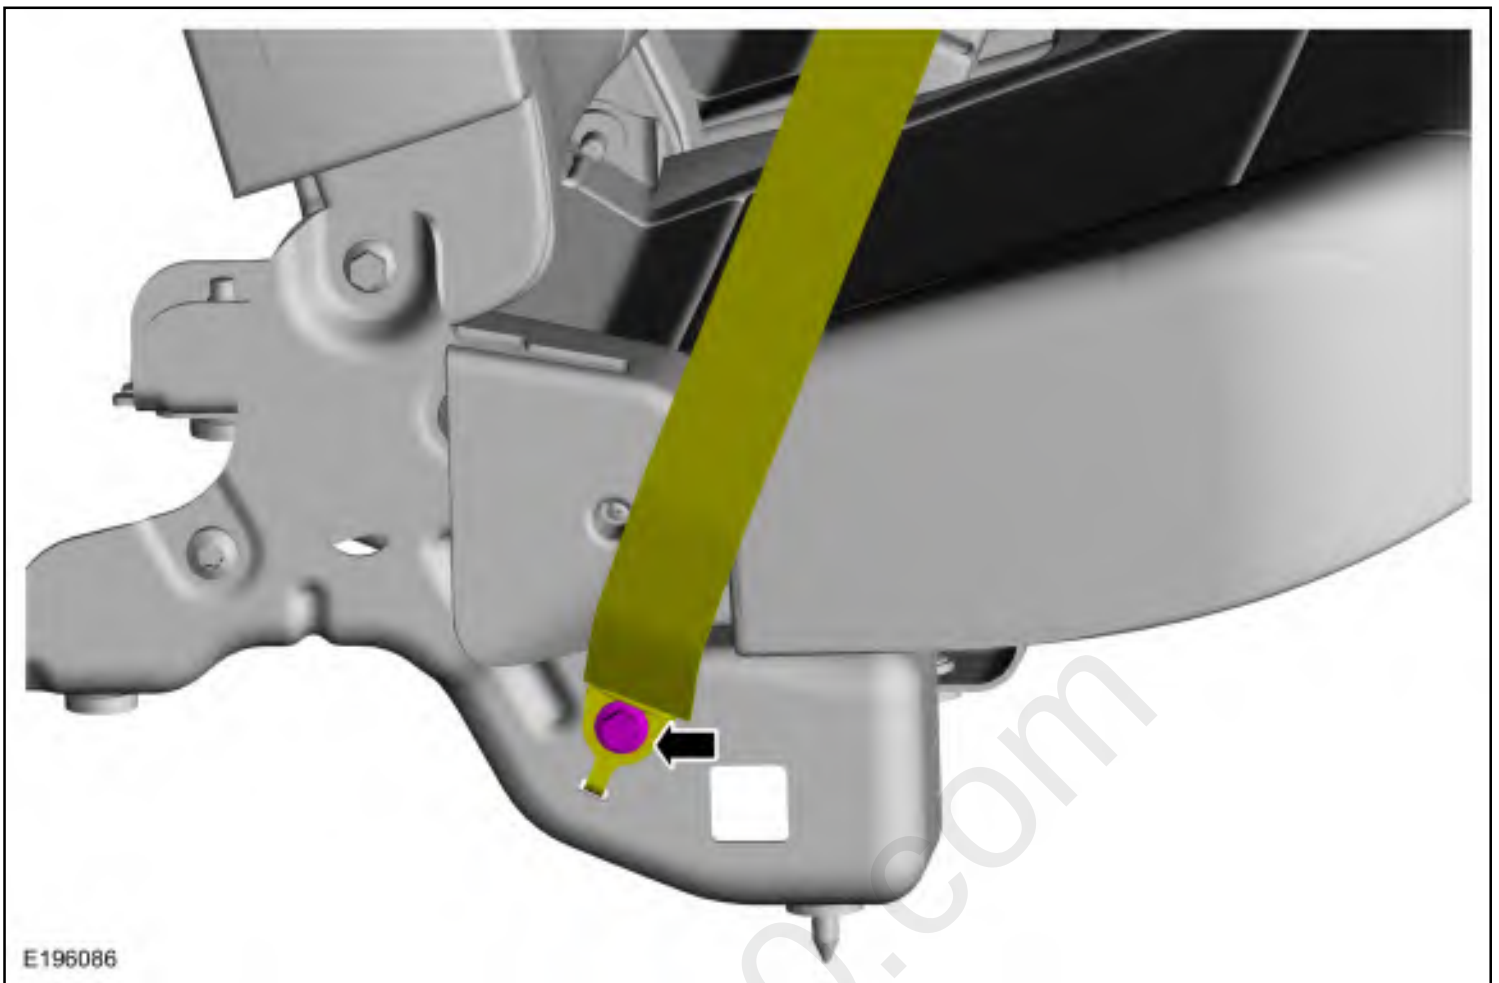

4. Remove the seat rear fasteners. Remove the seat.
Torque: 59 lb.ft (80 Nm)

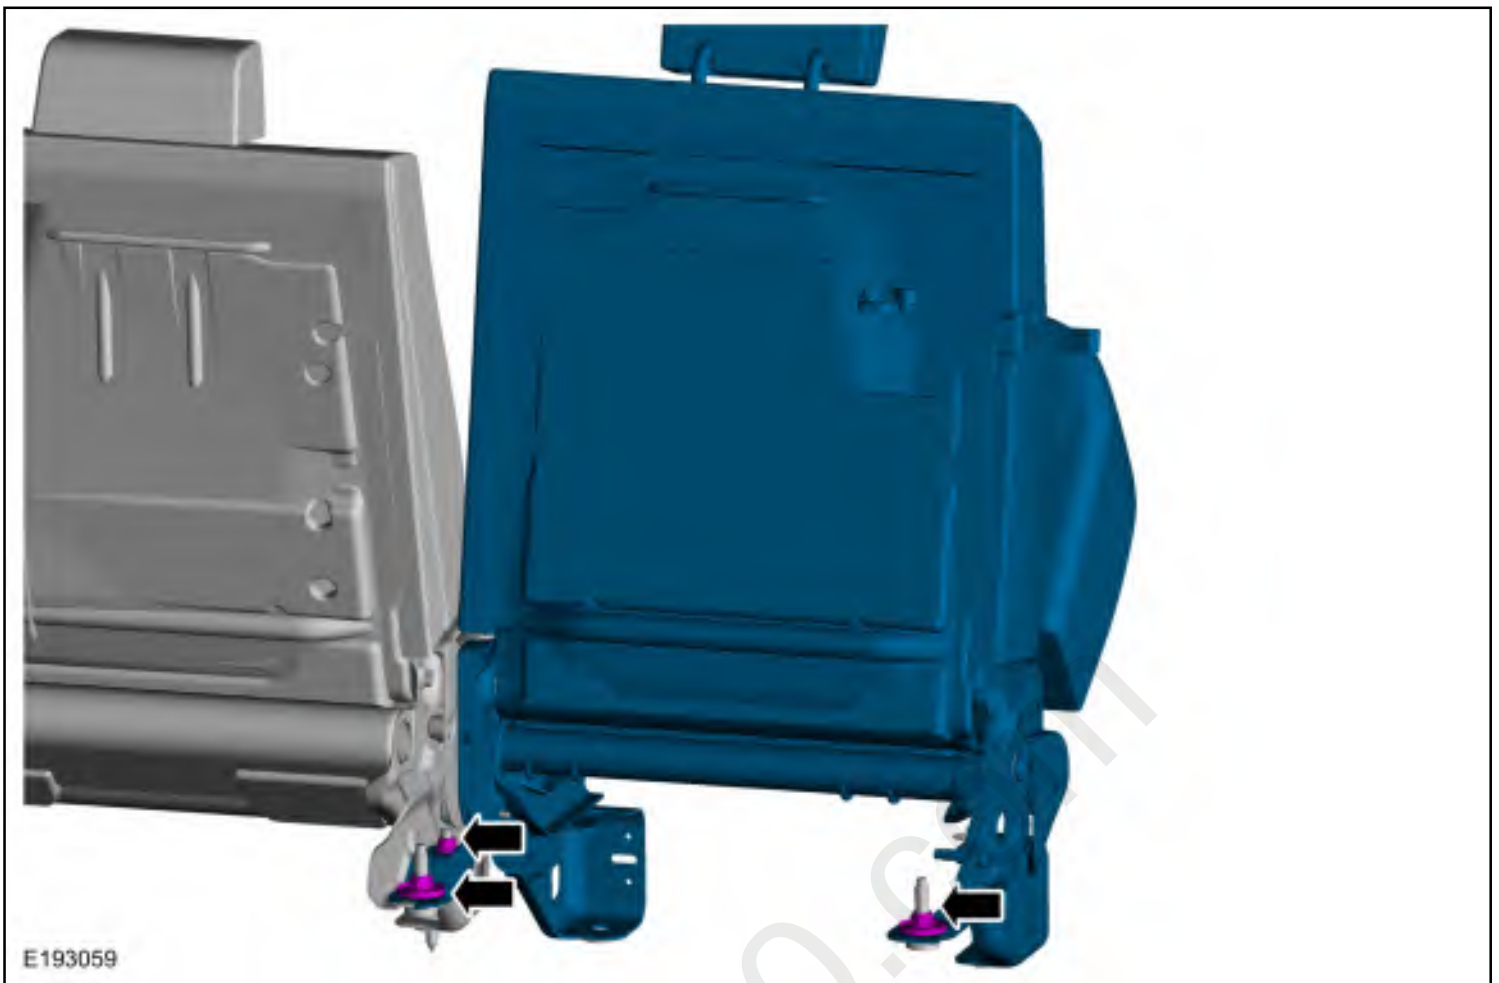

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company
