


Rear Seat LH - SuperCab

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Remove the RH seat.
Refer to: [Rear Seat RH - SuperCab](#) (501-10B Rear Seats, Removal and Installation).
2. Remove the outboard safety belt retractor-to-seat fastener.
Torque: 30 lb.ft (40 Nm)

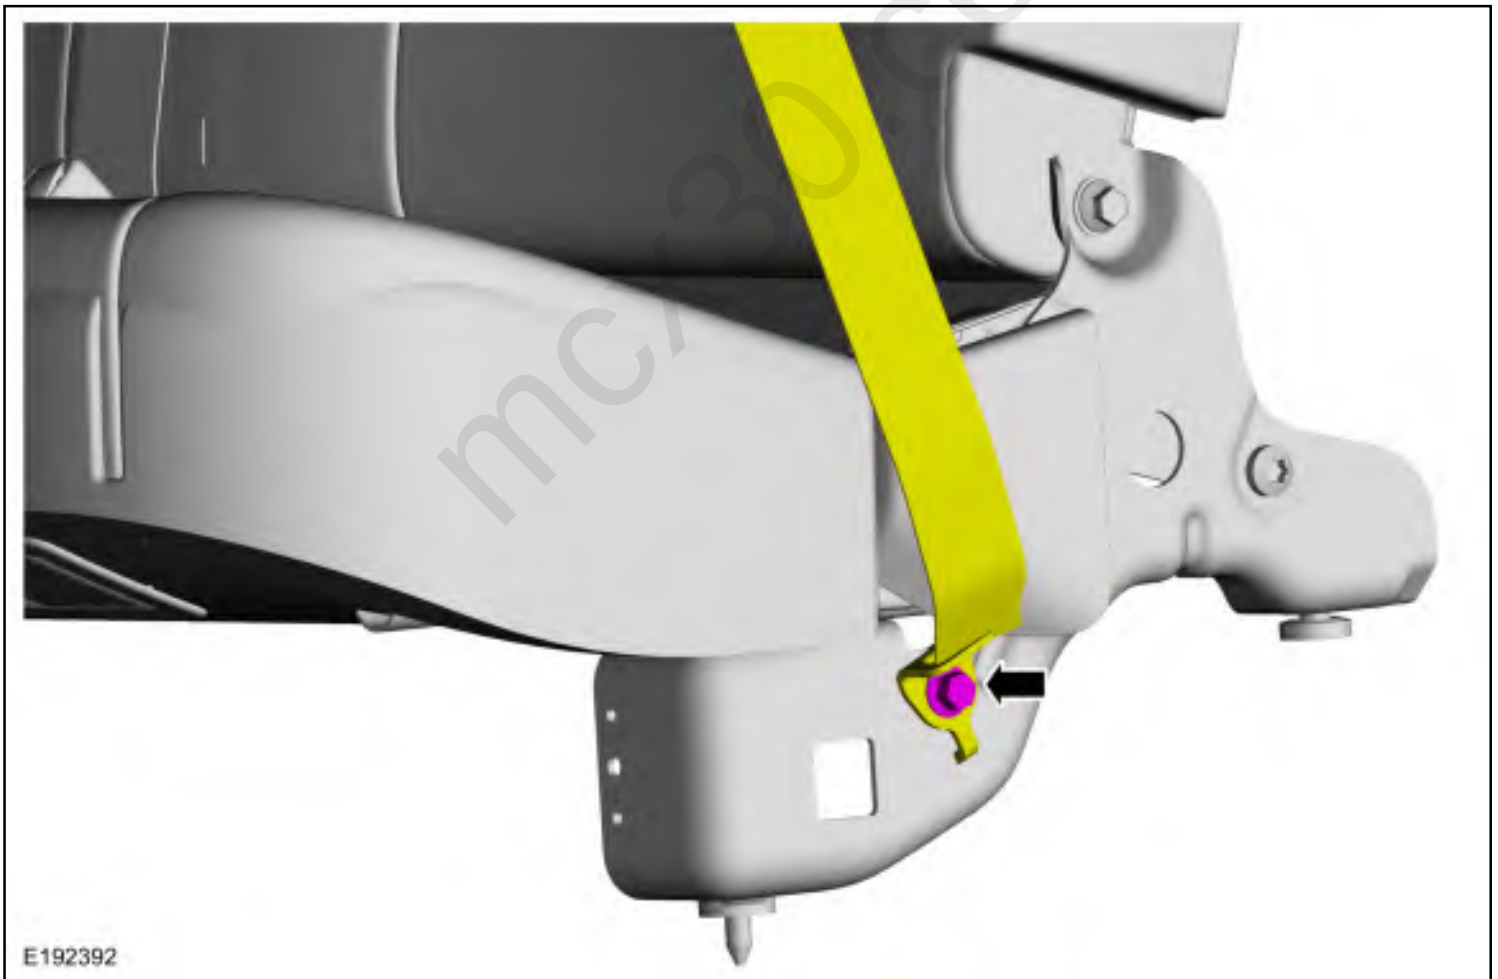

3. Remove the seat front fasteners.


1. Using the cushion latch handle, raise the seat cushion.
2. Remove the fasteners.
Torque: 26 lb.ft (35 Nm)

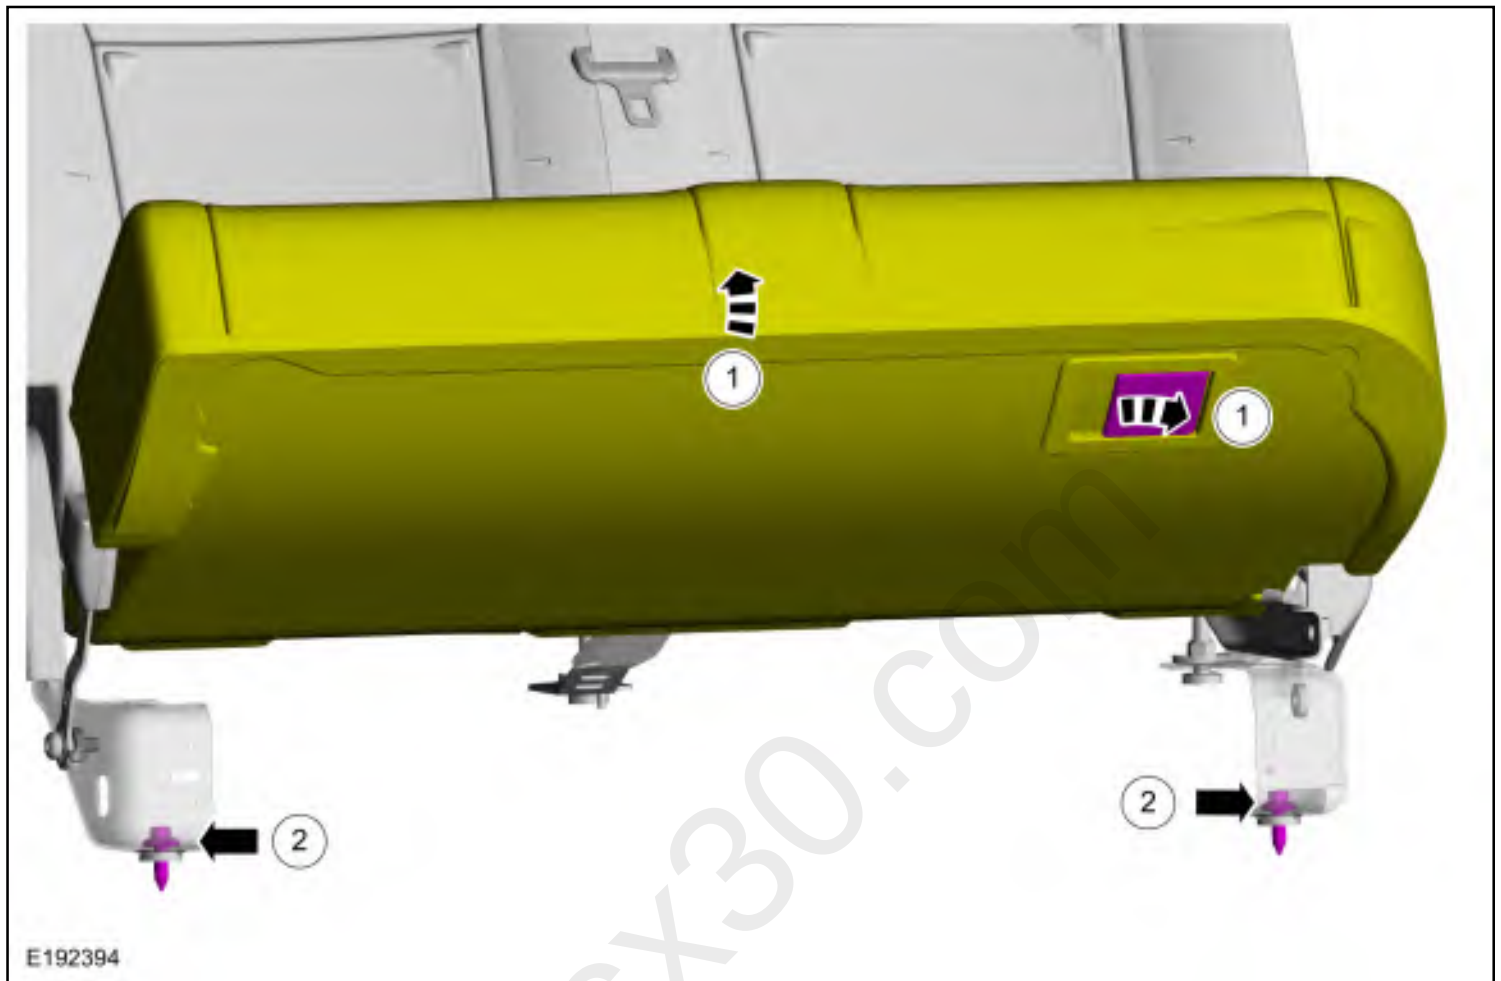

4. **NOTE:** *The striker should be in its lowest position for the latch to engage.*


Lower the LH backrest.

1. Pull the backrest release strap and release the latch from the striker.
2. Lower the backrest.

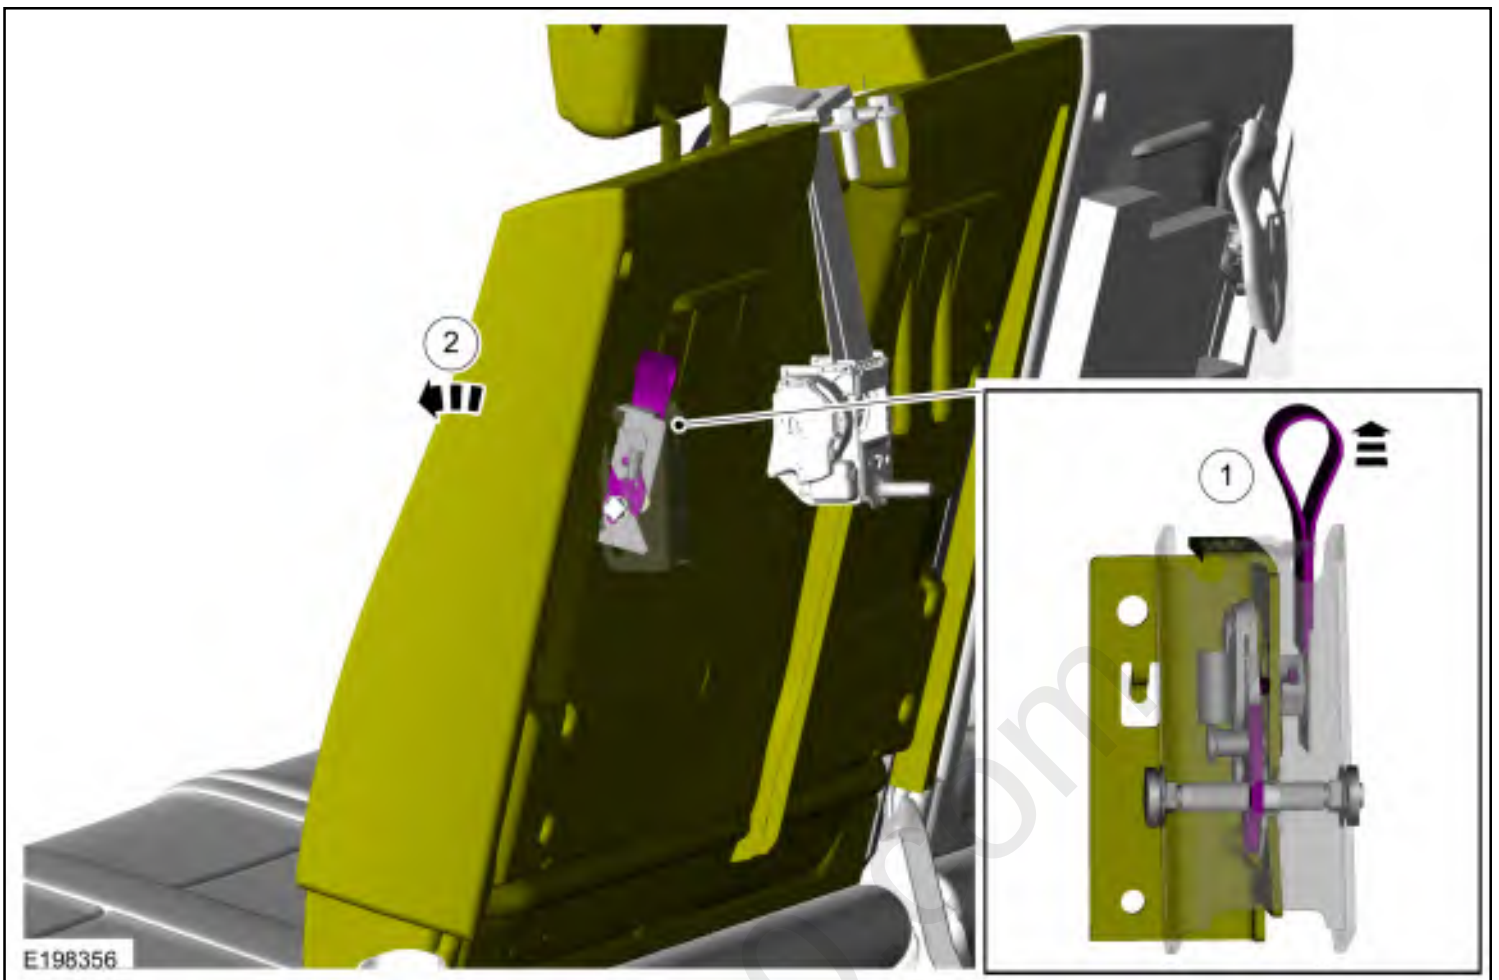

5. If equipped with a subwoofer, disconnect the electrical connector, remove the fasteners and remove the subwoofer.

Torque: 62 lb.in (7 Nm)

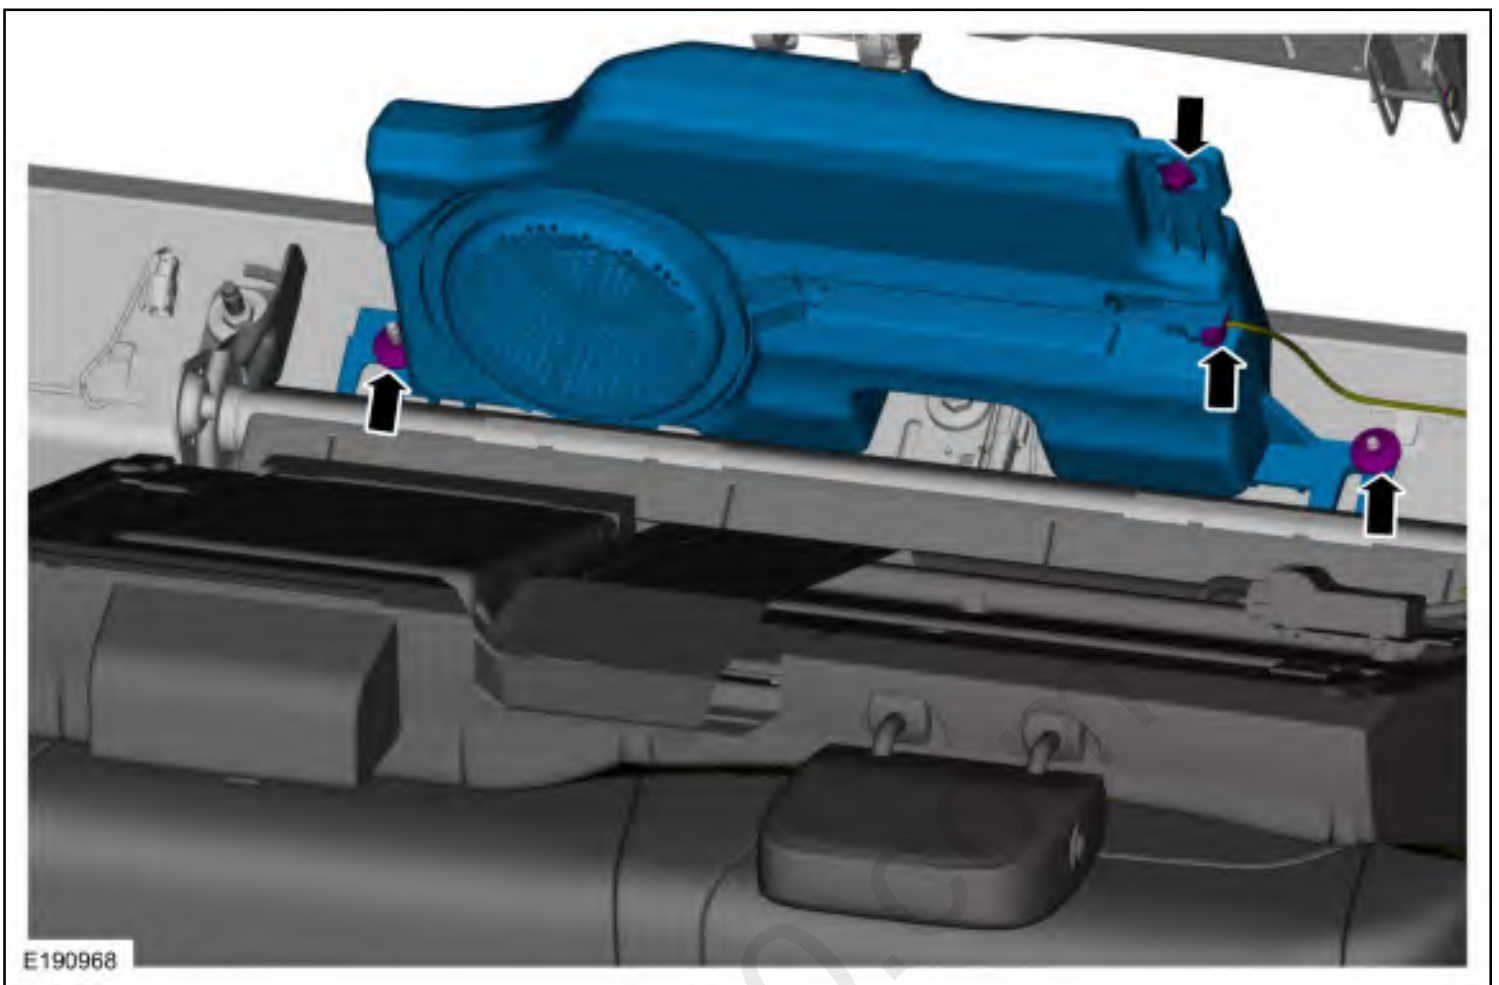

6. Remove the seat rear fasteners.
Torque: 59 lb.ft (80 Nm)



E192399



7. Remove the seat.

1. Route center safety belt through the cushion opening.
2. Remove the seat.



Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company