


Rear Seat RH - SuperCrew

Removal


NOTE: Removal steps in this procedure may contain installation details.

All vehicles

1. Remove the seat front fasteners.
 1. Using the seat cushion latch handle, raise the cushion.
 2. Remove the fasteners.
Torque: 26 lb.ft (35 Nm)

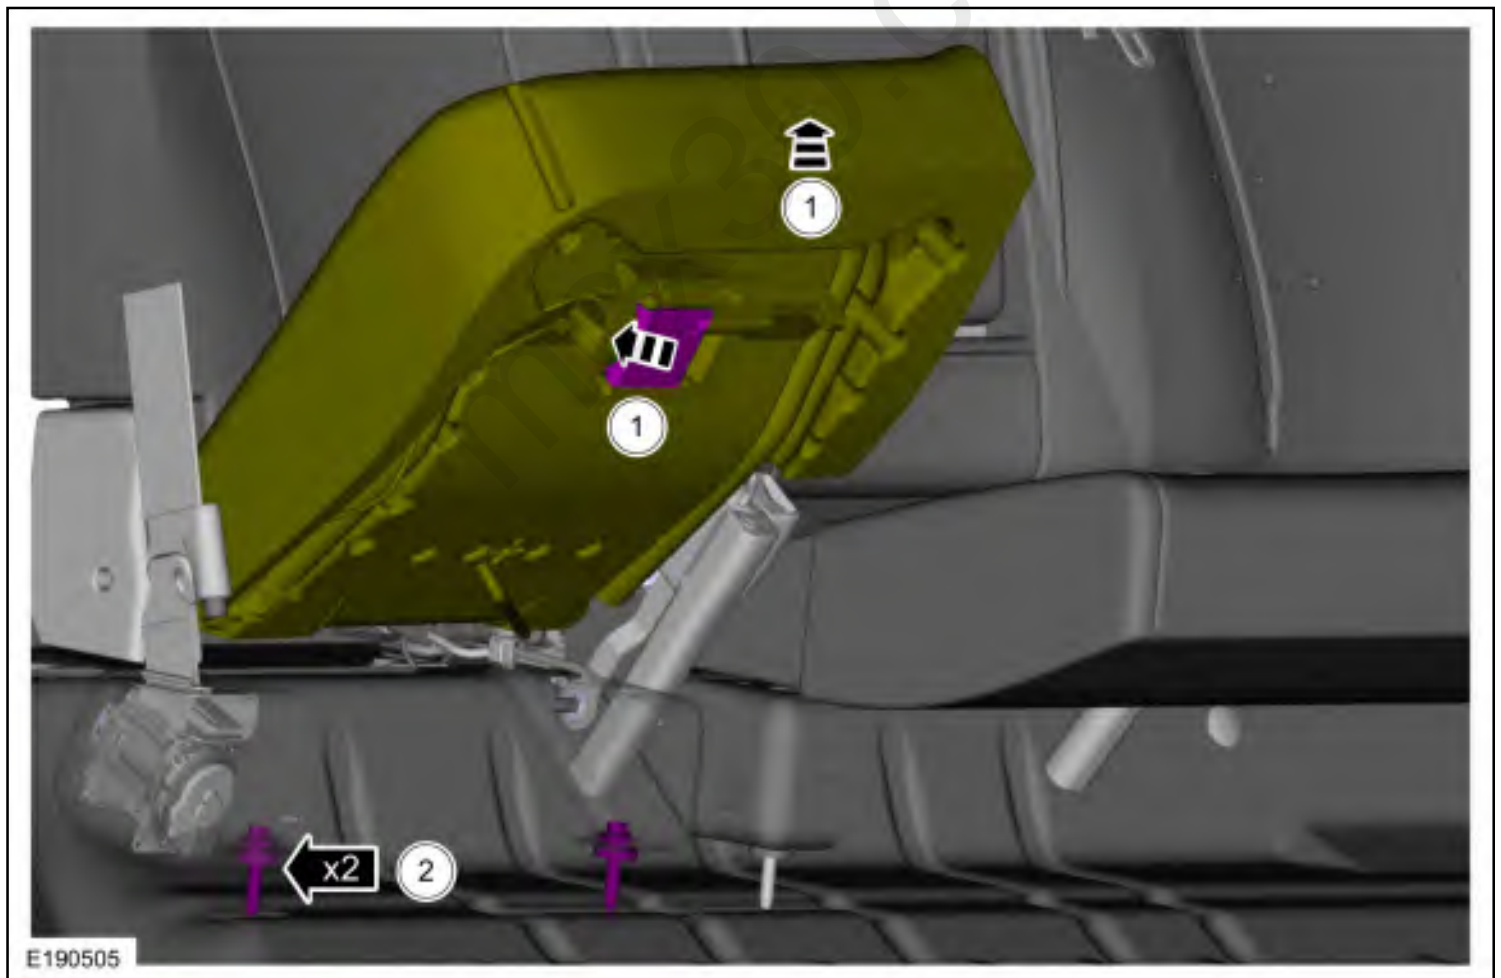

2. Pull the backrest release strap and fold the seat backrest forward.

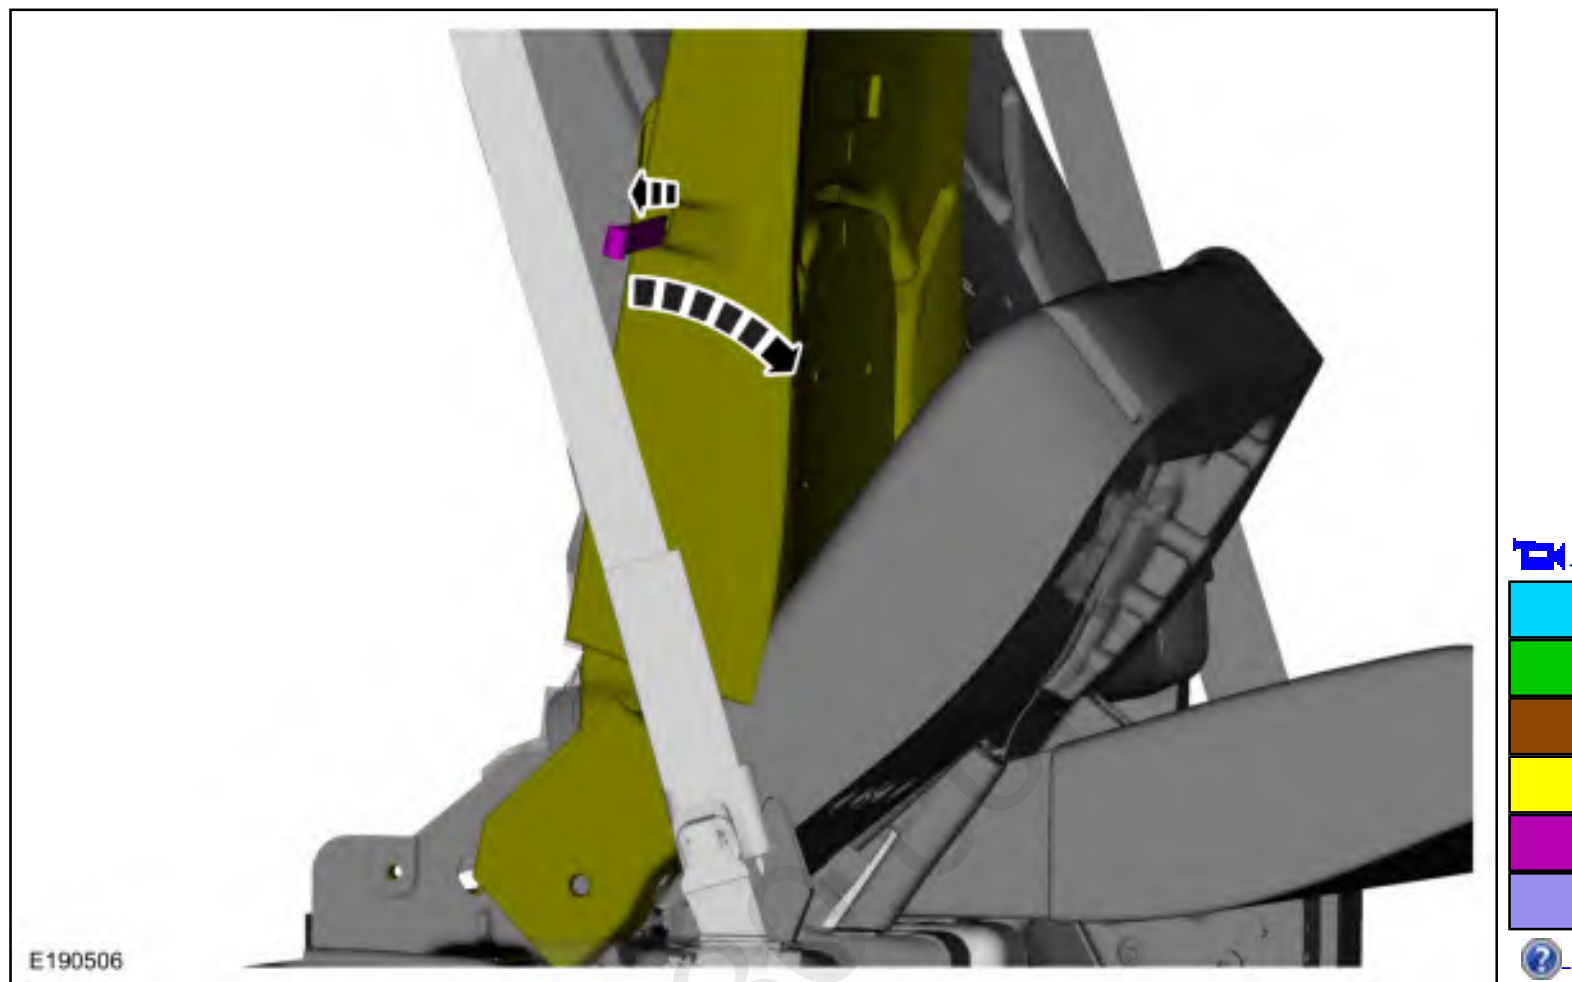


3. Release the hook-and-loop strap and remove the vehicle jack.




Vehicles with inflatable safety belts

4. Depower the SRS.
Refer to: [Supplemental Restraint System \(SRS\) Depowering](#) (501-20B Supplemental Restraint System, General Procedures).
5. Remove the lower safety belt anchor bolt cover.

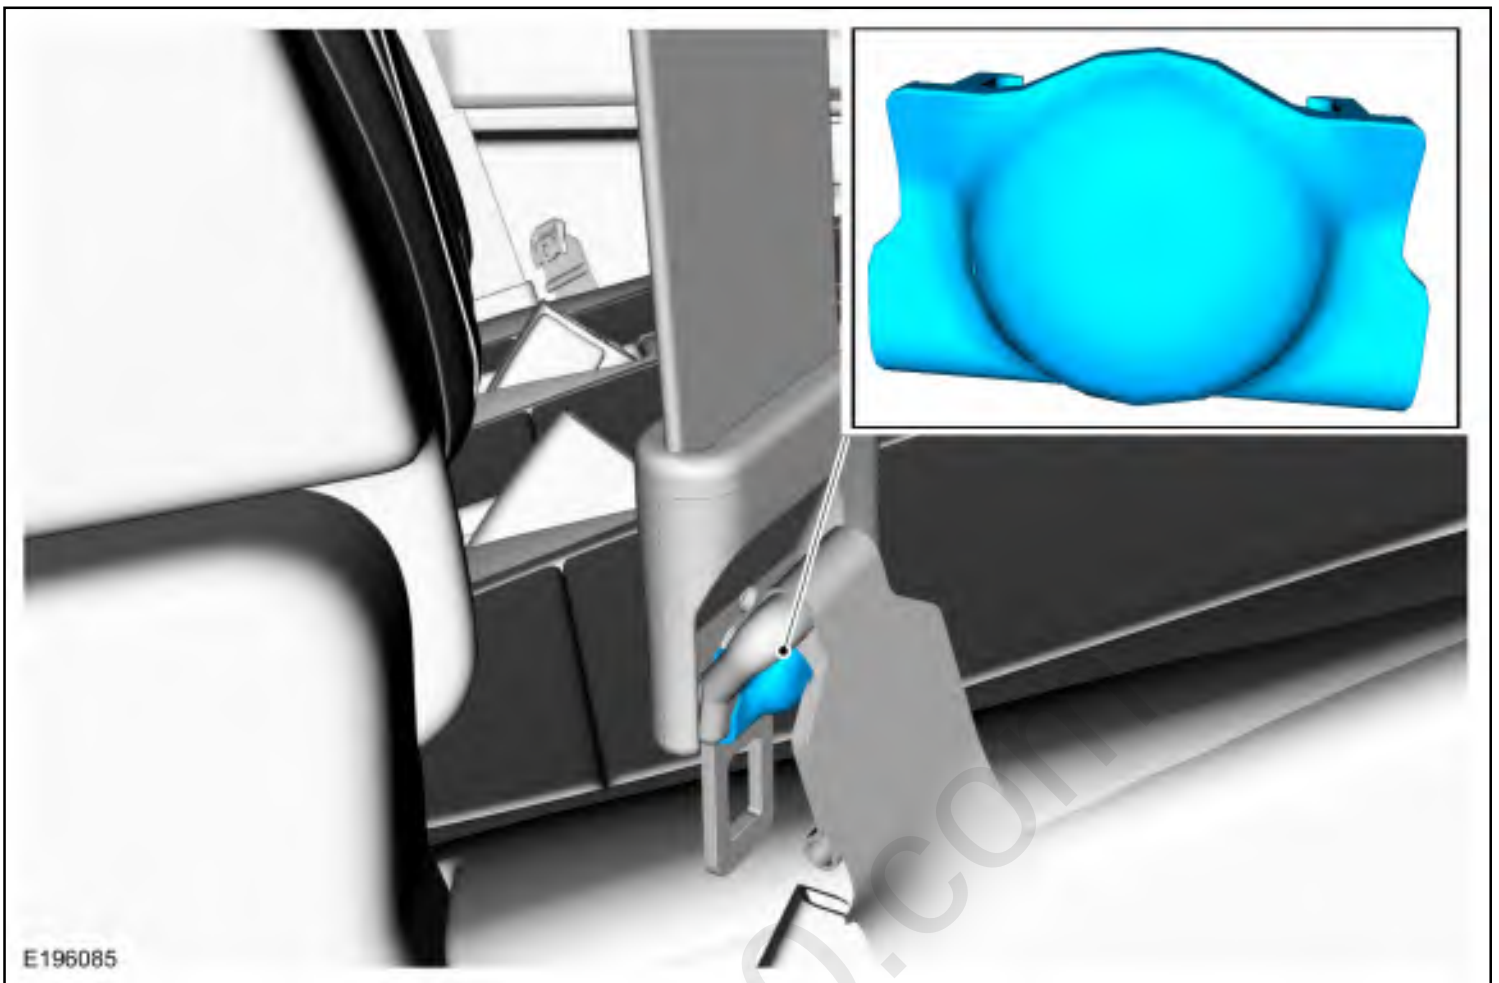


6. Remove the anchor bolt and separate the upper safety belt from the lower safety belt.
Torque: 71 lb.in (8 Nm)

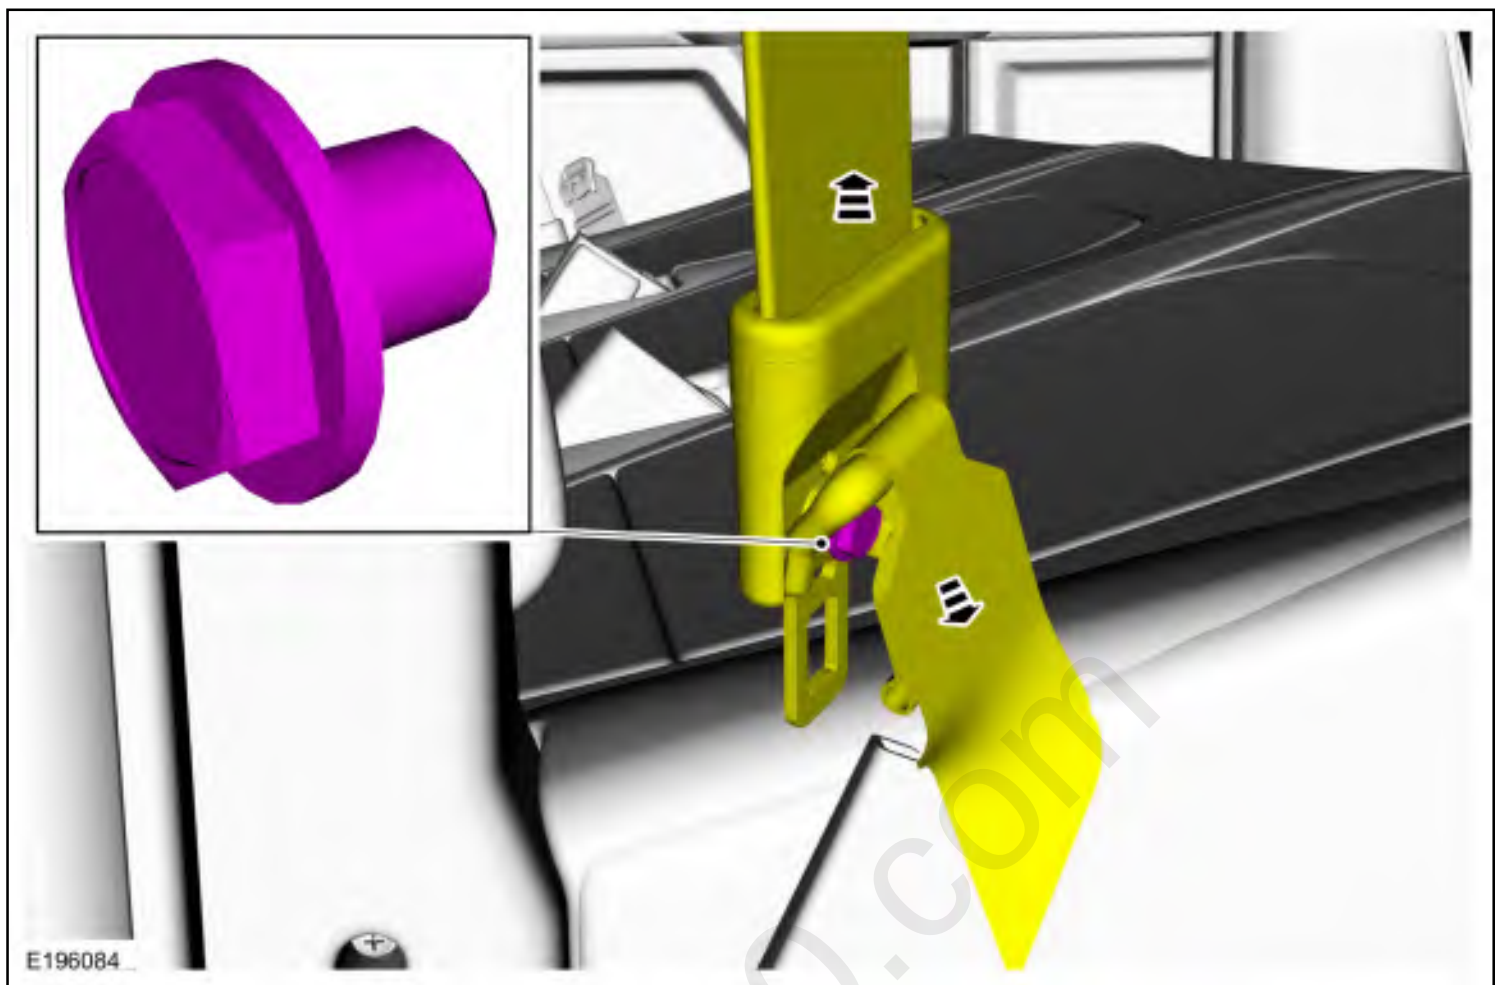


Vehicles without inflatable safety belts

7. Remove the outboard safety belt retractor-to-seat fastener.
Torque: 30 lb.ft (40 Nm)

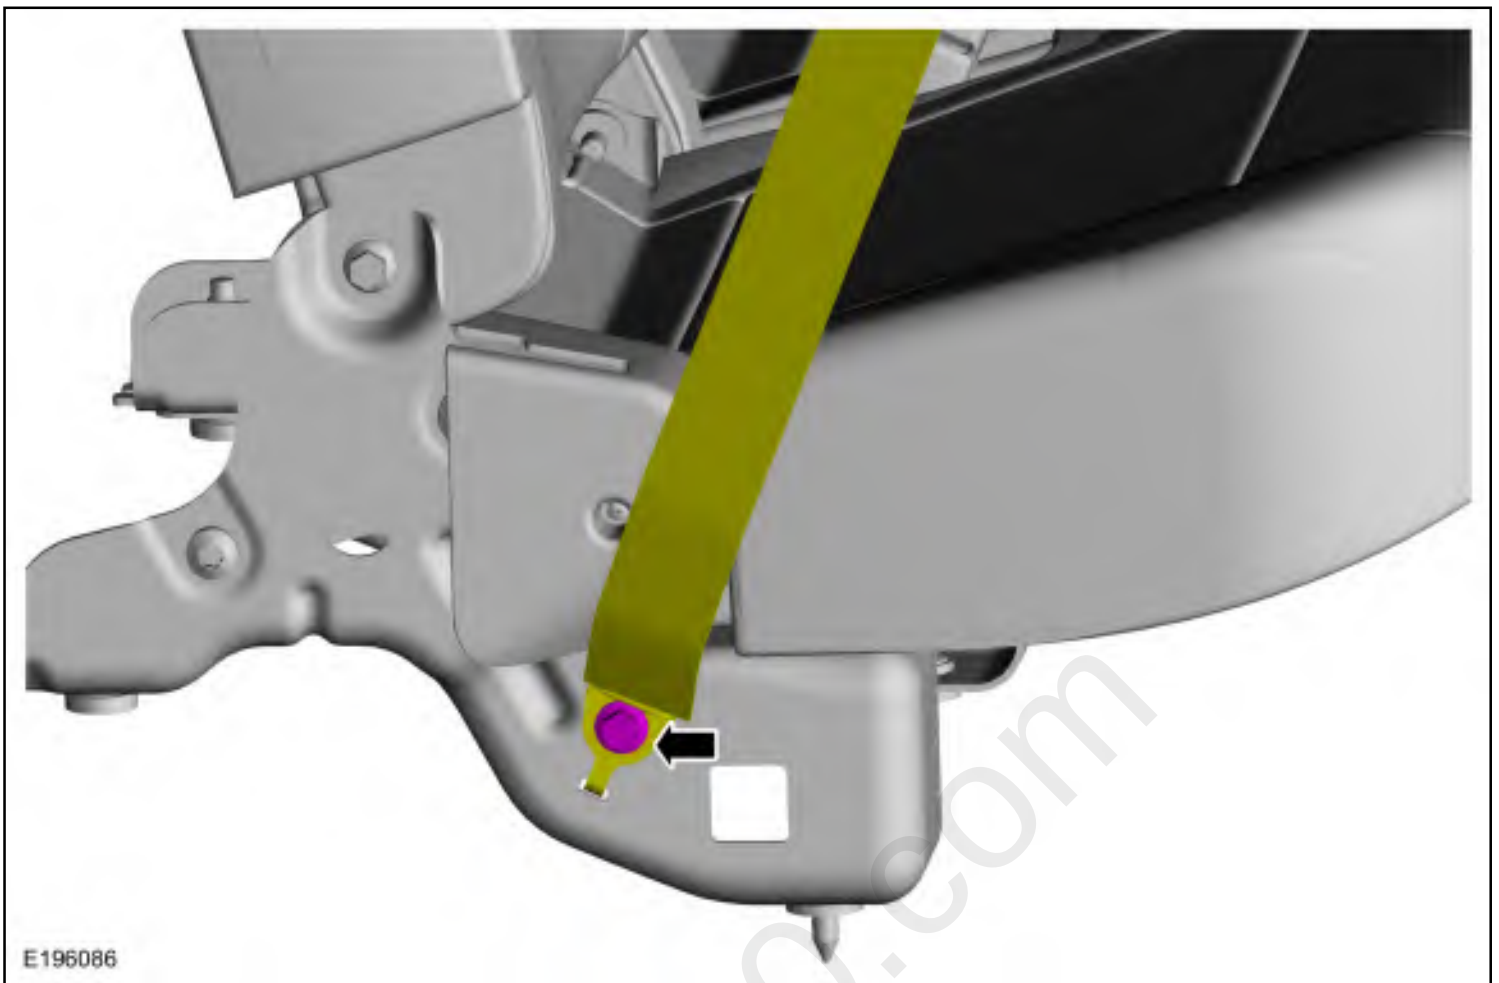


Vehicles with heated seats or inflatable safety belts

8. Disconnect the electrical connector(s).
 1. If equipped, disconnect the heated seat electrical connector and detach the wire harness retainer.
 2. If equipped, disconnect the inflatable safety belt safety belt buckle switch electrical connector.

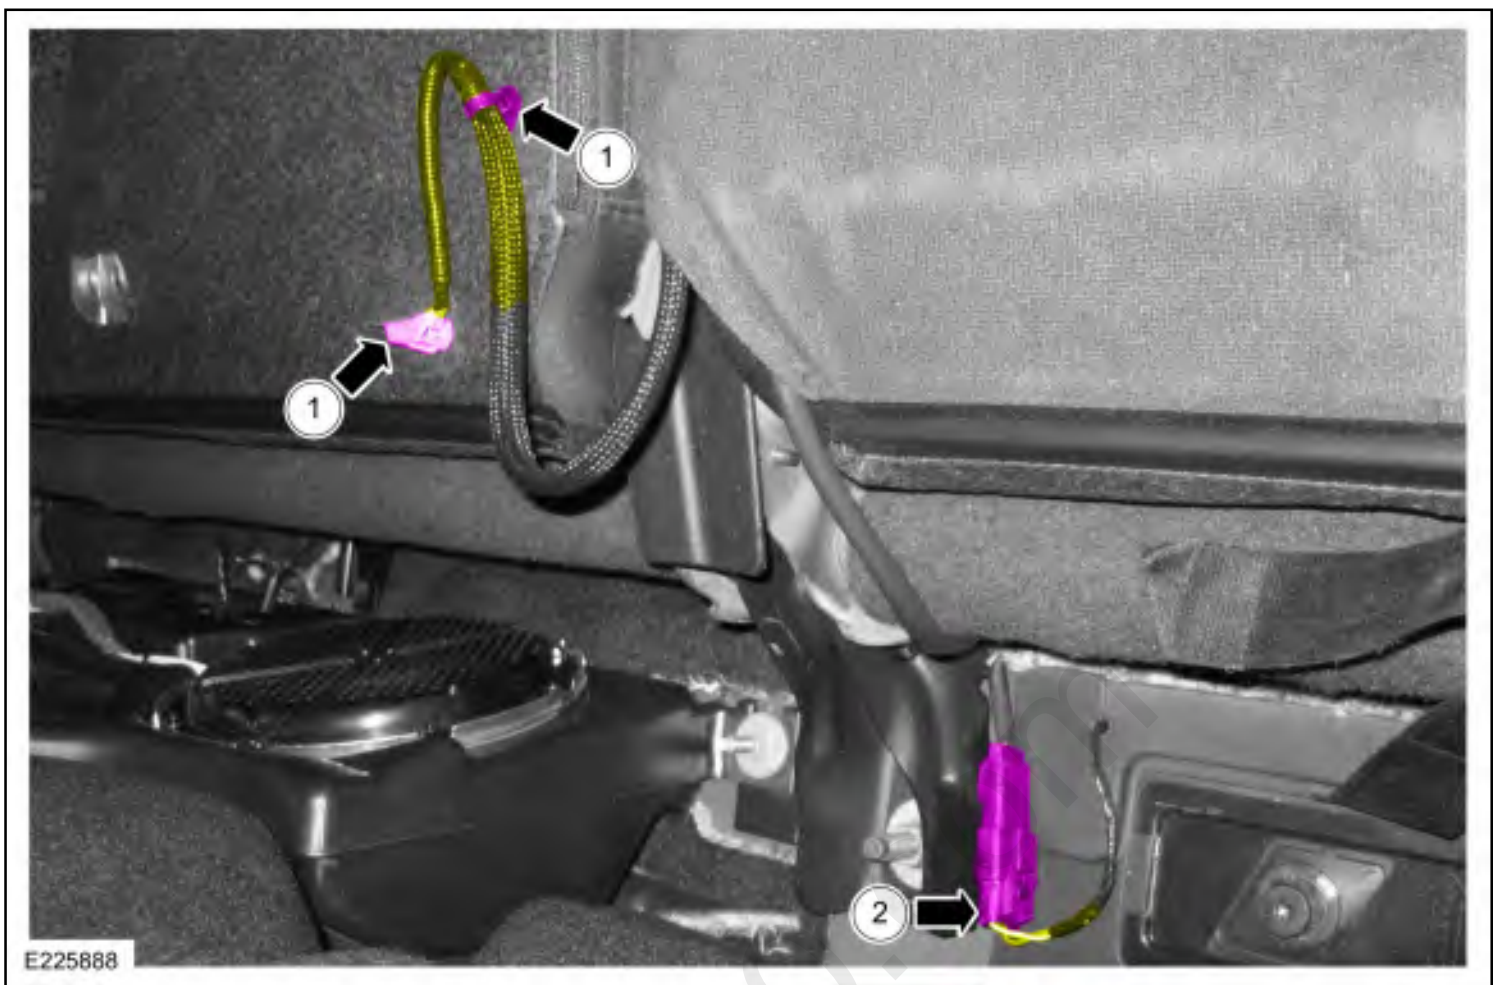

All vehicles

9. Remove the seat rear nuts. Remove the seat.
Torque: 59 lb.ft (80 Nm)

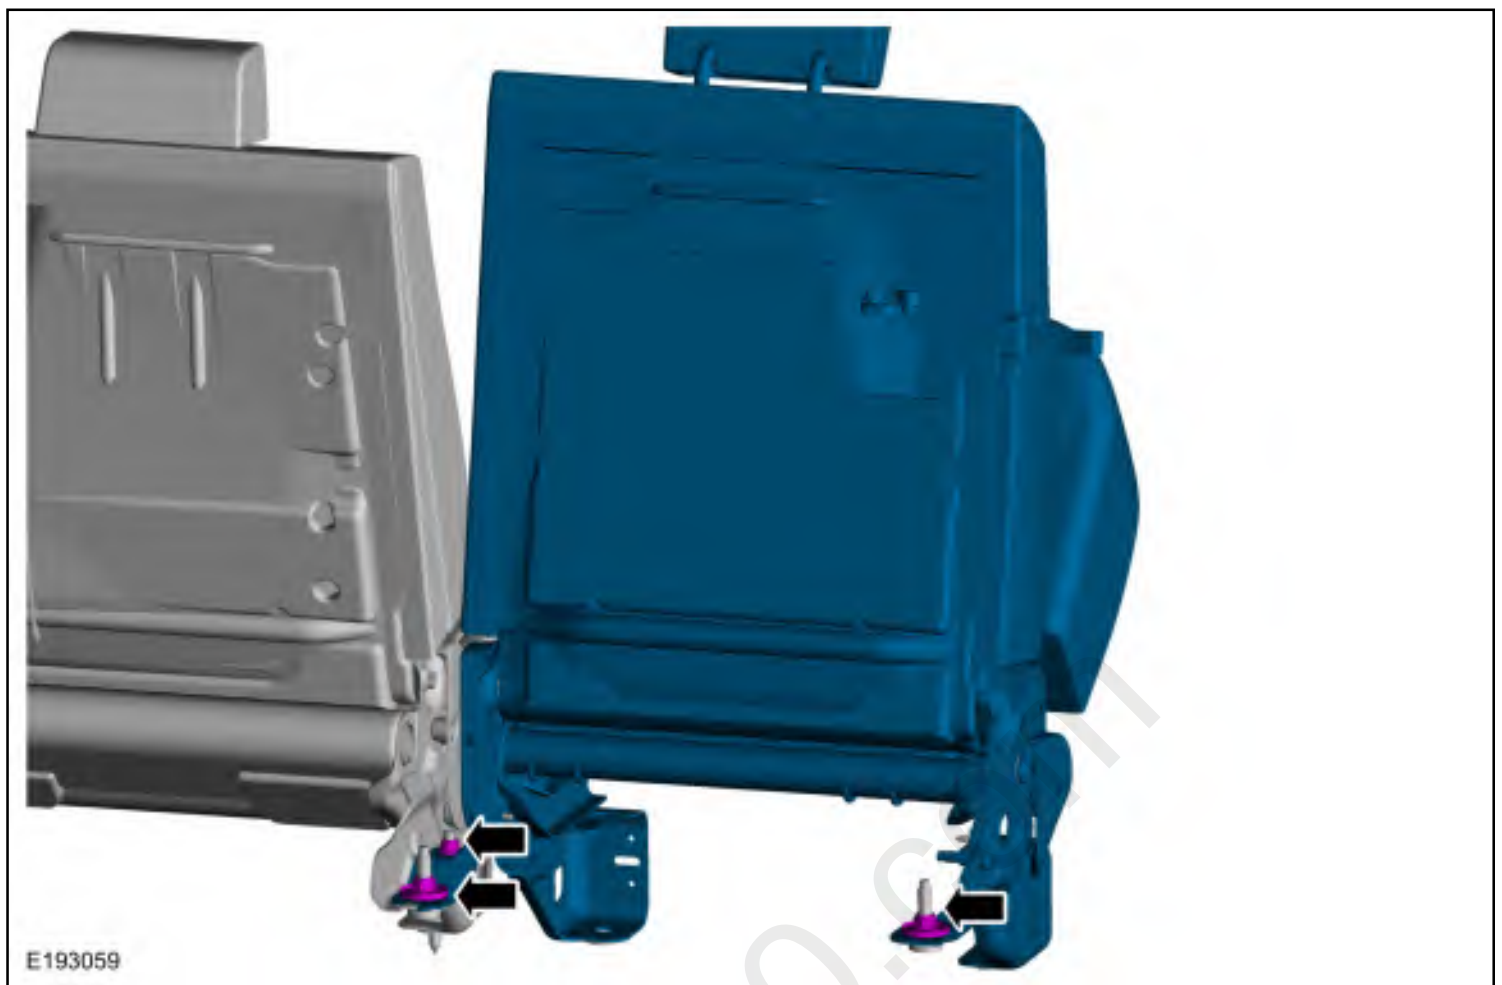

Installation

1. To install, reverse the removal procedure.
2. If the SRS has been depowered, repower the SRS.
Refer to: [Supplemental Restraint System \(SRS\) Repowering](#) (501-20B Supplemental Restraint System, General Procedures).