


Rear Seat Backrest Cover - SuperCab


Removal

NOTE: LH shown, RH similar.

1. Remove the rear seat backrest.
Refer to: [Rear Seat Backrest - SuperCab](#) (501-10B Rear Seats, Removal and Installation).
2. Remove the head restraint guide sleeves.
Refer to: [Rear Head Restraint Guide Sleeve](#) (501-10B Rear Seats, Removal and Installation).
3. Release the backrest cover lower J-clip.

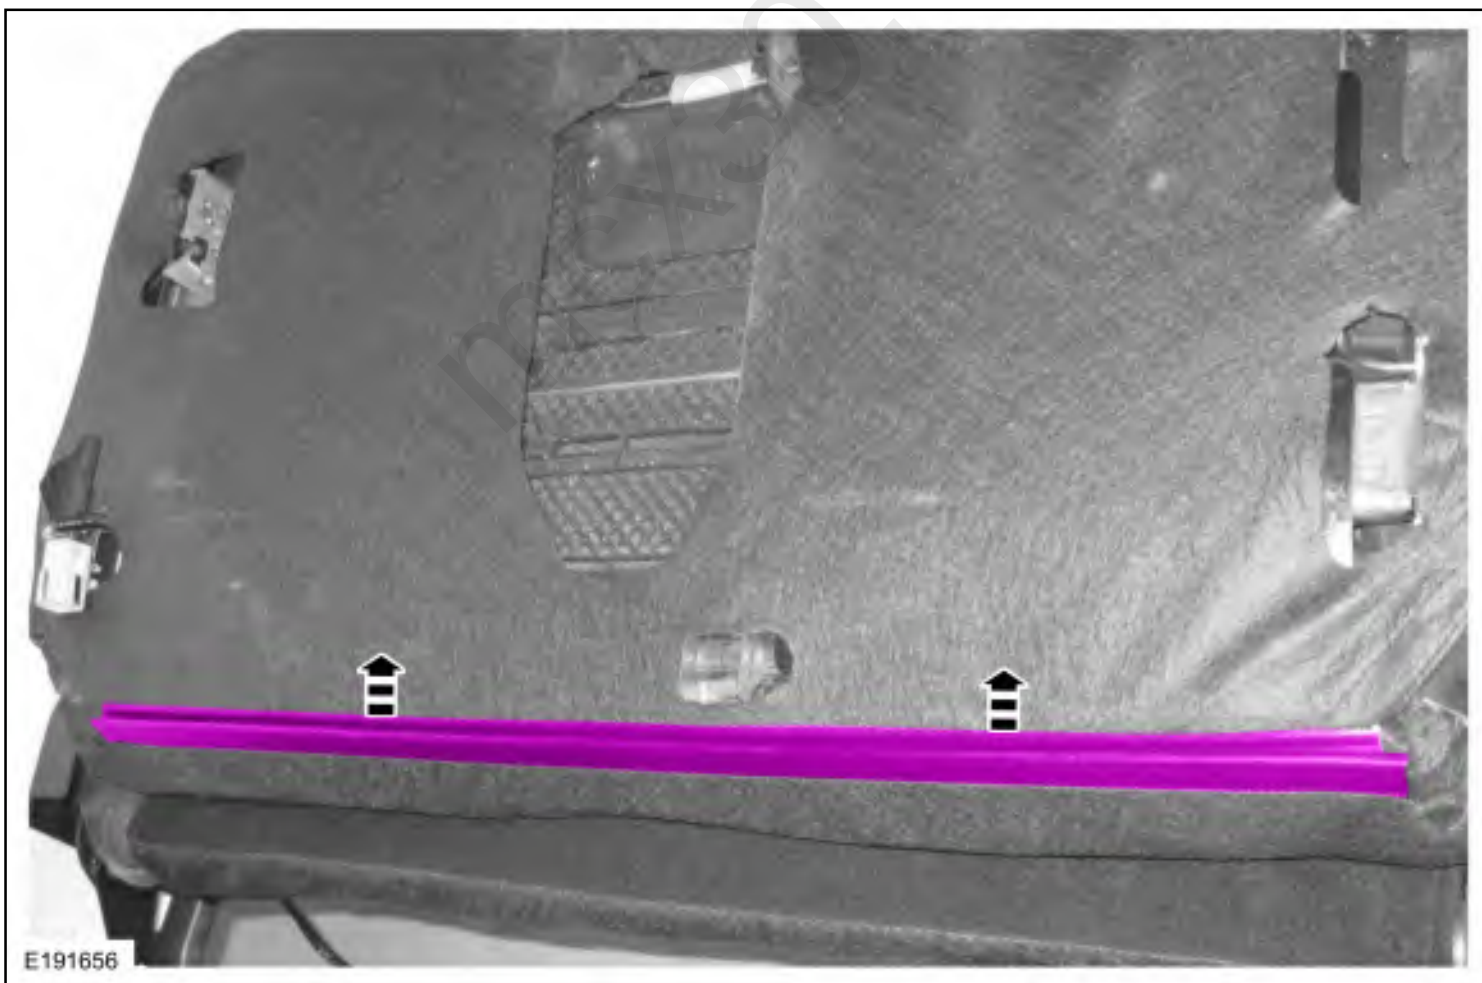


4. On both sides, unzip the backrest cover.

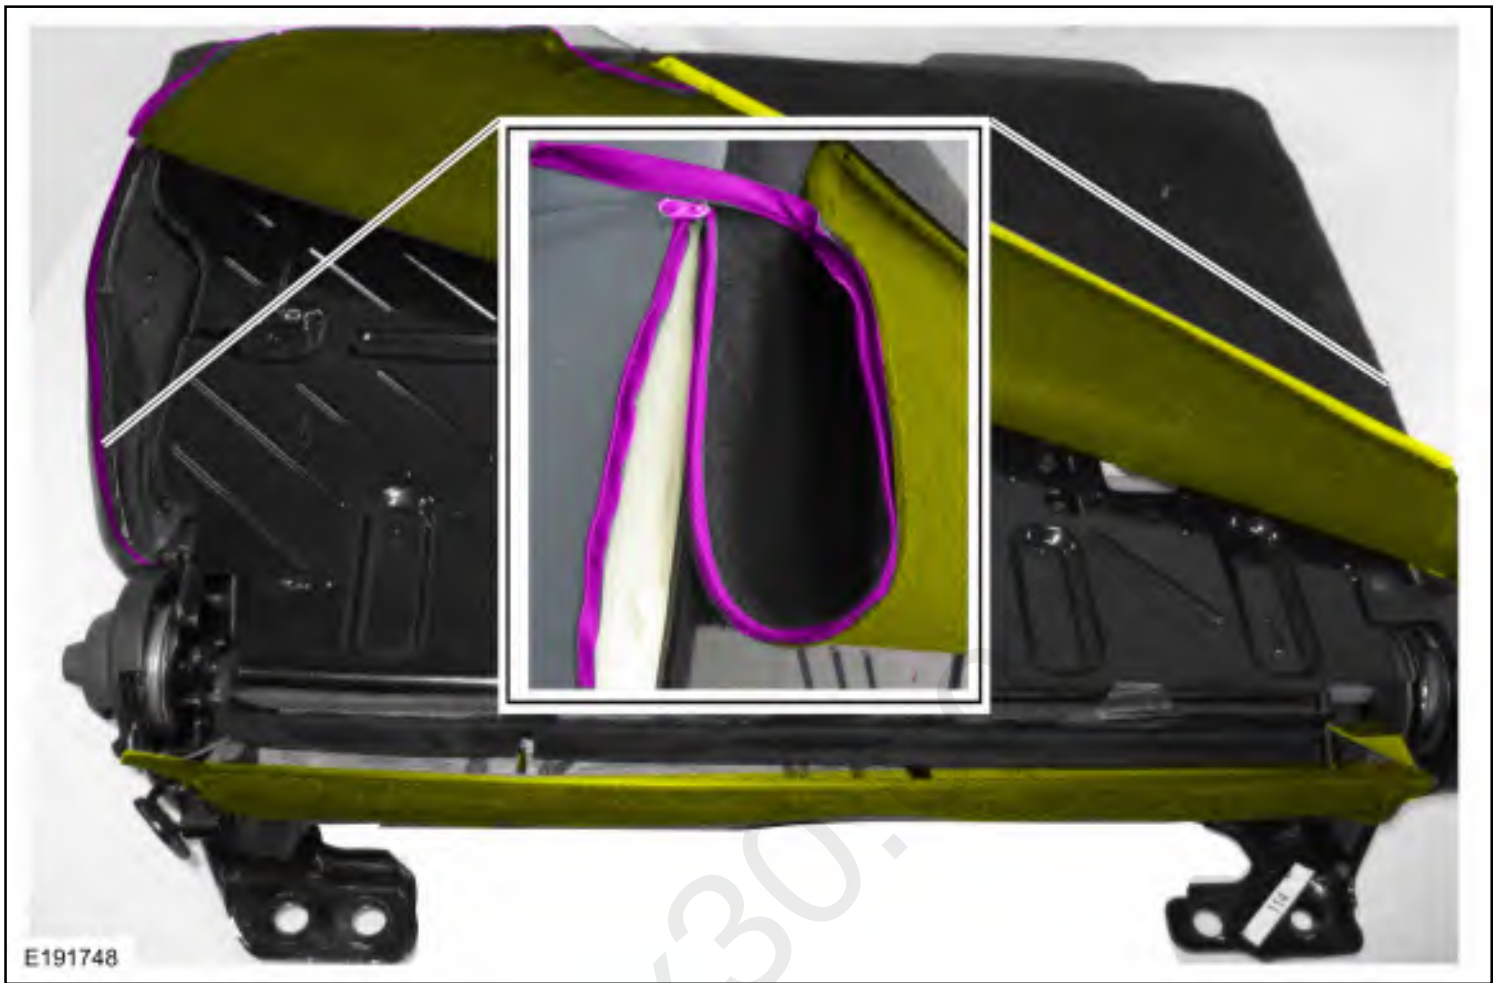

5. **NOTICE:** Use care when separating the backrest cover from the hook-and-arrow strip or the hook-and-arrow can be torn from the foam pad.

Release the hook-and-arrows and remove the backrest cover from the foam pad.

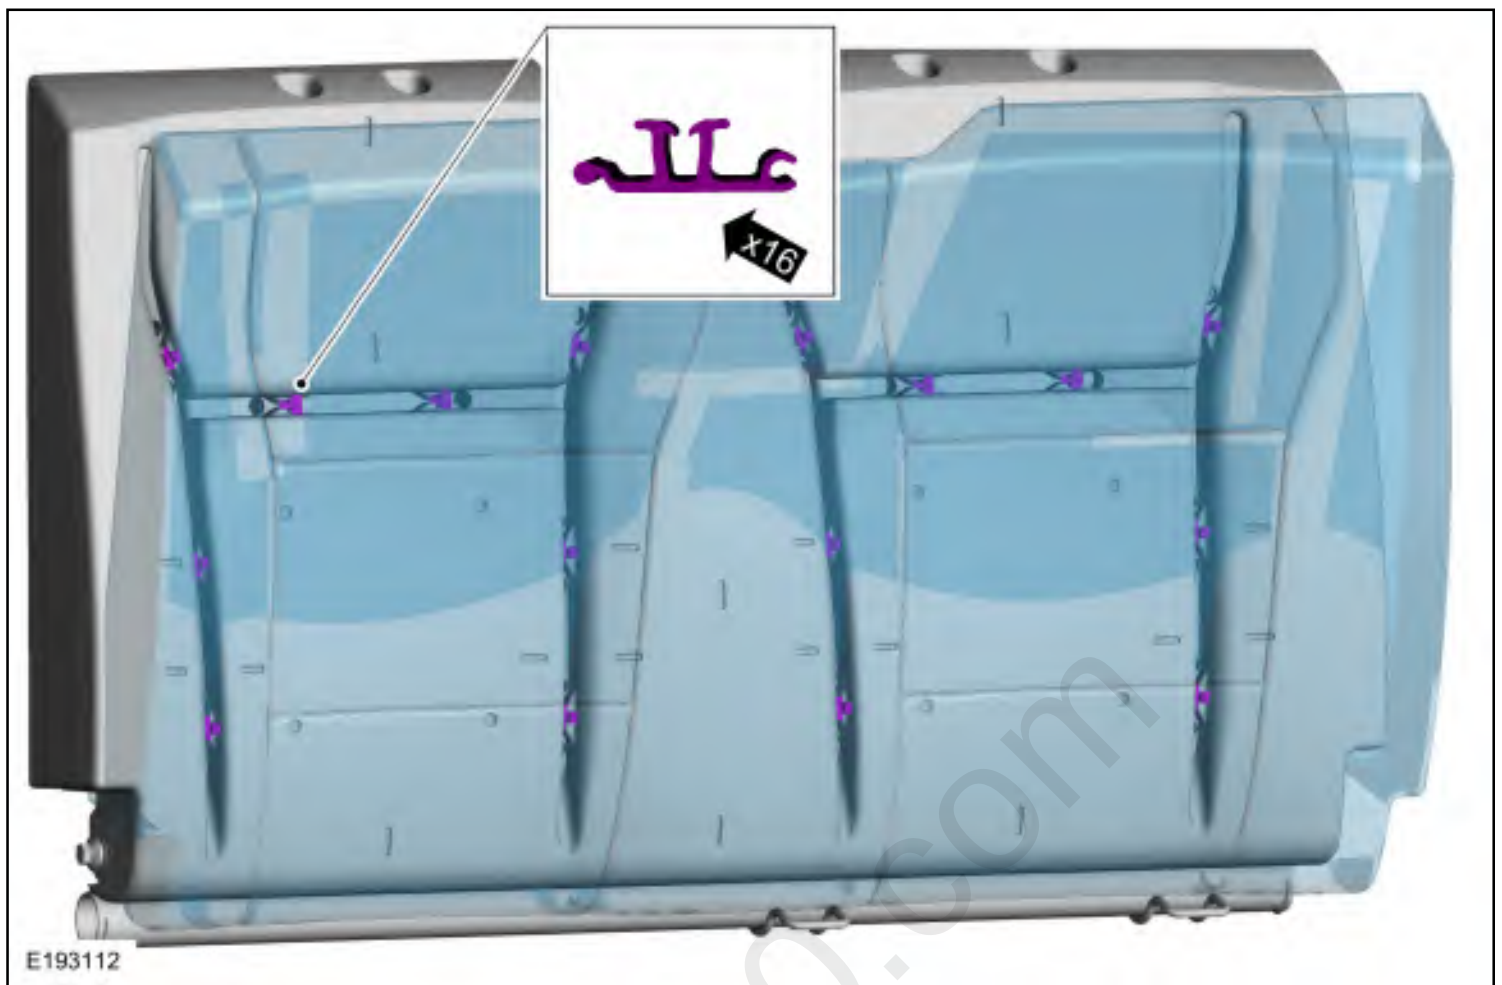

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company