

Rear Seat Cushion Cover - SuperCab


Special Tool(s) / General Equipment

Interior Trim Remover


Removal

NOTE: LH shown, RH similar.

1. Remove the rear seat.
Refer to: [Rear Seat RH - SuperCab](#) (501-10B Rear Seats, Removal and Installation).
Refer to: [Rear Seat LH - SuperCab](#) (501-10B Rear Seats, Removal and Installation).
2. Using an interior trim tool, remove the latch bezel from the seat cushion.
Use the General Equipment: Interior Trim Remover

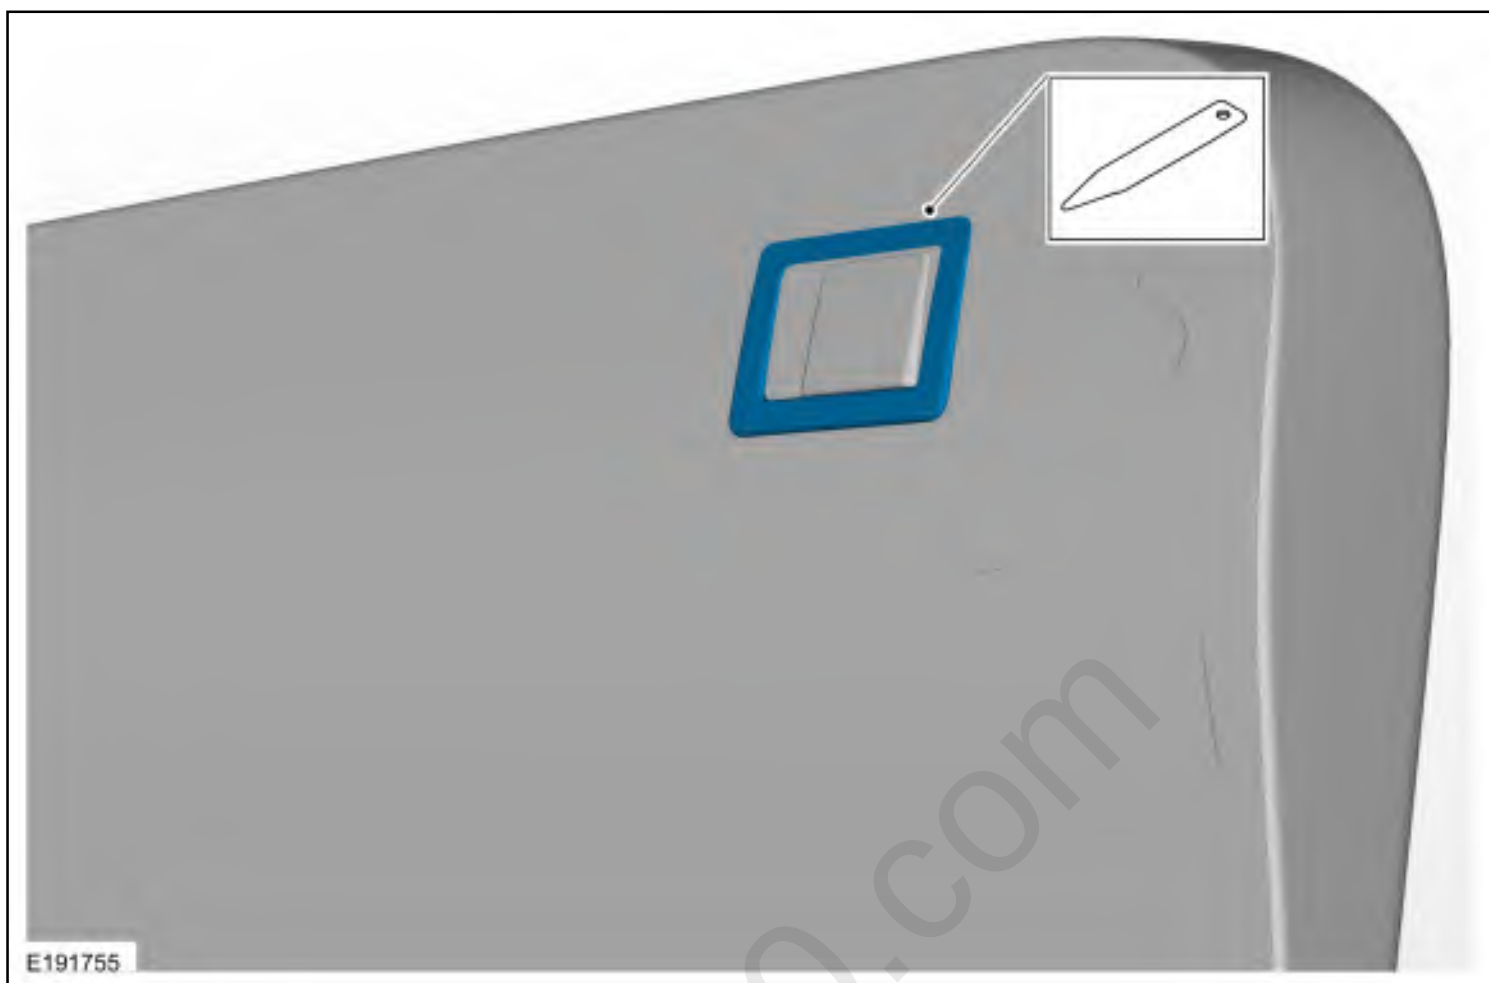


3. Release the lower cushion cover.
 1. Release the cushion cover lower J-clip.
 2. On both sides, unzip the cushion cover.

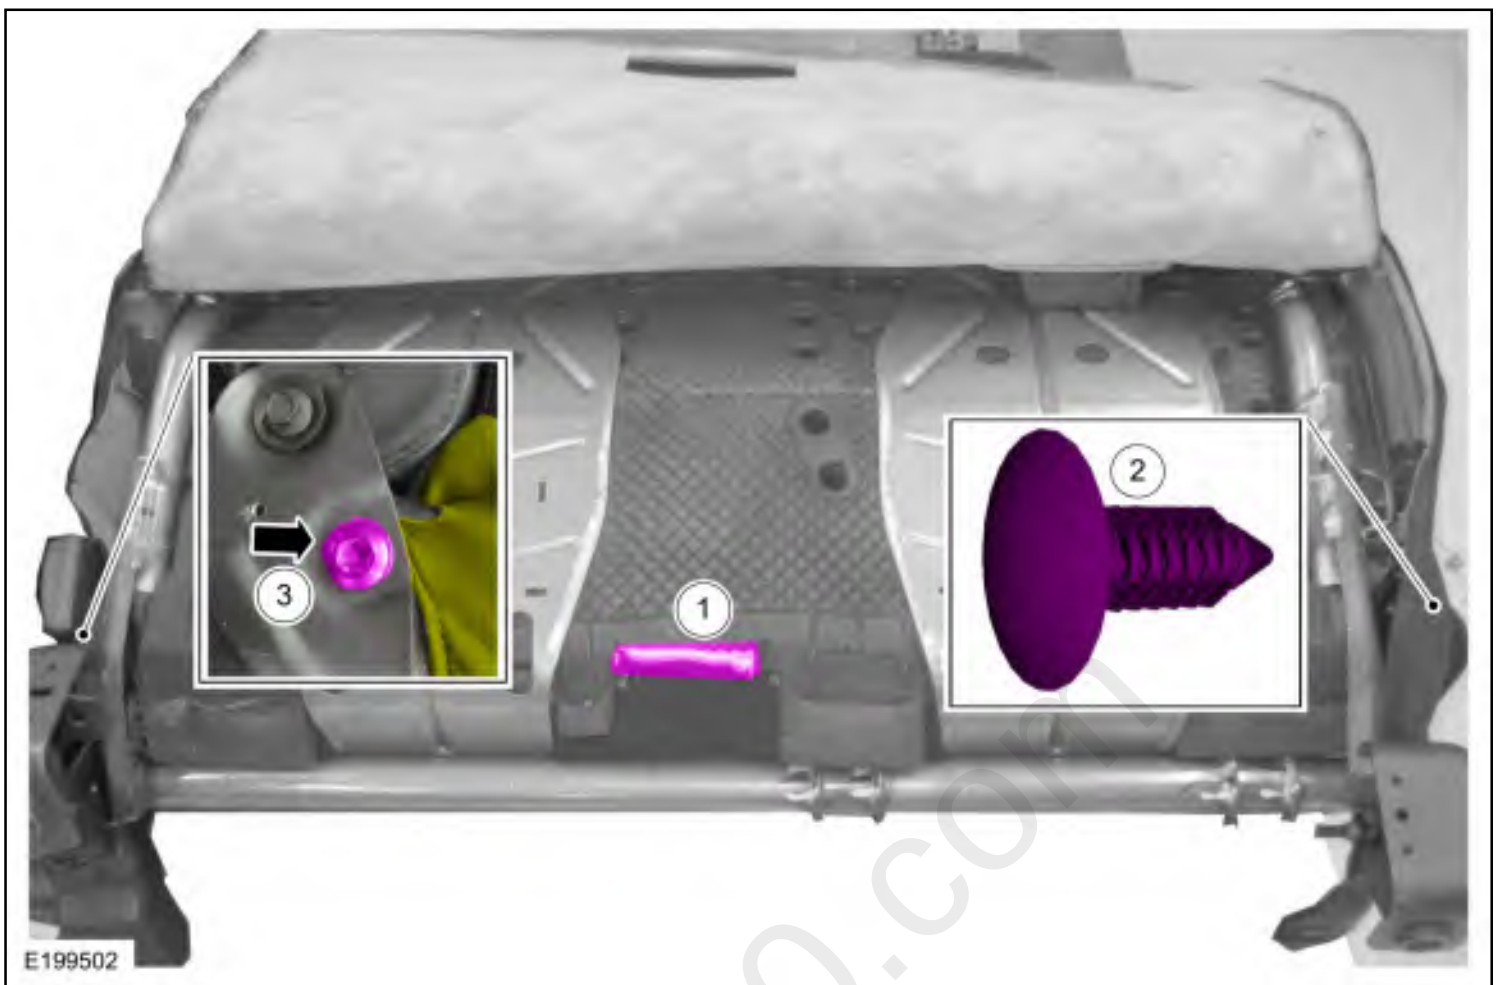

5. Release the latch cable and route it through the cushion cover.

1. Rotate the latch cable end to align with the slot in the lever and pull the cable end through the slot.
2. Route the latch cable through the cushion cover.

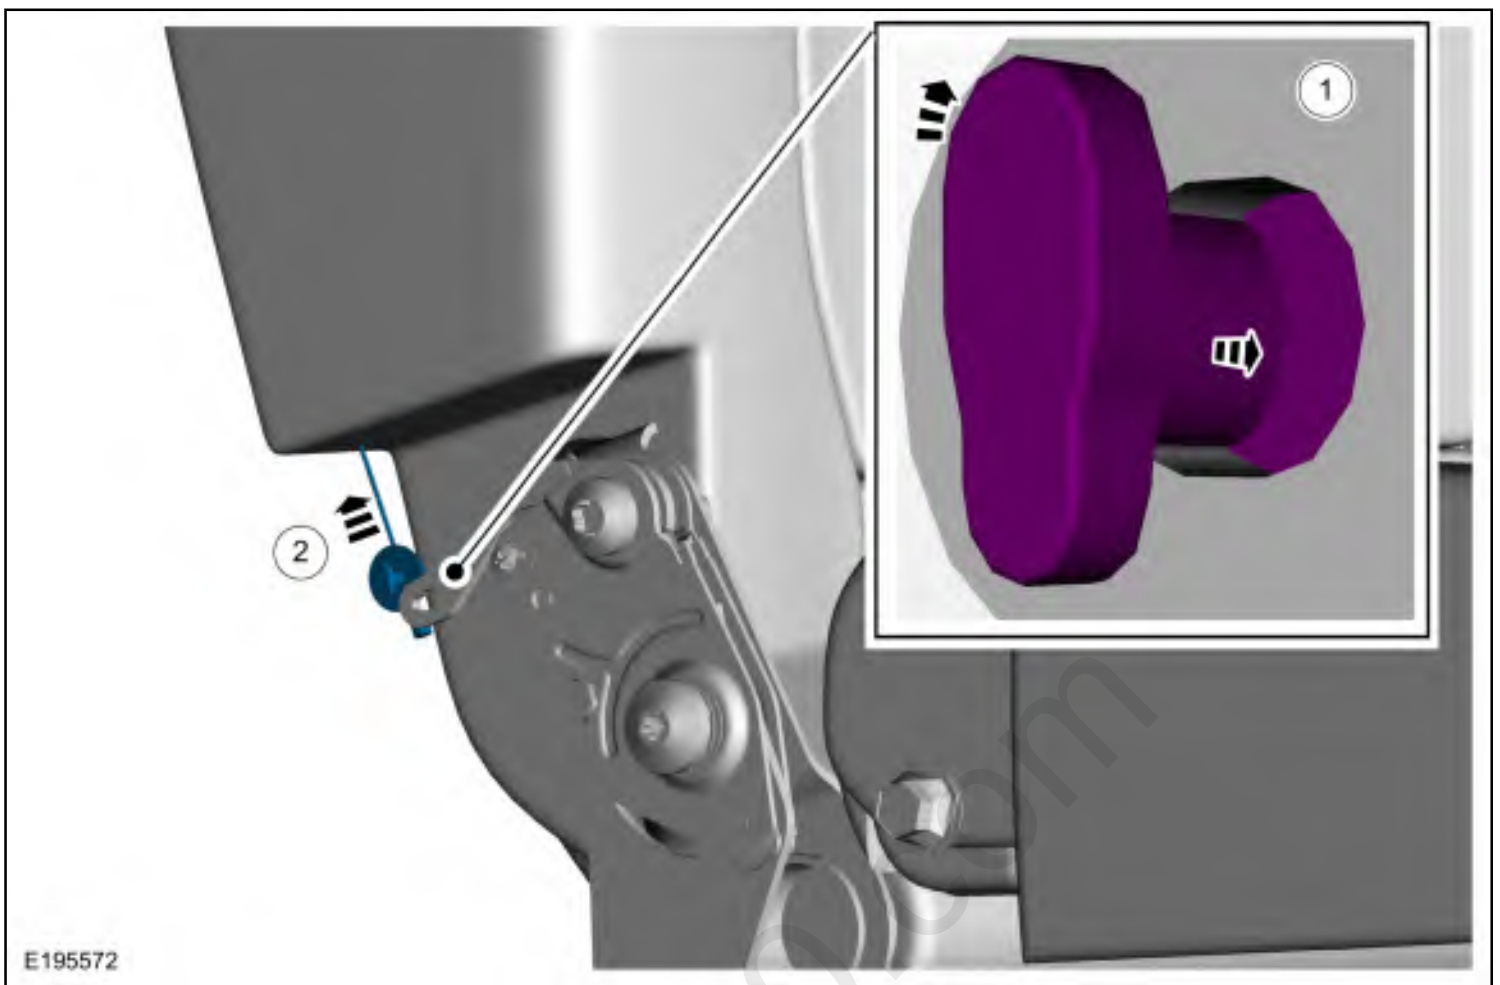


6. **NOTICE:** Use care when separating the seat cushion cover from the hook-and-loop strip or the hook-and-loop strip can be torn from the foam pad.

NOTICE: Use care when separating the seat cushion cover from the hook-and-arrow strip or the hook-and-arrow strip can be torn from the foam pad.

Remove the cushion cover from the foam pad.

1. Release the hook-and-arrows.
2. Release the hook-and-loop strips.

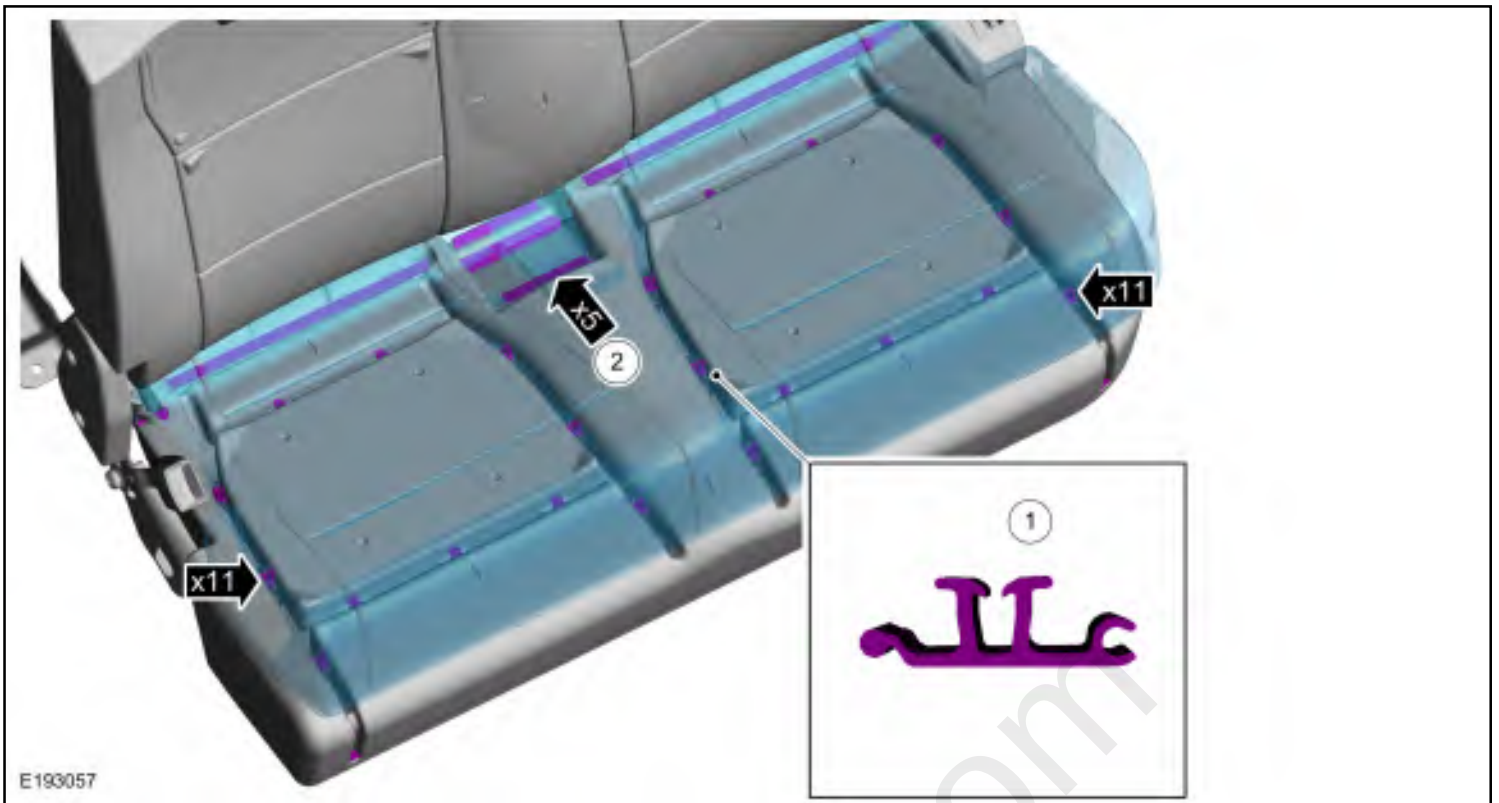

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company