

Rear Seat Backrest Cover - SuperCrew

Removal

NOTE: LH shown, RH similar.


1. Remove the seat.
Refer to: [Rear Seat RH - SuperCrew](#) (501-10B Rear Seats, Removal and Installation).
Refer to: [Rear Seat LH - SuperCrew](#) (501-10B Rear Seats, Removal and Installation).

LH seat


2. Remove the backrest.
Refer to: [Rear Seat Backrest - SuperCrew](#) (501-10B Rear Seats, Removal and Installation).

All seats

3. Remove the head restraint guide sleeves.
Refer to: [Rear Head Restraint Guide Sleeve](#) (501-10B Rear Seats, Removal and Installation).
4. If equipped, remove the armrest.
Refer to: [Rear Seat Armrest - SuperCrew](#) (501-10B Rear Seats, Removal and Installation).
5. Release the backrest cover lower J-clip.

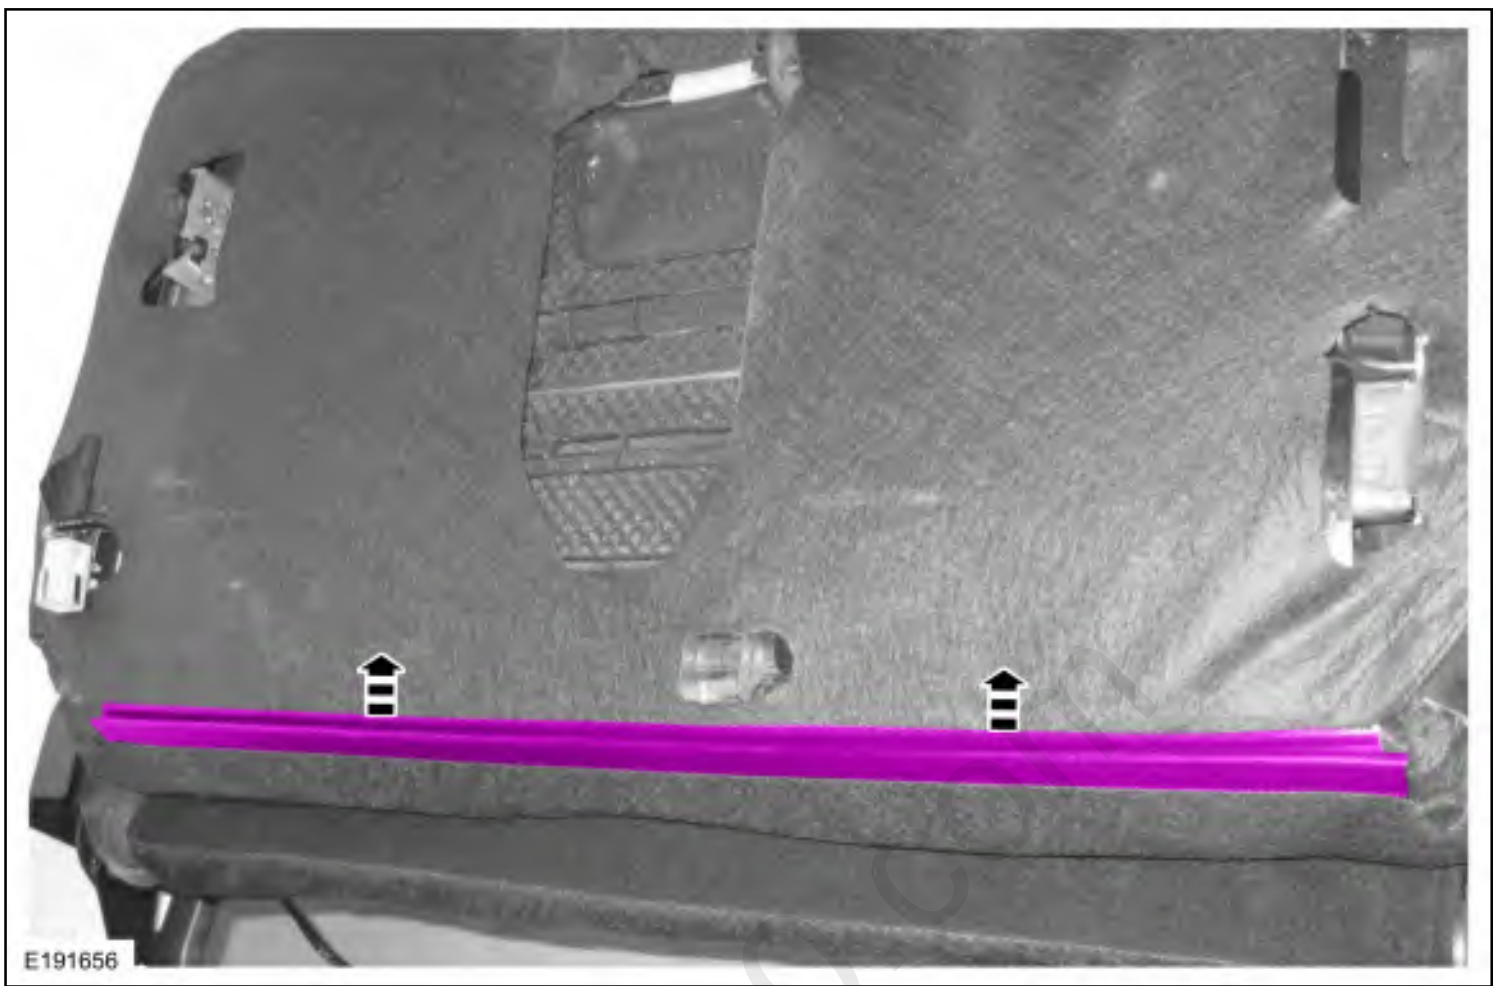


6. On both sides, unzip the backrest cover.

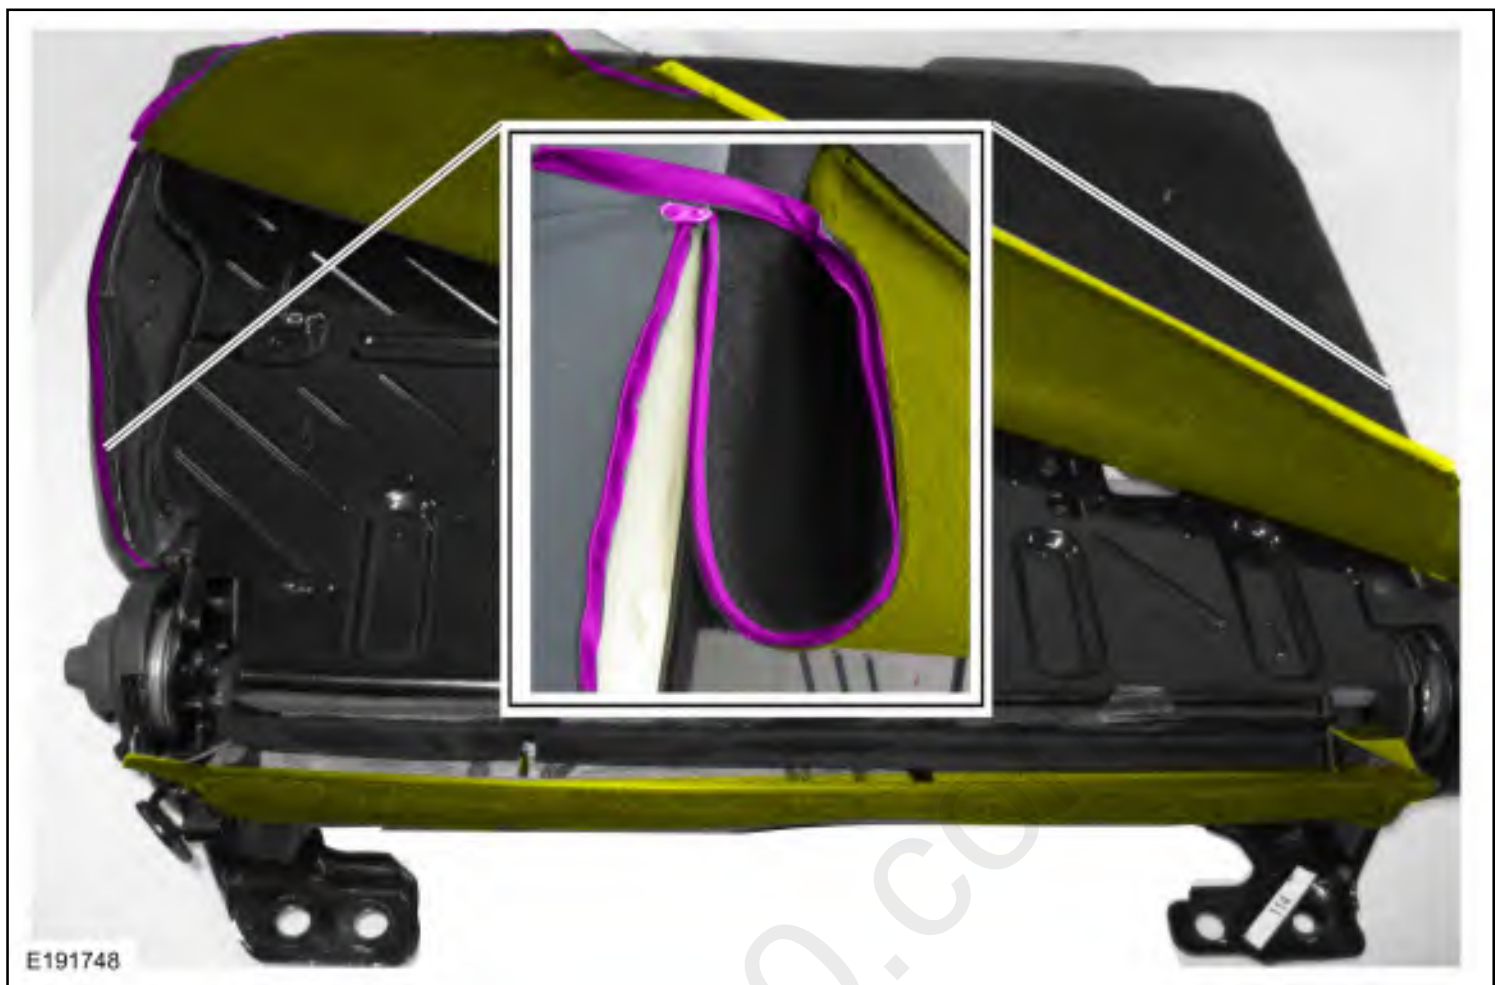

LH seat

7. Release the center backrest J-clip and armrest cavity retainers.

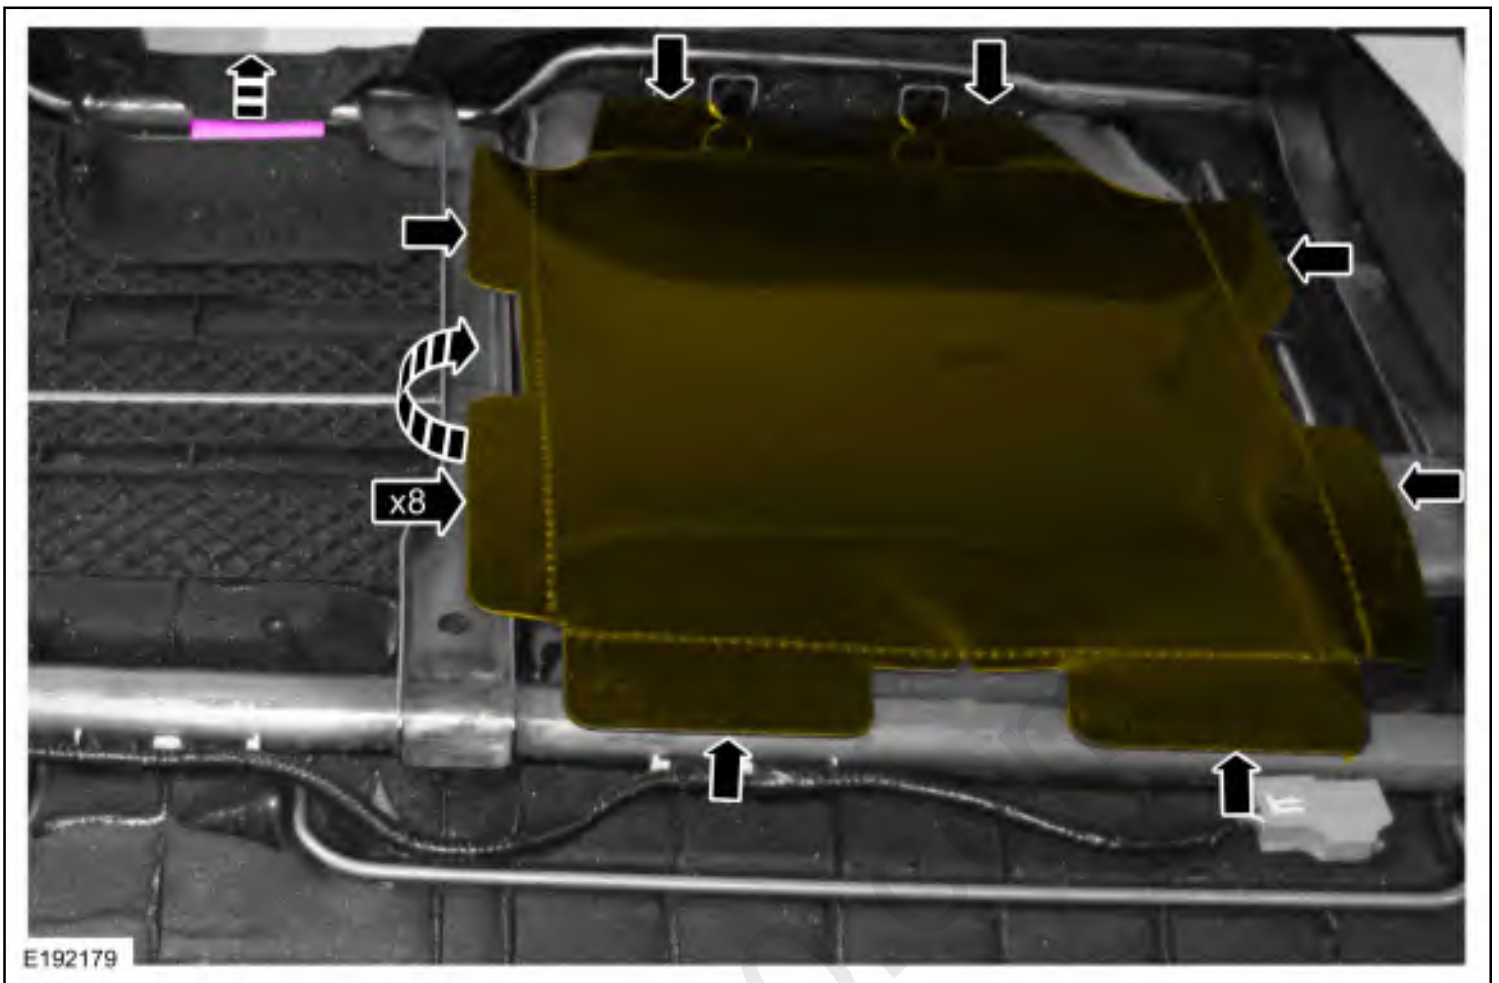

All seats

8. **NOTICE:** Use care when separating the backrest cover from the hook-and-loop strip or the hook-and-arrow can be torn from the foam pad.

NOTICE: Use care when separating the backrest cover from the hook-and-arrow strip or the hook-and-arrow can be torn from the foam pad.

Remove the backrest cover from the foam pad.

1. Release the hook-and-arrows.
2. Release the hook-and-loop strip.



Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company