

Rear Seat Cushion Cover - SuperCrew


Special Tool(s) / General Equipment

Interior Trim Remover

Removal

NOTE: LH shown, RH similar.

1. Remove the rear seat.
Refer to: [Rear Seat RH - SuperCrew](#) (501-10B Rear Seats, Removal and Installation).
Refer to: [Rear Seat LH - SuperCrew](#) (501-10B Rear Seats, Removal and Installation).
2. Using an interior trim tool, remove the latch bezel from the seat cushion.
Use the General Equipment: Interior Trim Remover

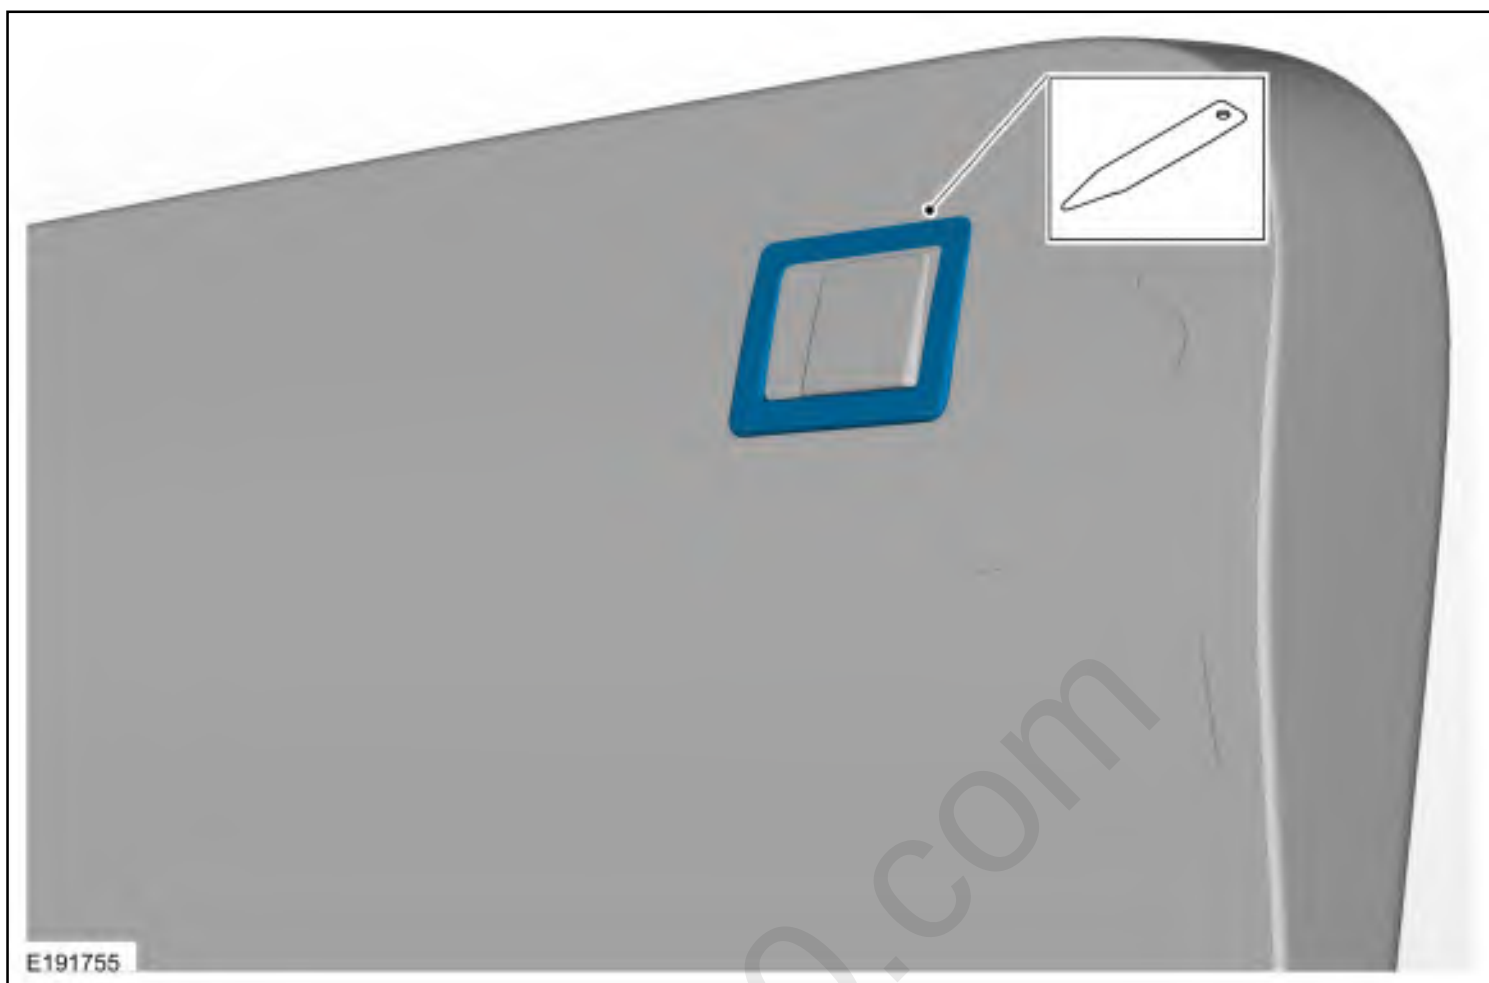


3. Release the seat cushion cover lower J-clip.




4. **NOTICE:** Use care when separating the seat cushion cover from the hook-and-loop strip or the hook-and-loop strip can be torn from the foam pad.

On both sides, unzip and open the cushion cover. Release the hook-and-loop strips.

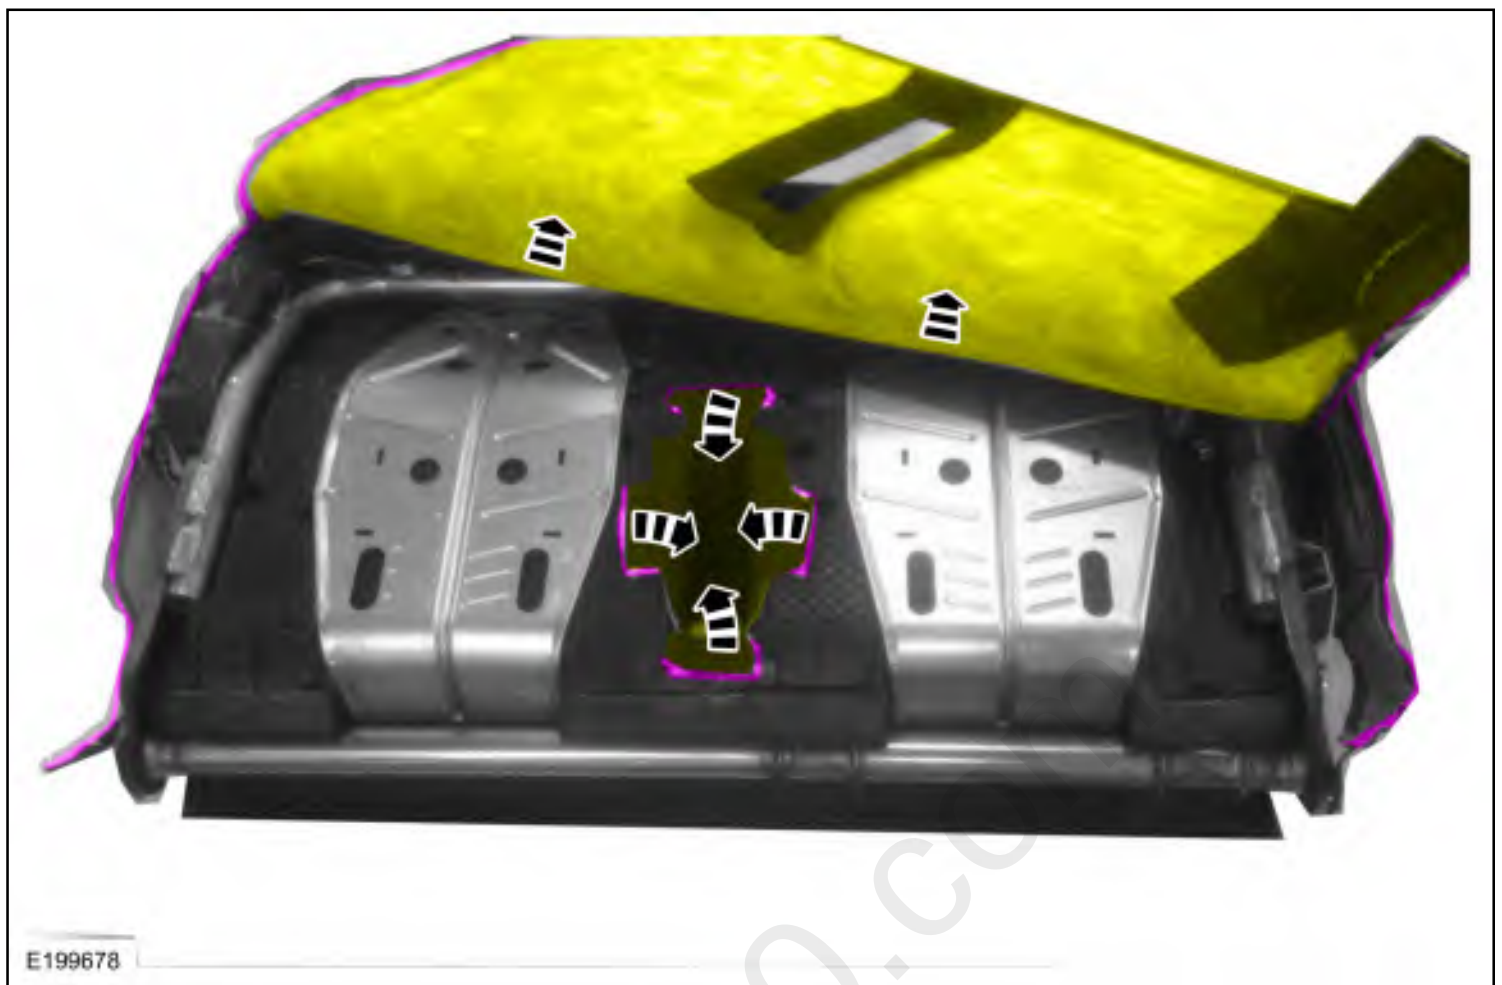


5. Release the latch cable and route it through the cushion cover.

1. Rotate the latch cable end to align with the slot in the lever and pull the cable end through the slot.
2. Route the latch cable through the cushion cover.

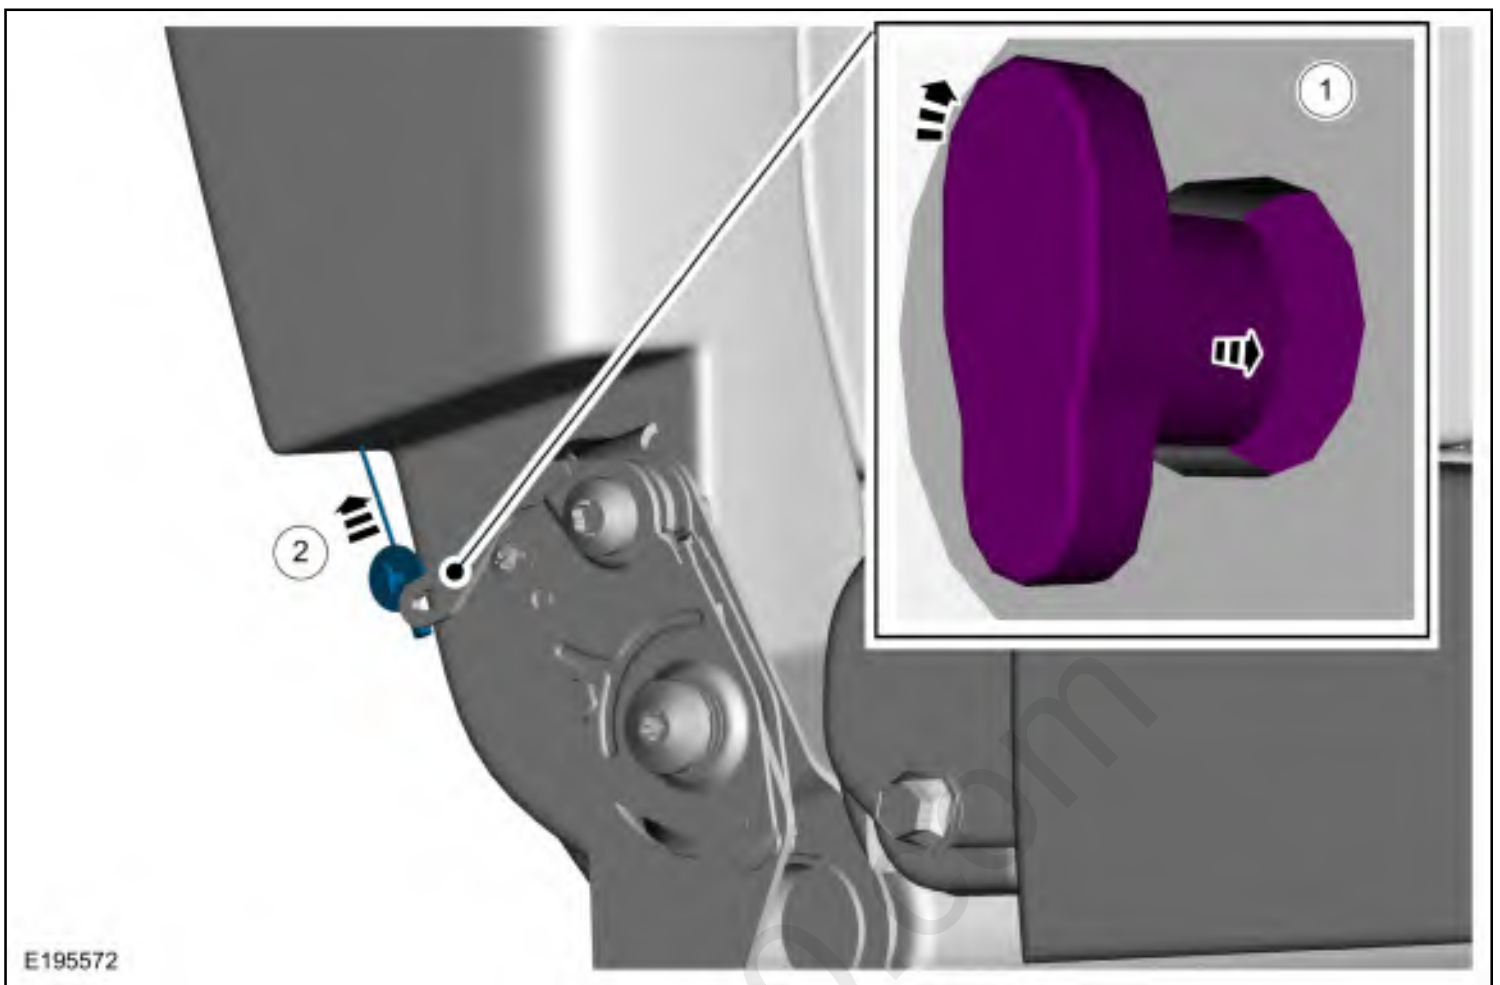

6. **NOTICE:** Use care when separating the seat cushion cover from the hook-and-arrow strip or the hook-and-arrow strip can be torn from the foam pad.

Release the hook-and arrows from the foam pad and remove the cushion cover.

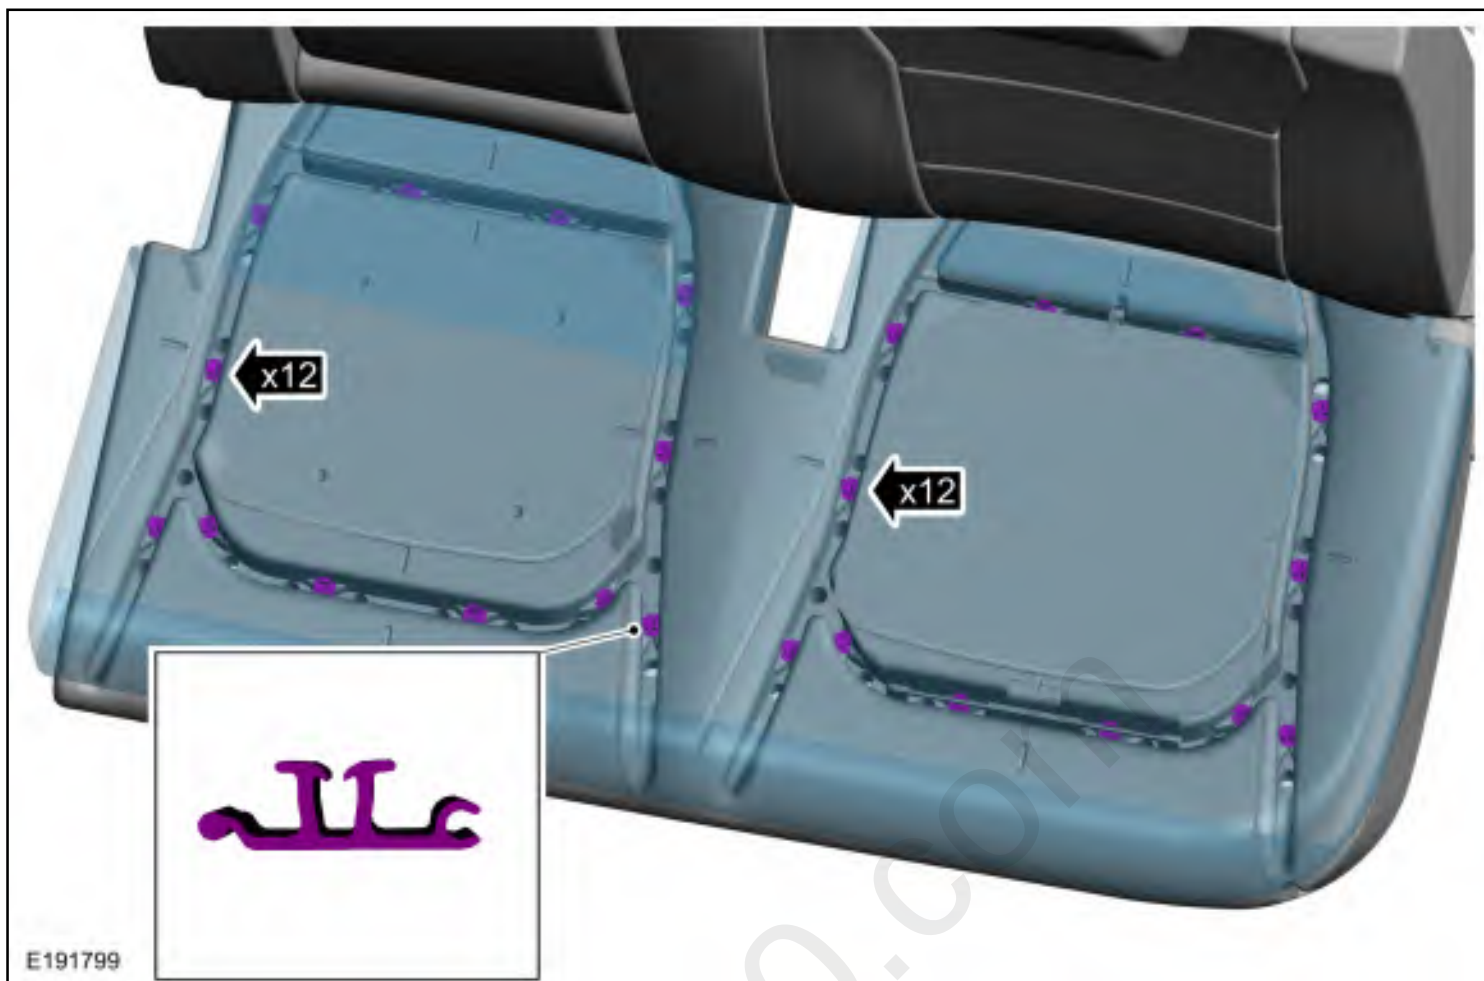

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company