

Heated Rear Seat Switch - SuperCrew


Special Tool(s) / General Equipment

Interior Trim Remover

Removal


1. Using an interior trim remover, lift the cup holder trim and release the locking clips. Remove the cup holder trim.

Use the General Equipment: Interior Trim Remover

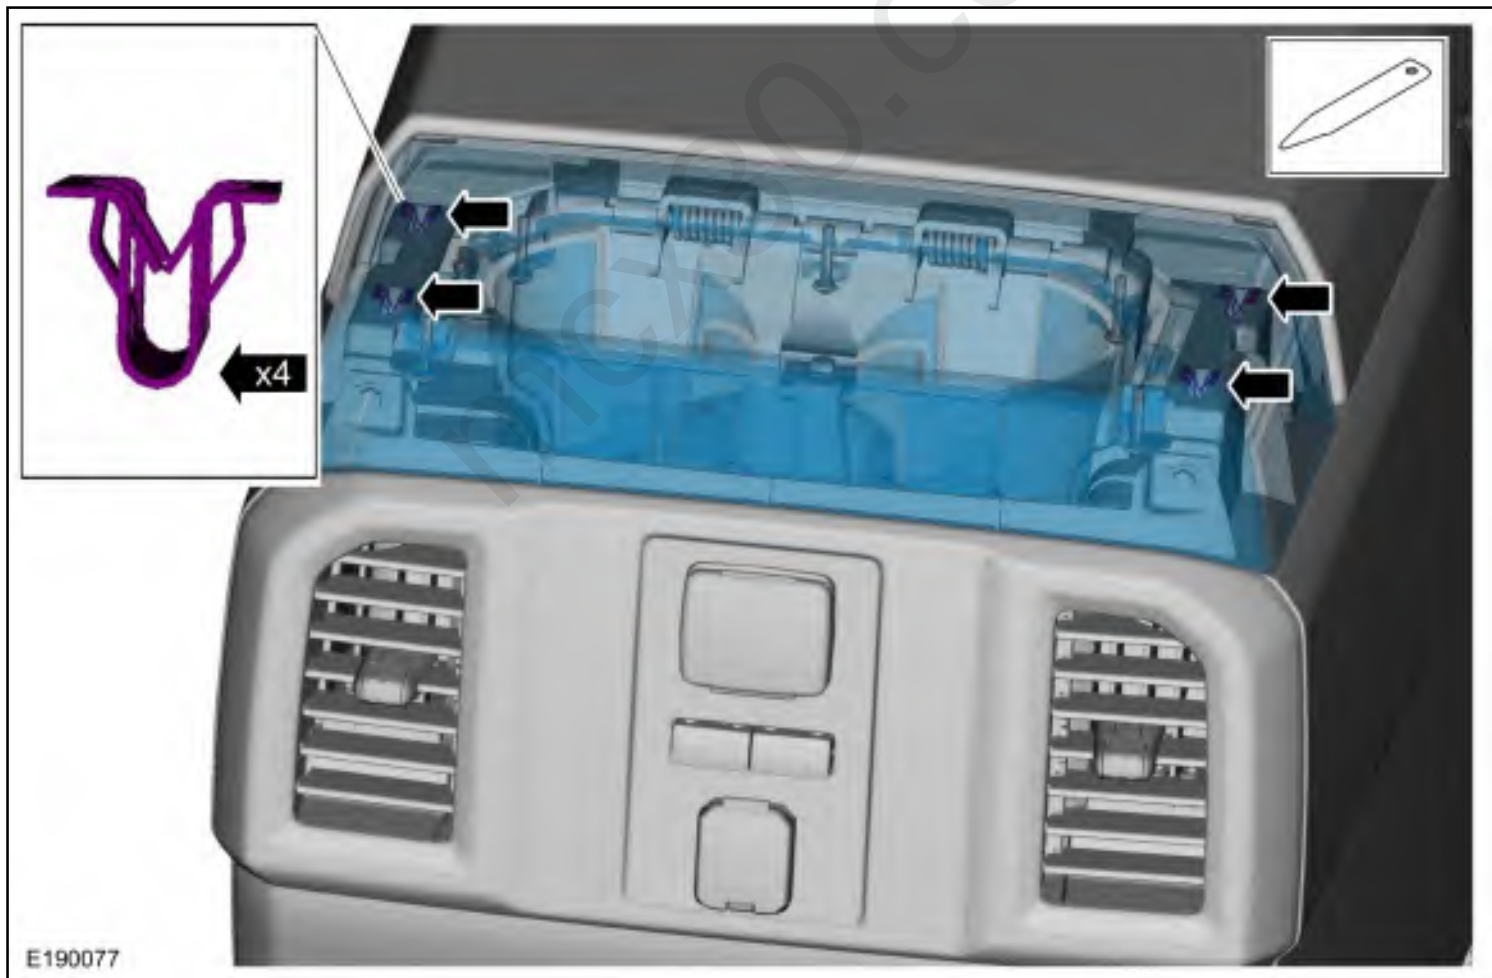

2. Remove the heated seat switch.

1. Disconnect the power point electrical connector.
2. Disconnect the heat seat switch electrical connector. Release the switch tabs and slide the switch rearward.

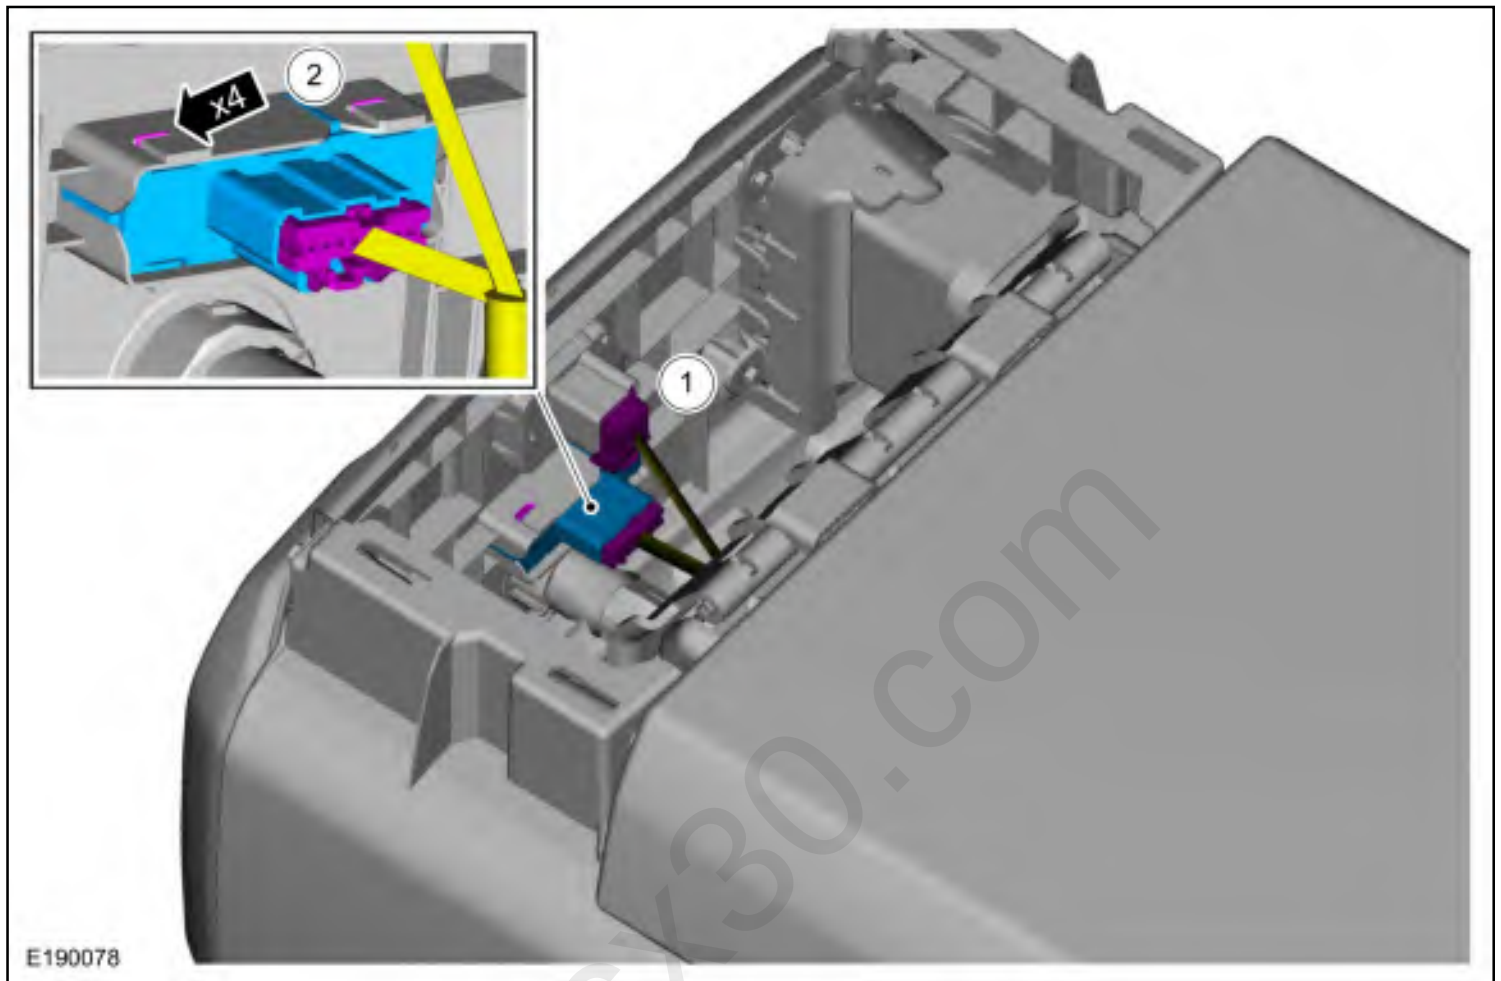

Installation

1. To install, reverse the removal procedure.