

Rear Seat Backrest - SuperCrew

Removal

 
NOTE: *LH shown, RH similar.*

NOTE: *Removal steps in this procedure may contain installation details.*


1. Remove the seat.
Refer to: [Rear Seat RH - SuperCrew](#) (501-10B Rear Seats, Removal and Installation).
Refer to: [Rear Seat LH - SuperCrew](#) (501-10B Rear Seats, Removal and Installation).
2. Remove the inboard and outboard cushion side shield fasteners and remove the side shields.





E191687



3. If equipped with heated seats, disconnect the electrical connectors.

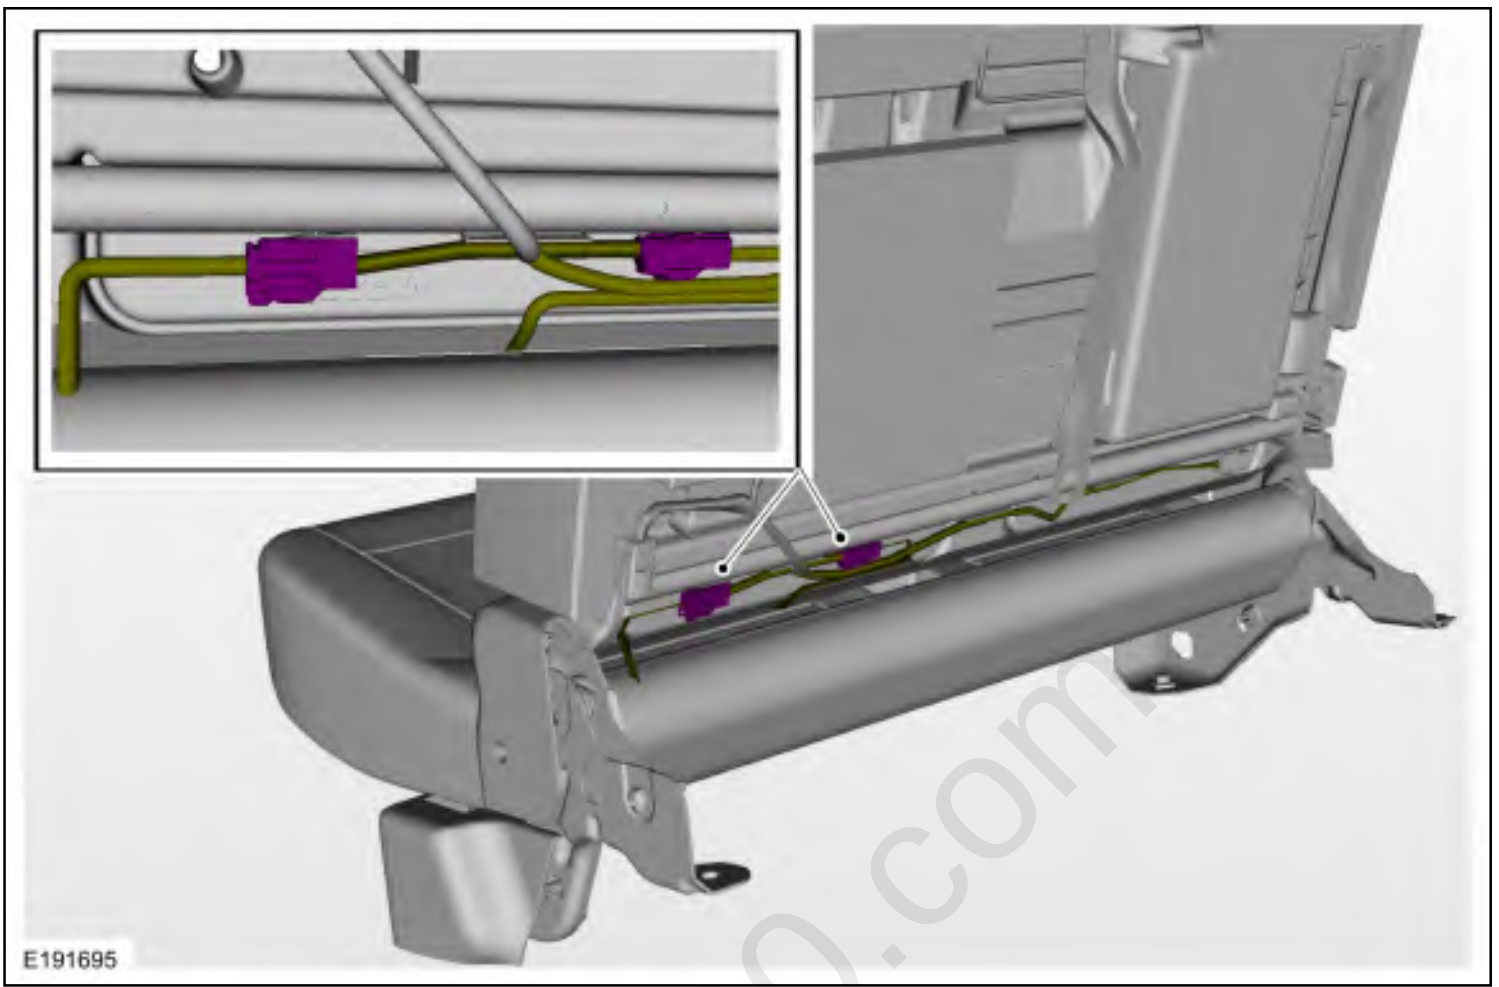

4. Remove the inboard and outboard pivot fasteners. Remove the backrest.
Torque: 18 lb.ft (25 Nm)

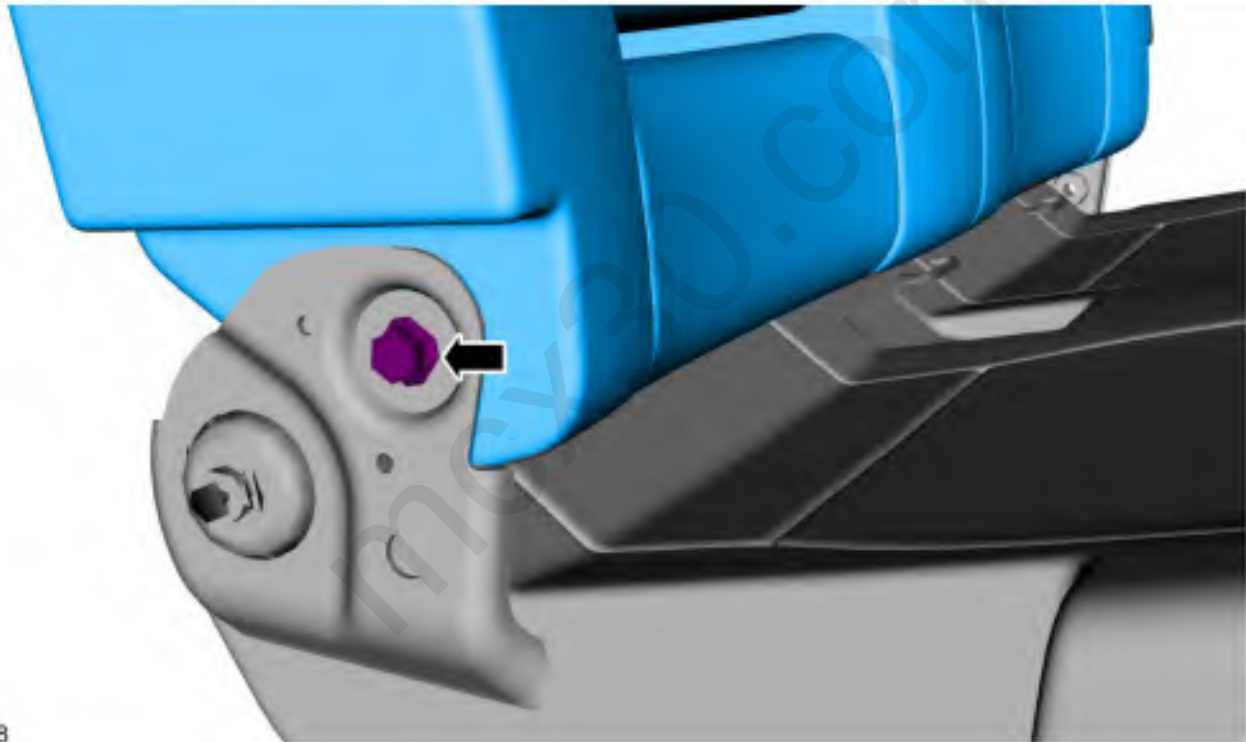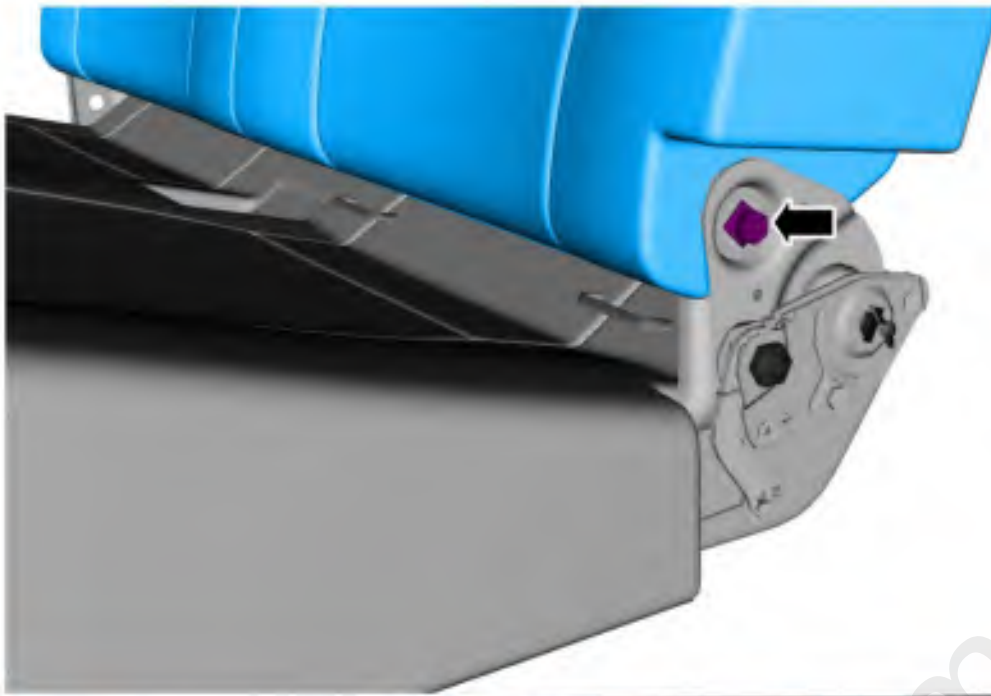

E191688



Installation

1. To install, reverse the removal procedure.