

Heated Rear Seat Module - SuperCrew


Removal

1. **NOTE:** The backrest latch is only accessible when the seat cushion is raised.


NOTE: The striker should be in its lowest position for the latch to engage.

Release and lower the LH seat backrest.


1. Raise the seat cushion.
2. Release the seat backrest latch.
3. Lower the backrest.

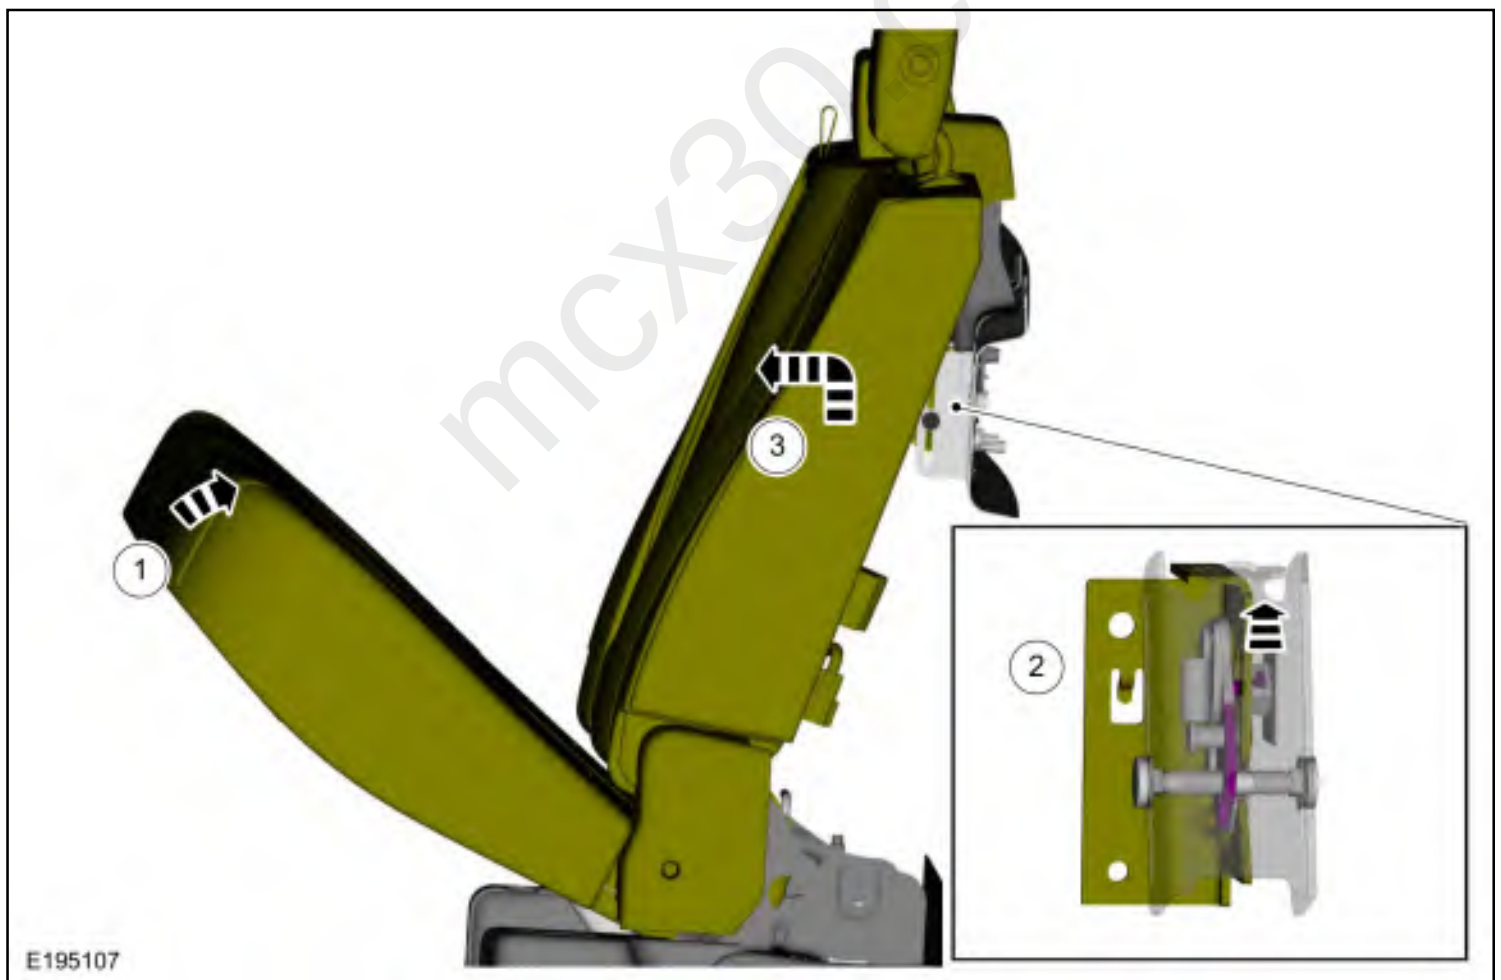


2. Release the backrest cover lower J-clip.

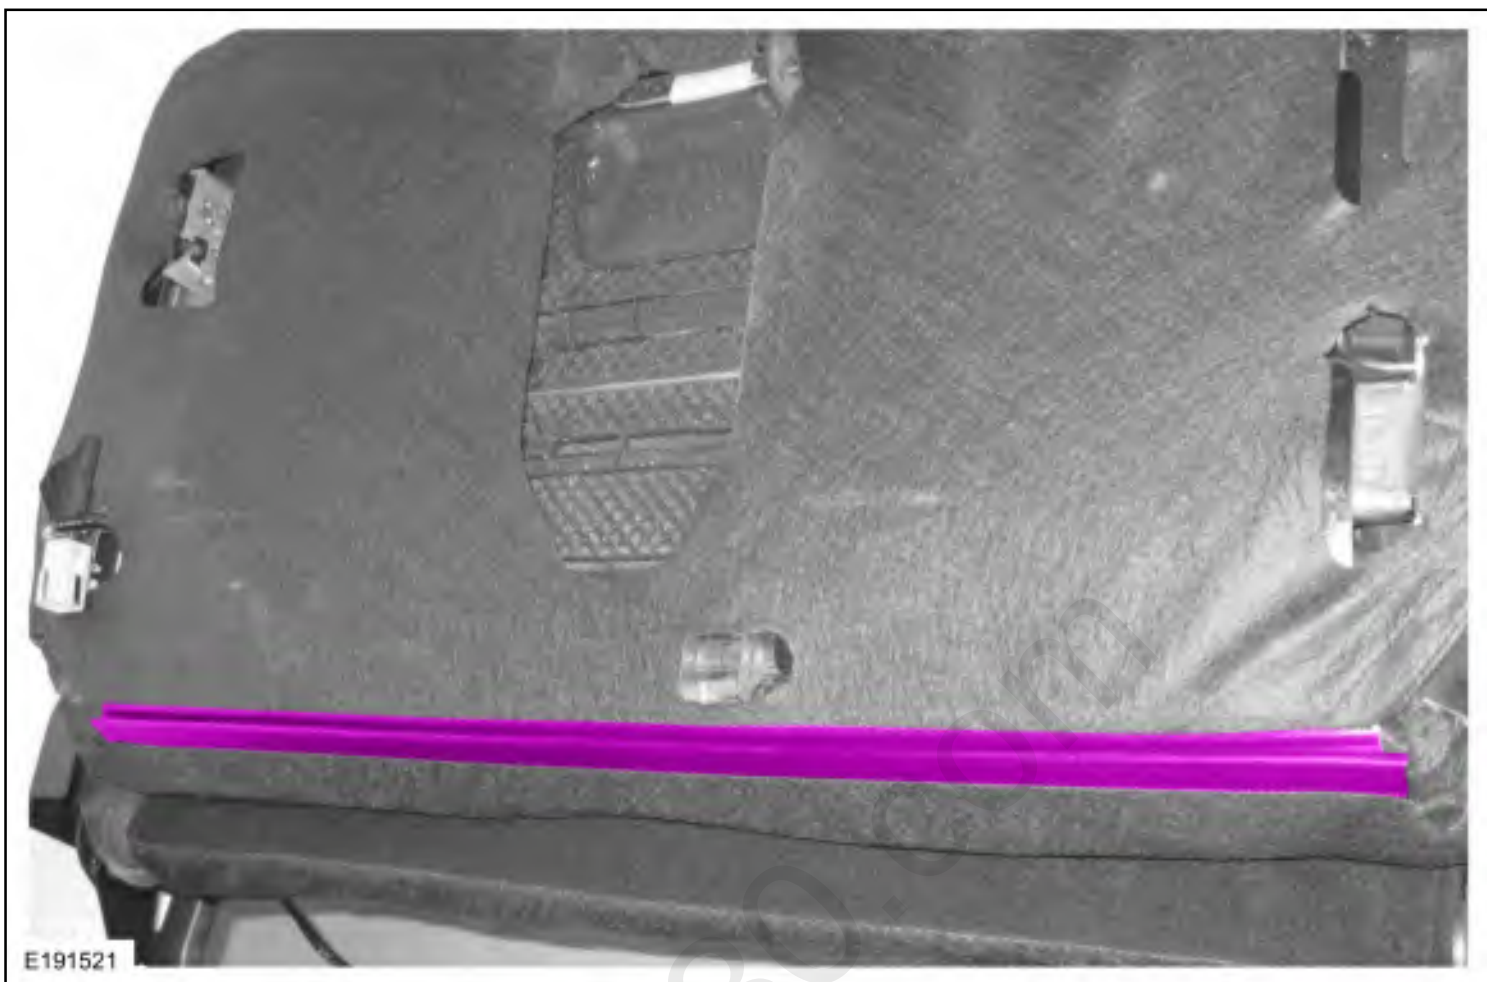


3. Unzip and open the backrest cover.

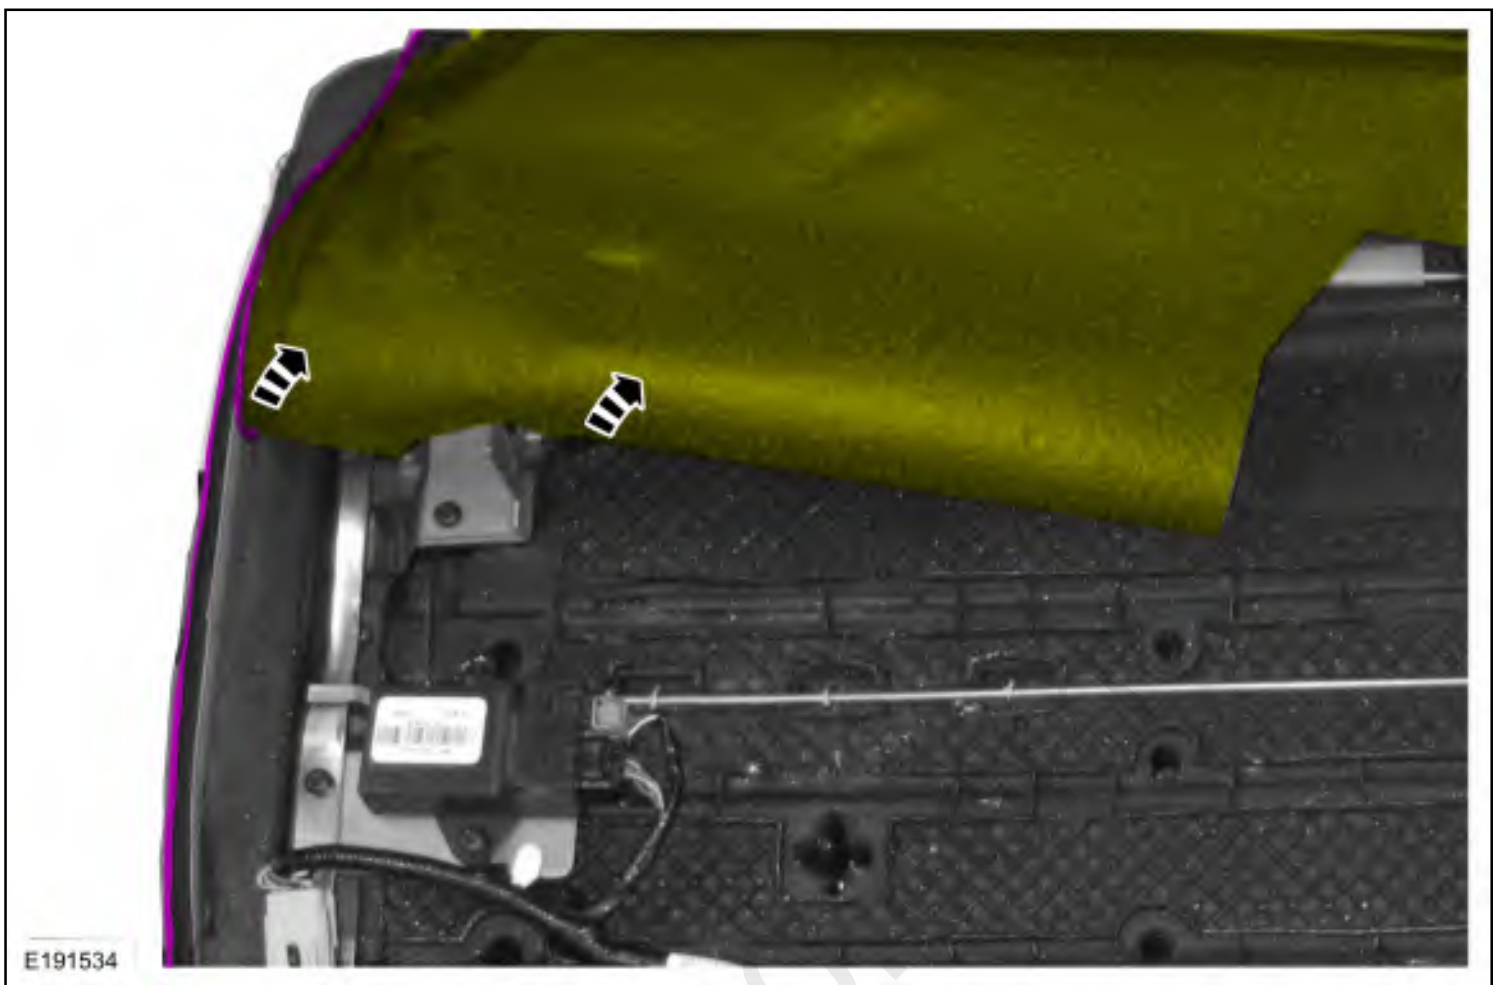

4. Disconnect the electrical connectors. Remove the module fastener.

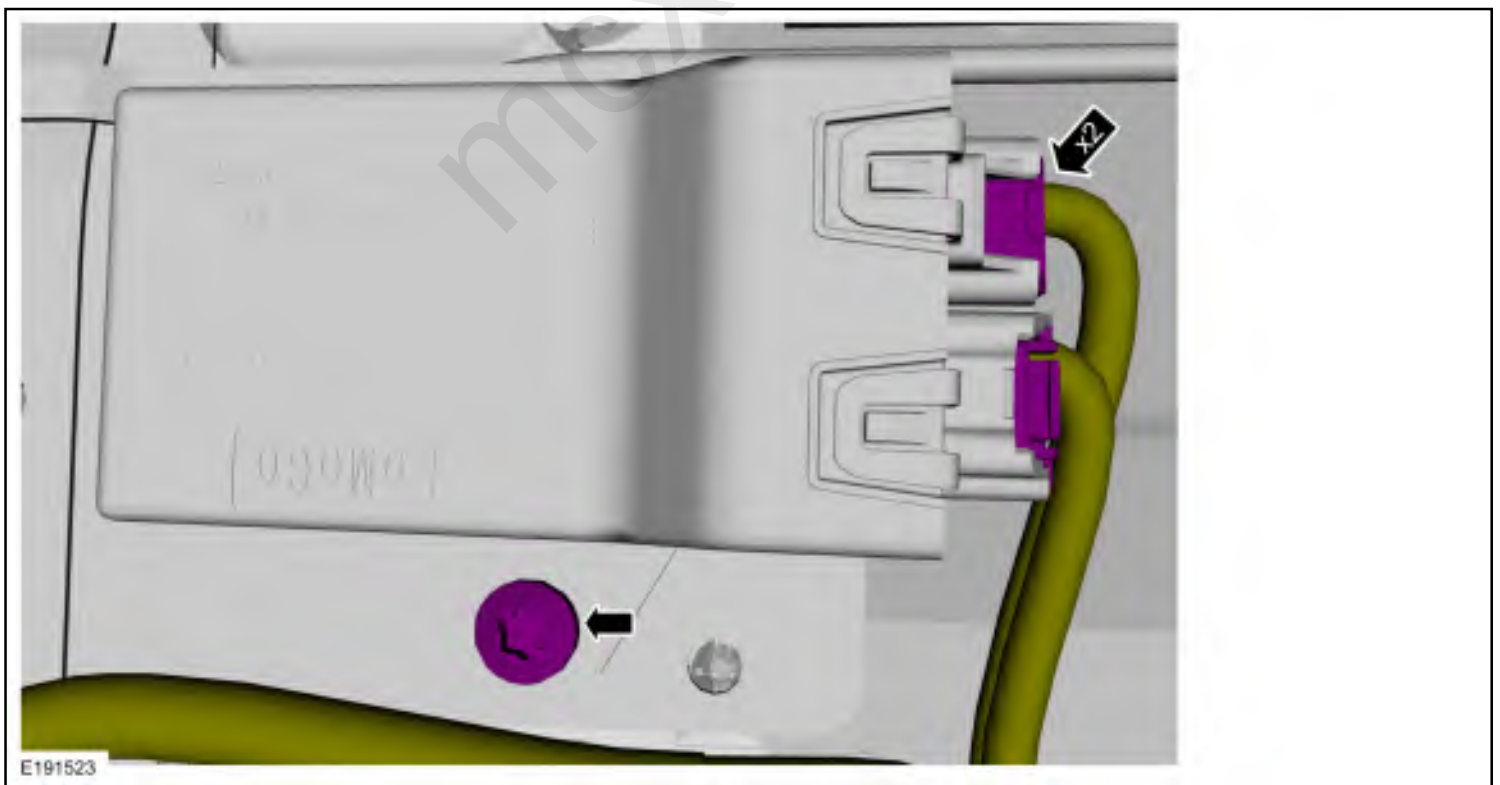

5. Rotate and remove the heated seat module.

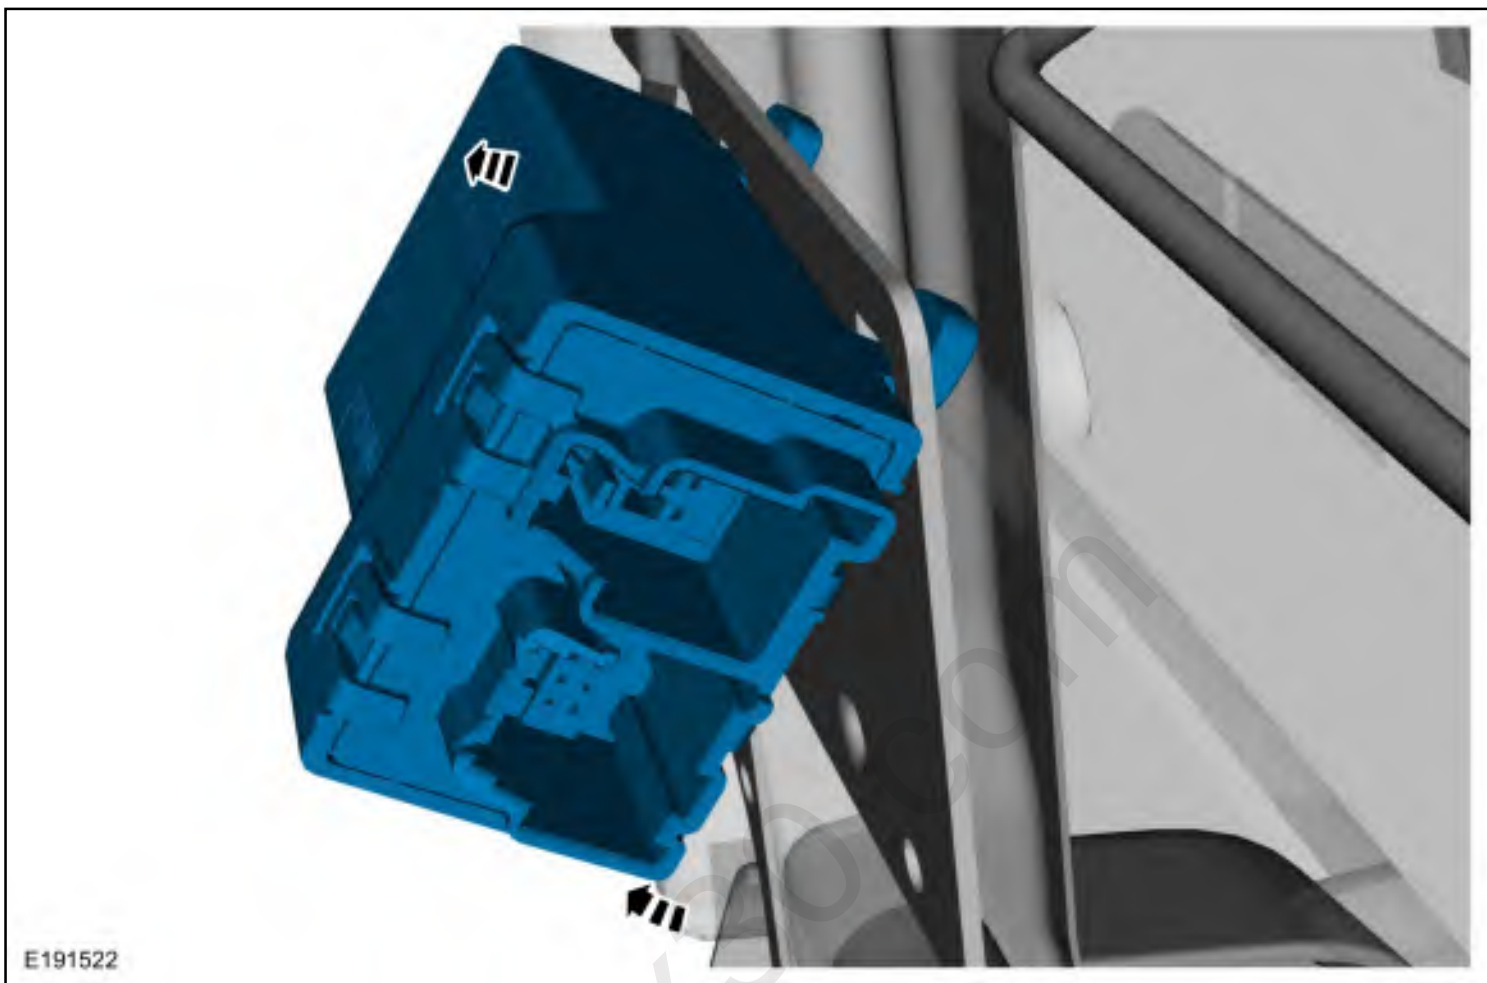

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company
