

Front Door Window Control Switch - Vehicles With: Front Power Windows

Removal


Both doors

1. Remove the front door trim panel.

Refer to: [Front Door Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).


Driver door

2. Remove the front door window control switch.
 1. Remove the front door window control switch screws.
 2. Remove the front door window control switch from the door trim panel.

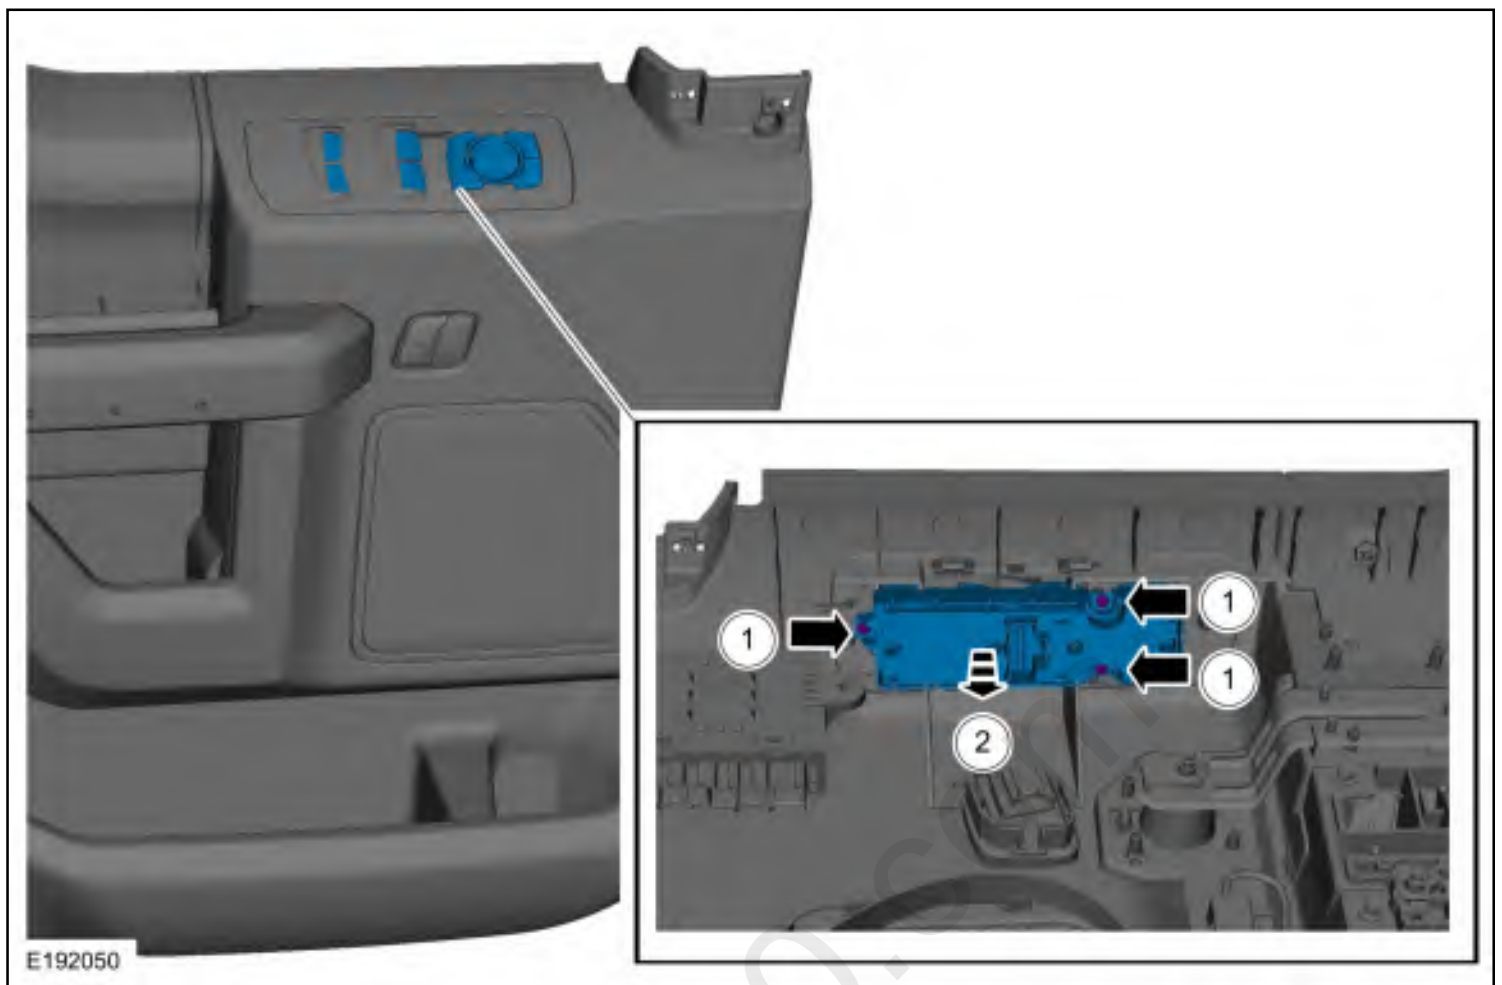

Passenger door

3. Remove the front door window control switch.
 1. Release the front door window control switch retaining clips.
 2. Remove the front door window control switch from the door trim panel.

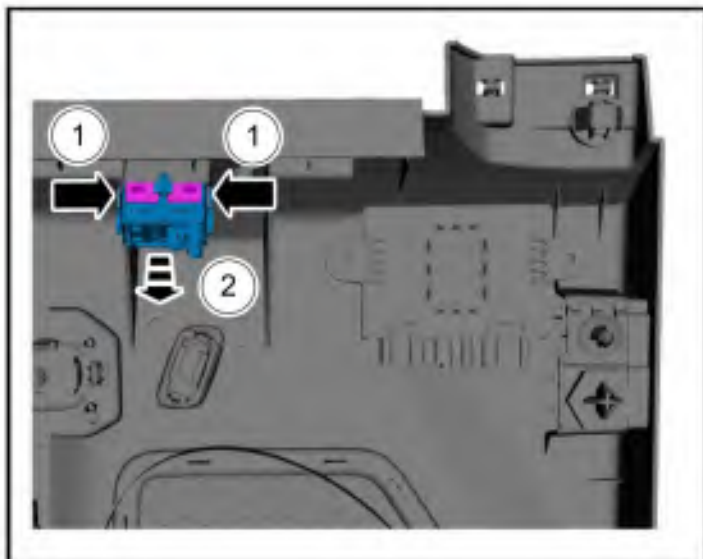

E192051

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company

Front Door Window Glass

Base Part Number: Base Part Number: 21410

Removal

NOTE: *LH side shown, RH side similar.*

NOTE: *Removal steps in this procedure may contain installation details.*

1. Remove the front door window regulator.
Refer to: [Front Door Window Regulator and Motor - Vehicles With: Front Power Windows](#) (501-11 Glass, Frames and Mechanisms, Removal and Installation).
Refer to: [Front Door Window Regulator - Vehicles With: Front Manual Windows](#) (501-11 Glass, Frames and Mechanisms, Removal and Installation).
2. Lower the front door window glass.



E192501




3. Remove the inner belt moulding.



4. Remove the front door glass top run.



E192518

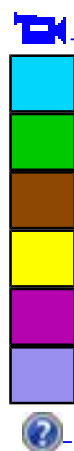

5. Remove the front door glass.



Installation

All vehicles

1. To install, reverse the removal procedure.

Vehicles with power windows

2. Carry out the power door window initialization.
Refer to: [Power Door Window Initialization](#) (501-11 Glass, Frames and Mechanisms, General Procedures).