

Front Door Window Regulator - Vehicles With: Front Manual Windows

Base Part Number: Base Part Number: 1523200

Removal


NOTE: LH side shown, RH side similar.

NOTE: Removal steps in this procedure may contain installation details.


1. Remove the front door trim panel.
Refer to: [Front Door Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Remove the watershield.



3. Lower the front door window glass.
 1. Partially install the window crank handle.
 2. Lower the front door window glass.

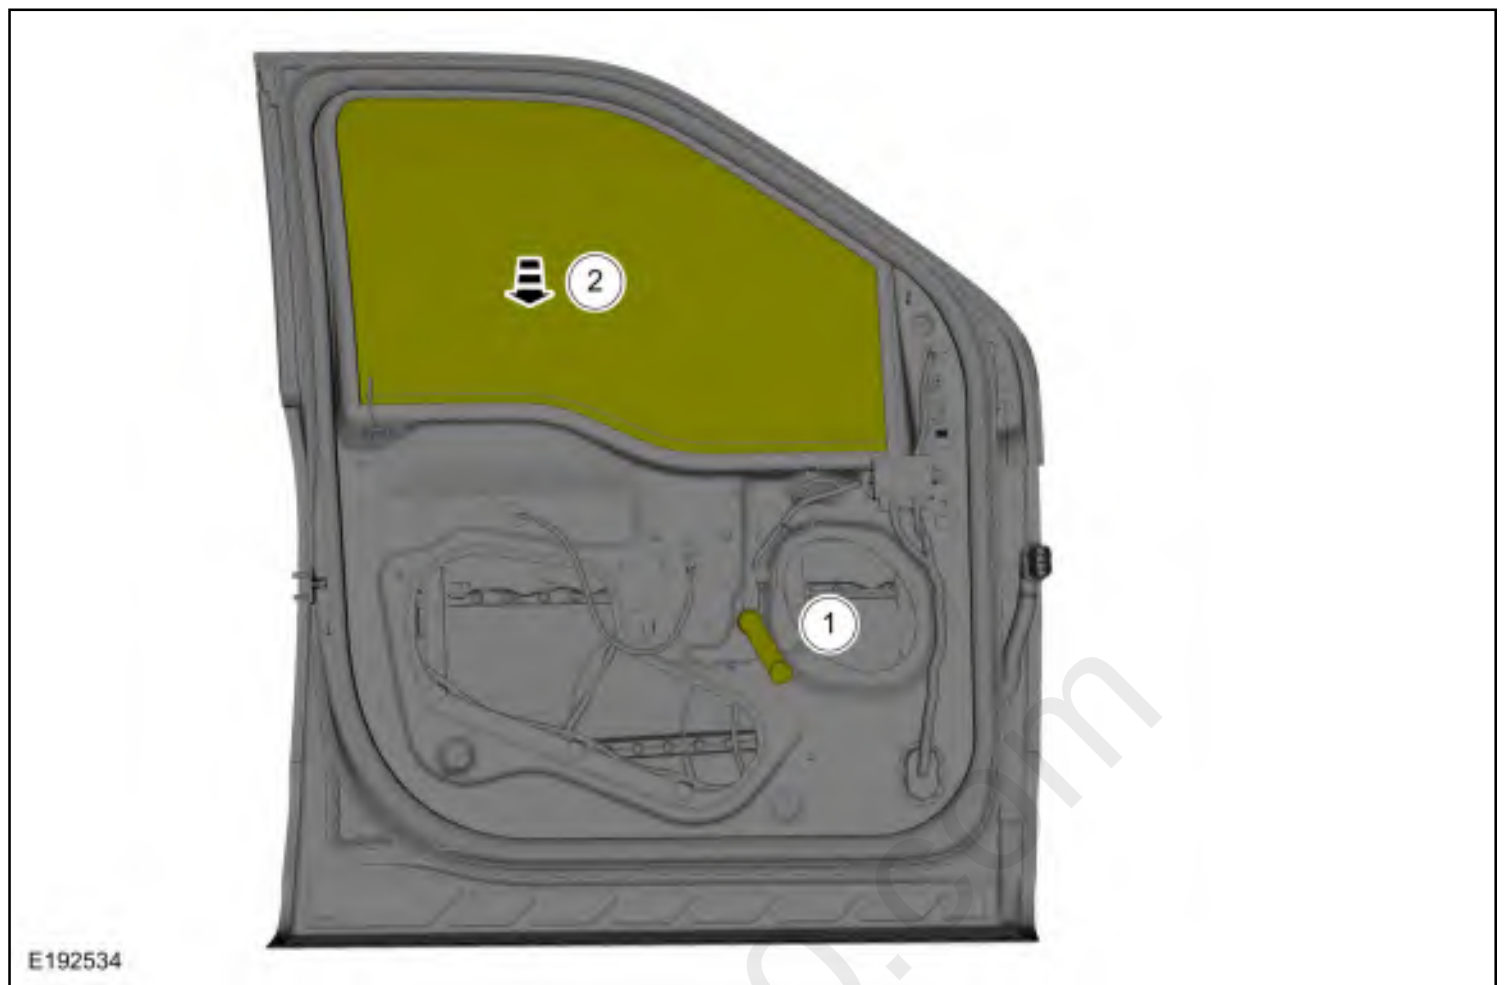

4. Release the retaining clips from front door window glass.

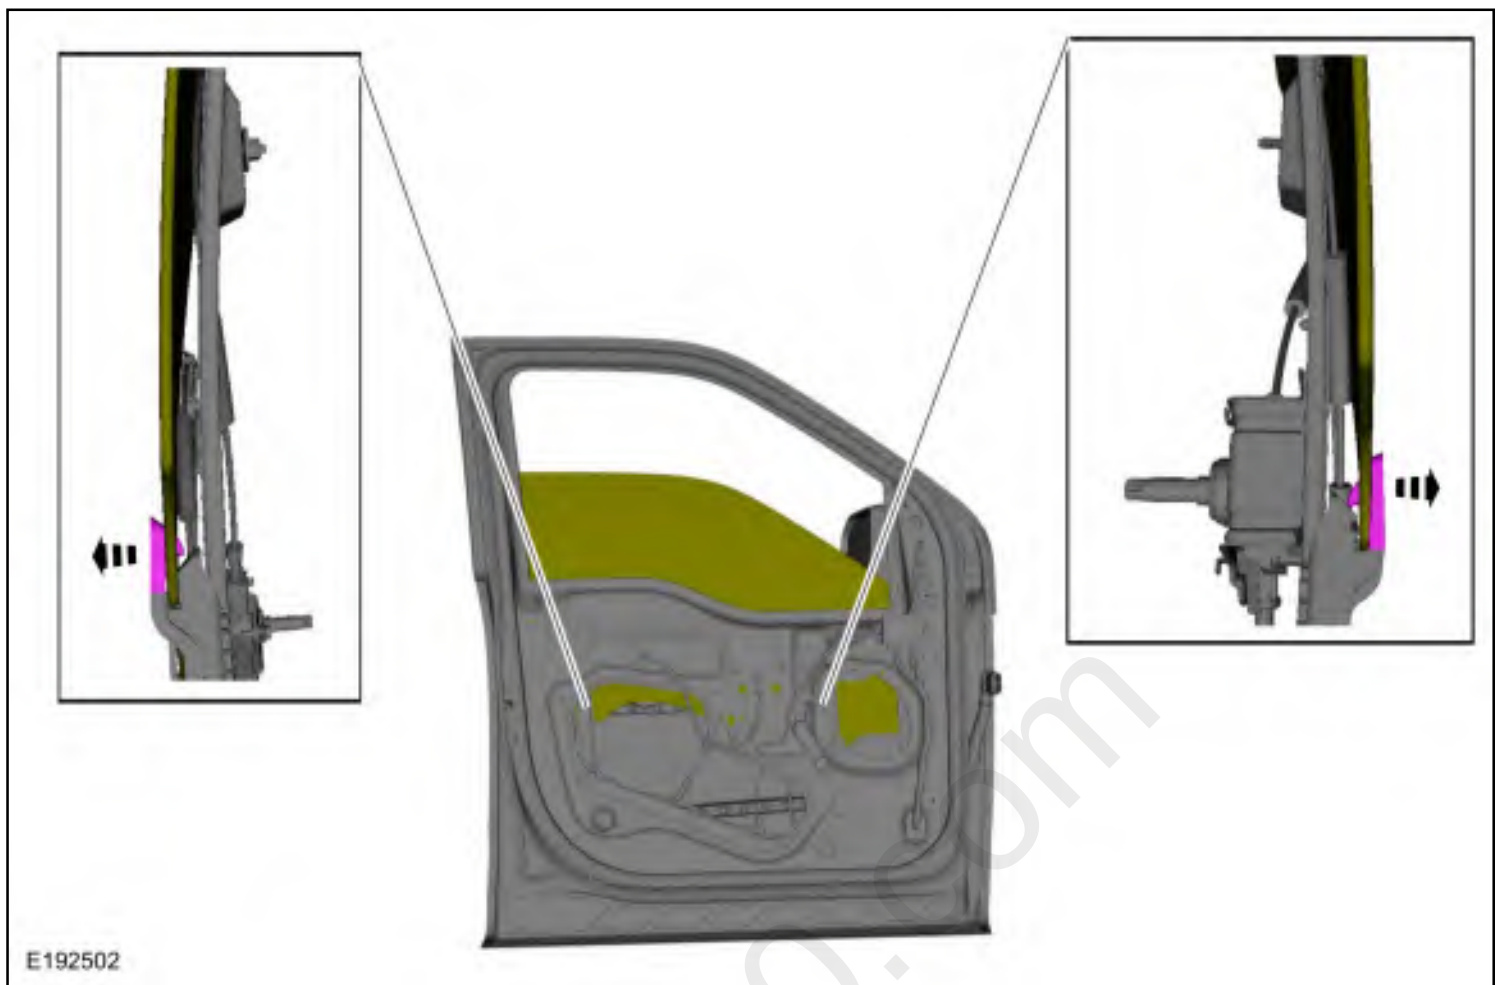


5. Raise the front door window glass and tape in place.
 1. Raise the front door window glass.
 2. Tape the front door window glass in place.




6. Remove the front door window crank handle.




7. Remove the front door window regulator nut covers.

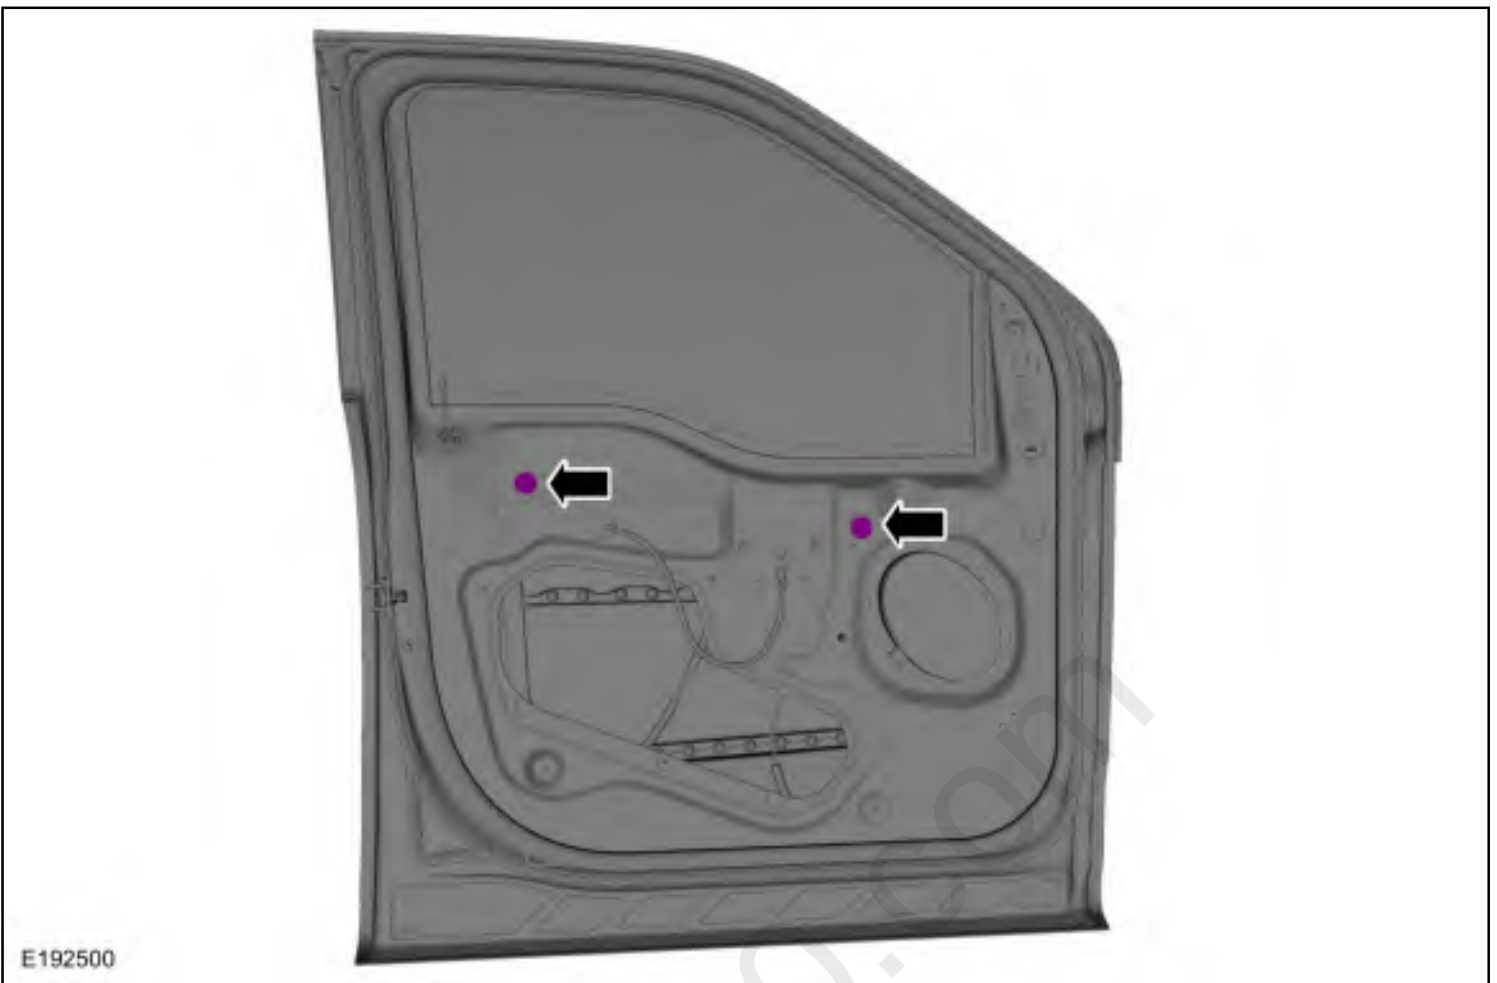

8. Remove the front door window regulator bolts and nuts.
Torque: 93 lb.in (10.5 Nm)

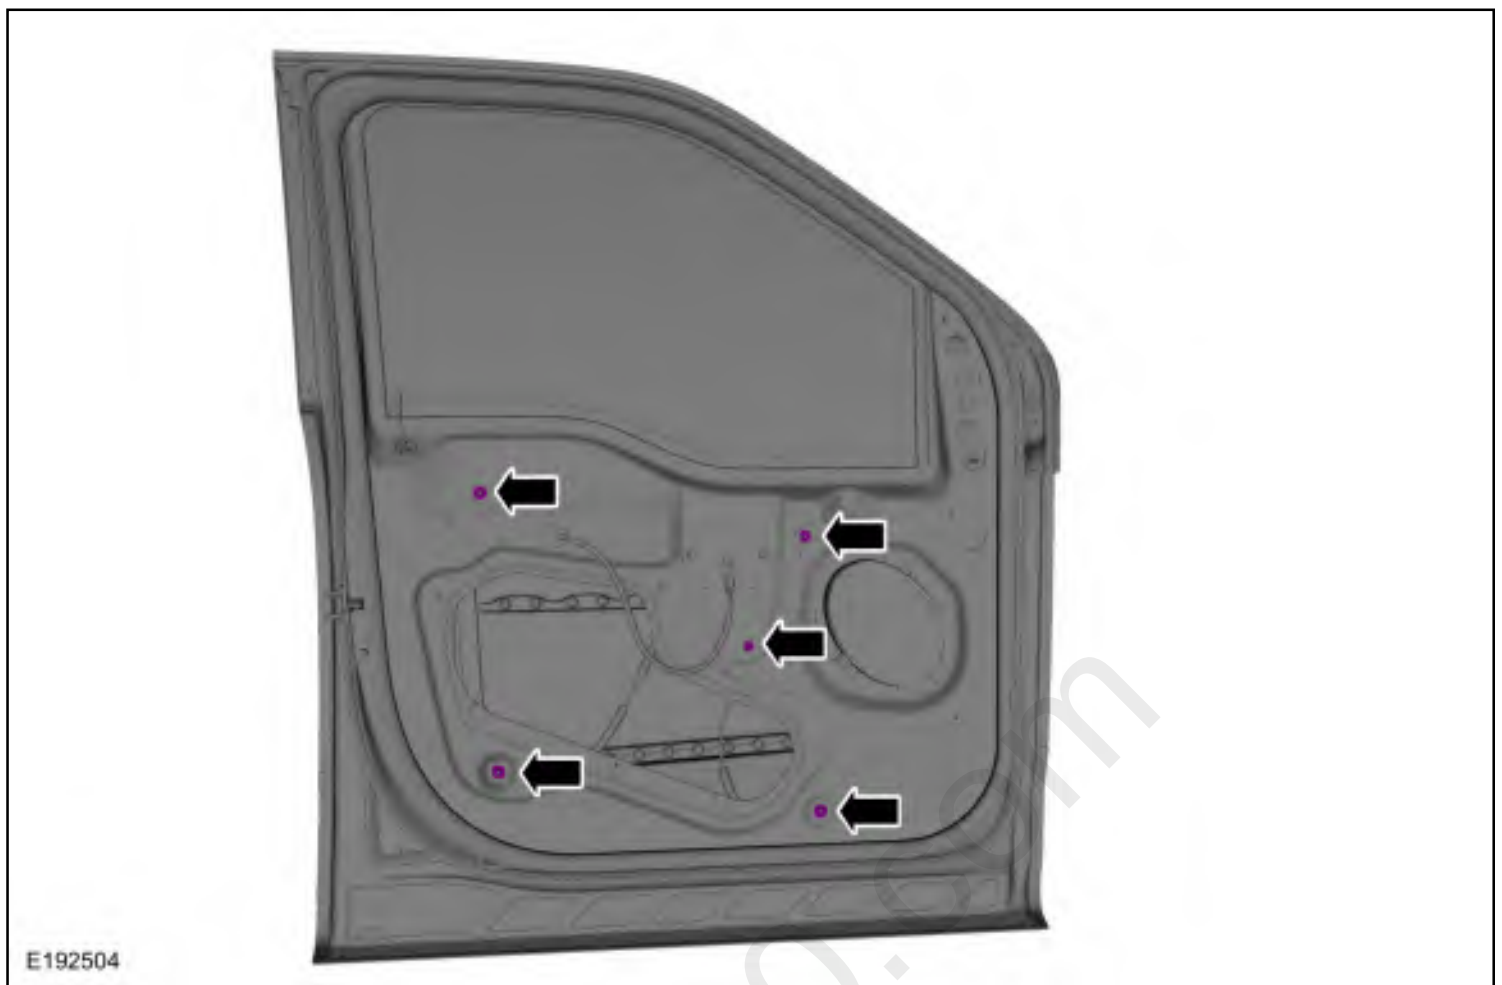

9. Remove the front door window regulator.

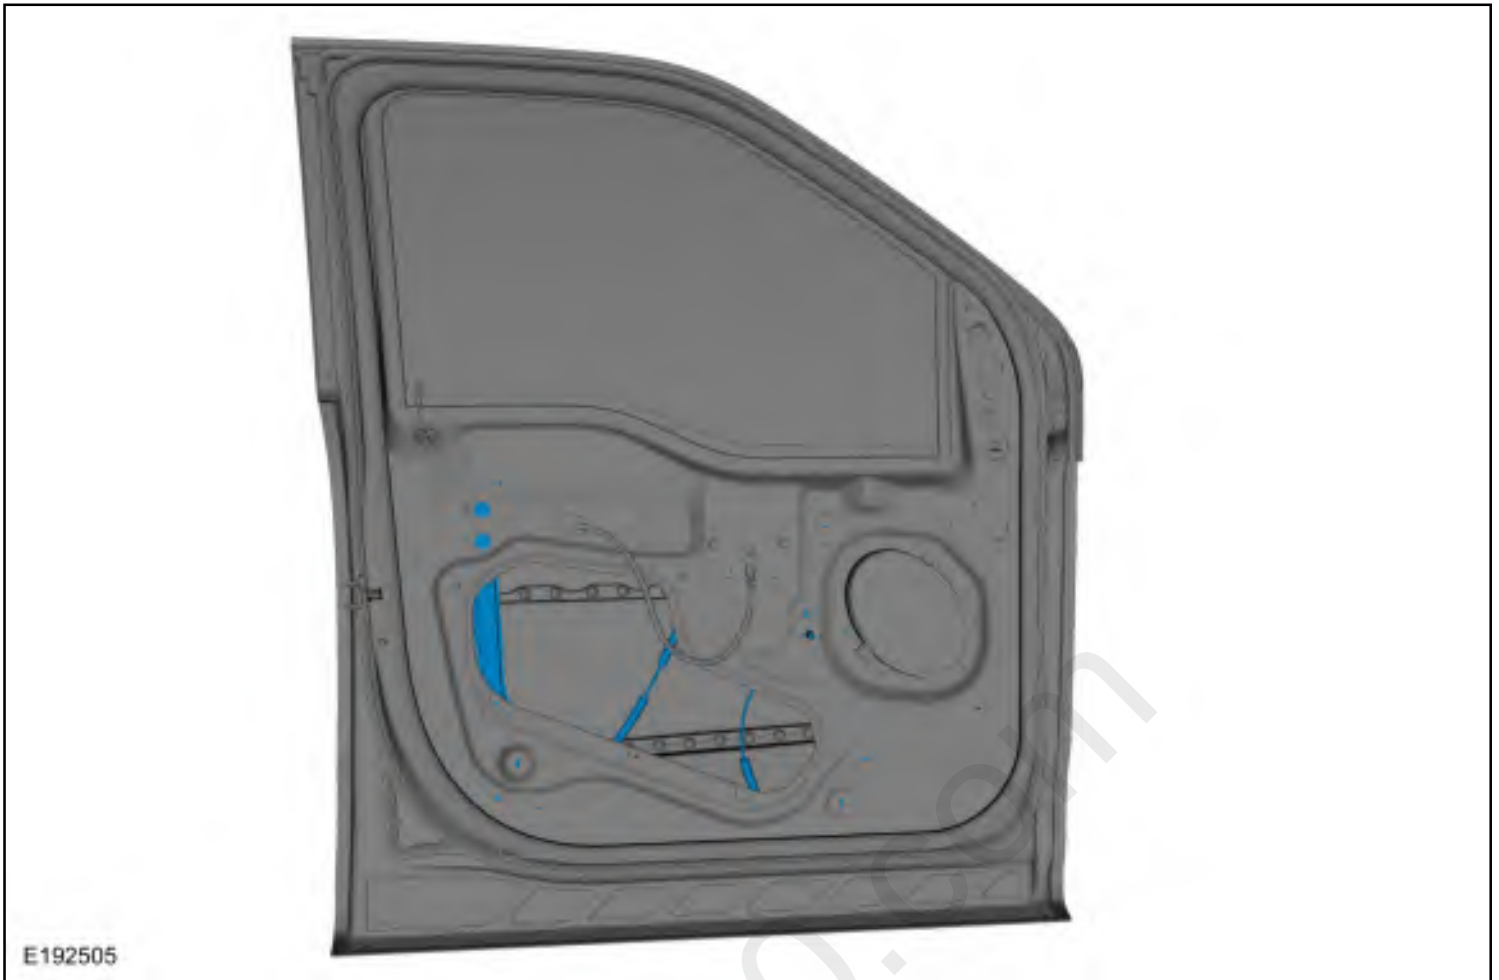

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company
