

Rear Door Window Glass - SuperCab, Vehicles With: Rear Power Windows

Base Part Number: Base Part Number: 25712

Removal

NOTE: LH side shown, RH side similar.

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the rear door window control switch.

Refer to: [Rear Door Window Control Switch - SuperCab, Vehicles With: Rear Power Windows](#) (501-11 Glass, Frames and Mechanisms, Removal and Installation).


2. Remove the watershield.



E192561




3. Remove the aft rear door glass run and bracket.
Torque: 93 lb.in (10.5 Nm)

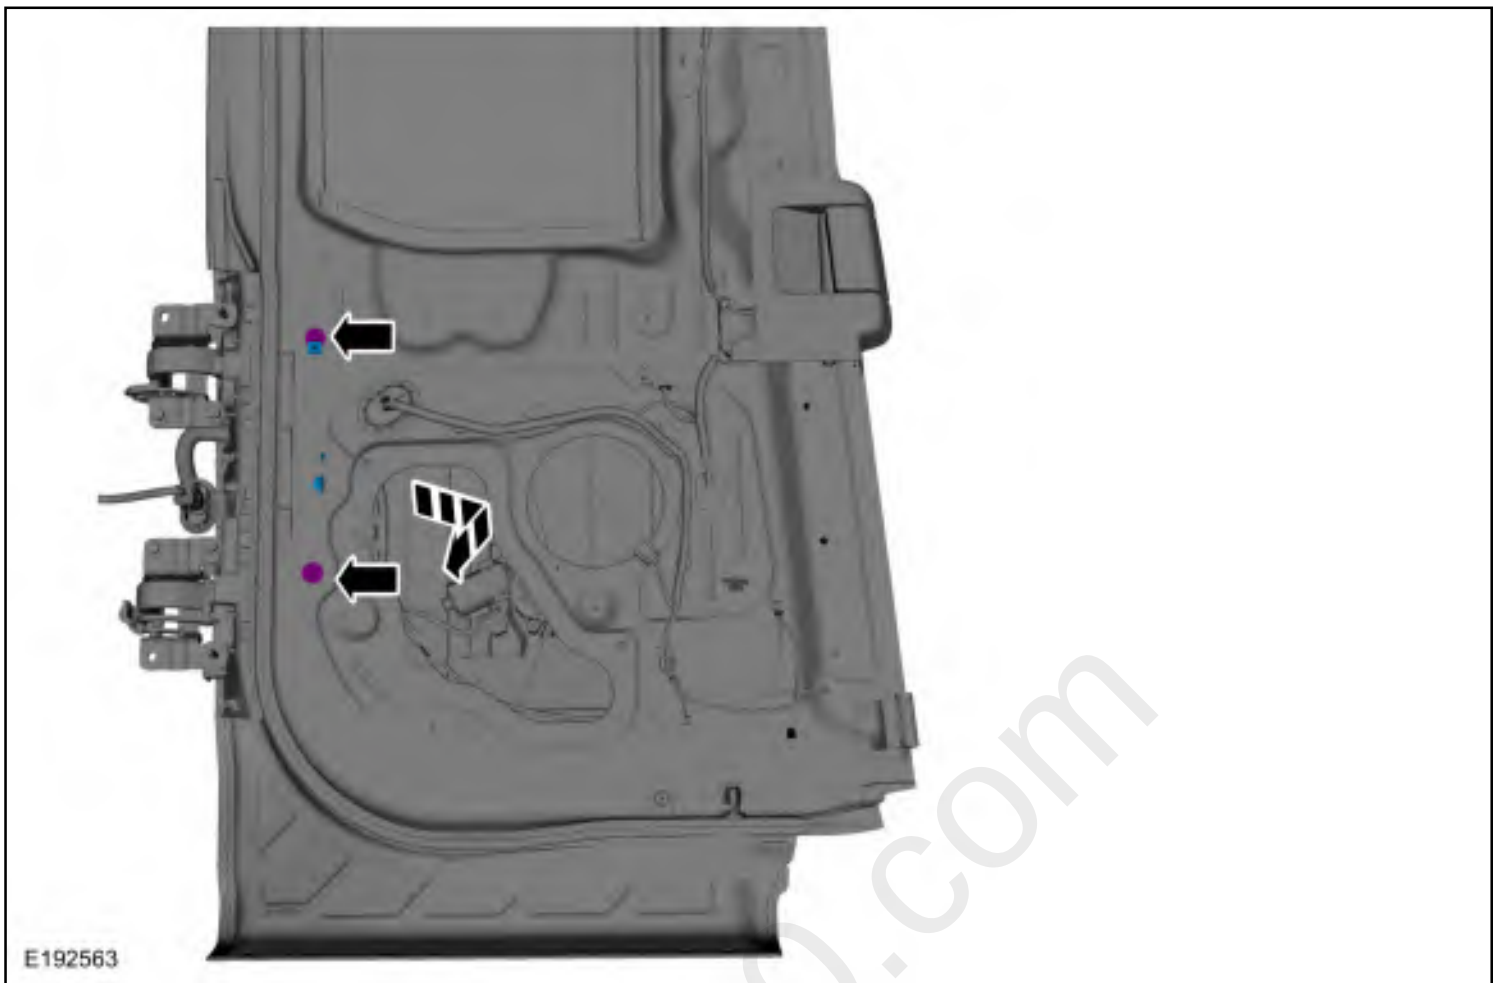

4. **NOTE:** For non-functional rear door window regulators and motors with the window in the 40 mm open to full closed position, cut the rear door window regulator cables to allow window movement.

Lower the rear door window glass.

1. Connect the rear door window control switch.
2. Lower the rear door window glass.

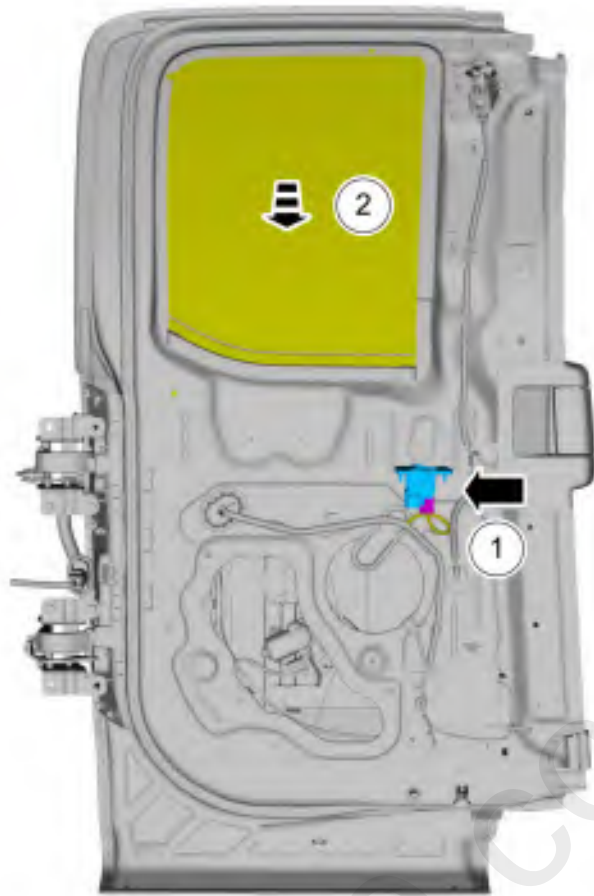


E192565




5. Remove the inner belt moulding.




6. Remove the rear door upper moulding.
Refer to: [Rear Door Upper Moulding](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).
7. Remove the rear door glass top run.

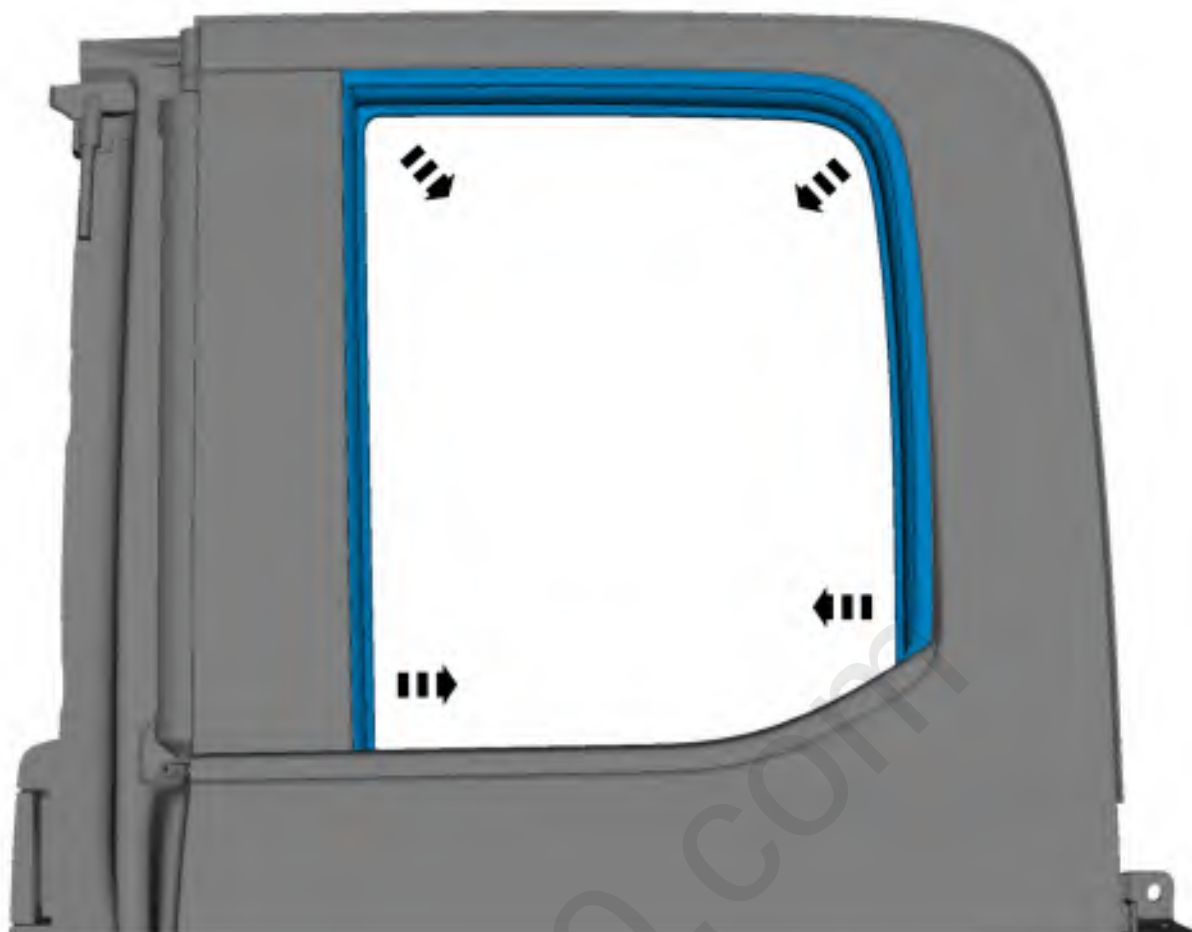

E192560

 

8. Release the rear door window glass.
 1. Pry out the rear door window glass clip.
 2. Release the rear door window glass.

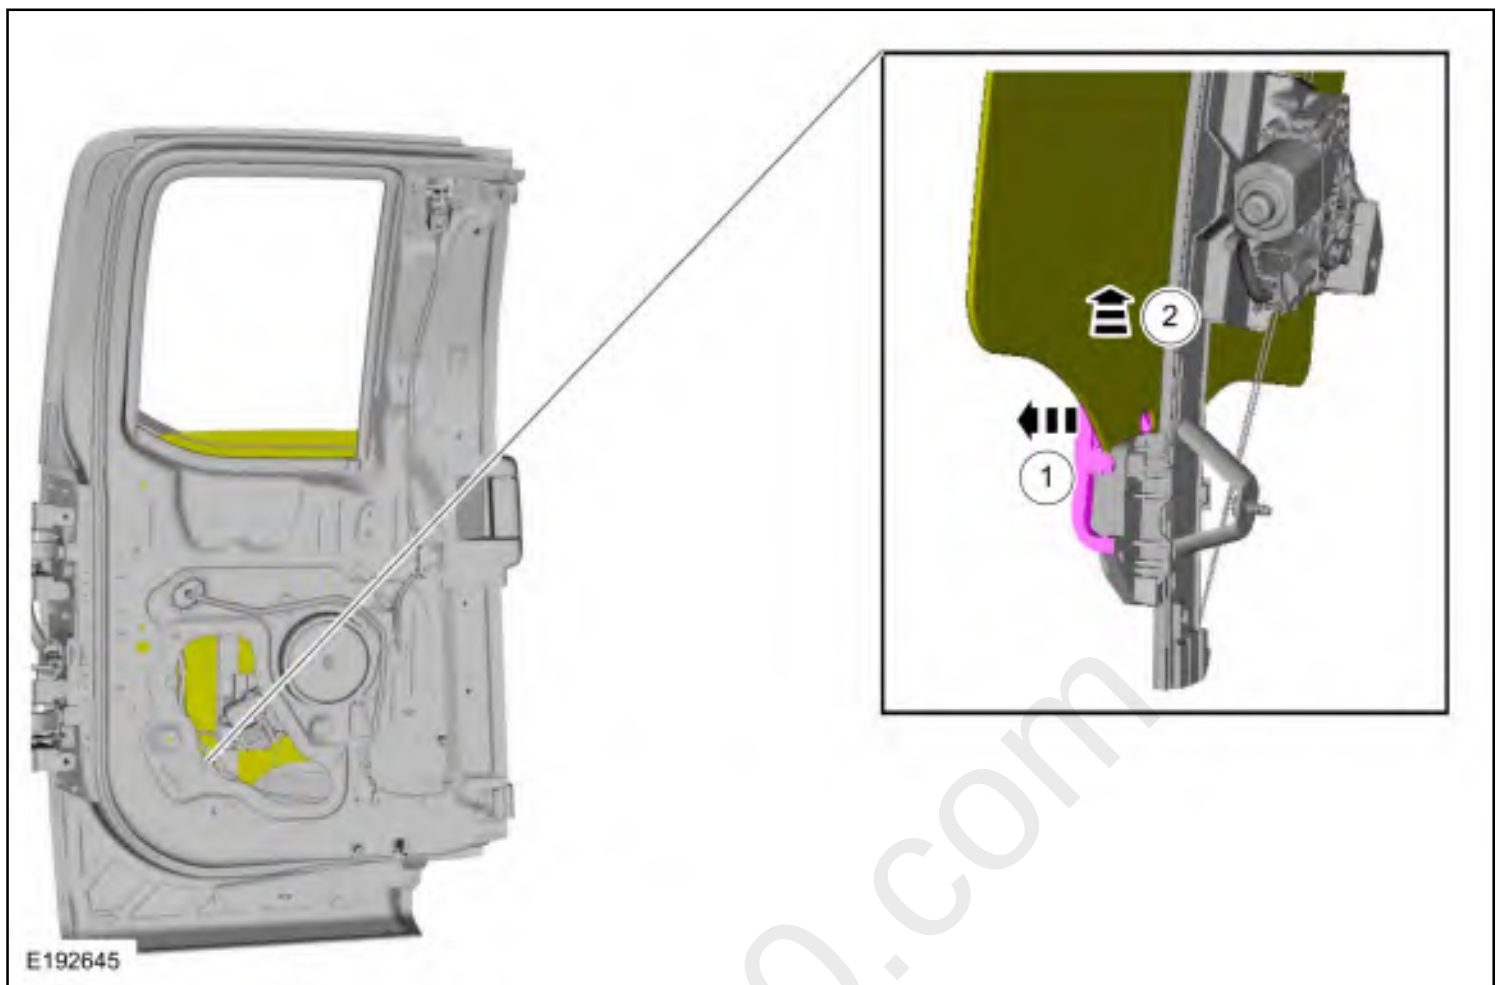

9. Remove the rear door window glass.



E192566



Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company
