

Rear Door Window Regulator and Motor - SuperCab, Vehicles With: Rear Power Windows

Base Part Number: Base Part Number: R27144

Removal

NOTE: LH side shown, RH side similar.


NOTE: Removal steps in this procedure may contain installation details.

NOTE: For non-functional rear door window regulators and motors with the window in the 40 mm open to full closed position, cut the rear door window regulator cables to allow window movement.

1. Remove the rear door window glass.

Refer to: [Rear Door Window Glass - SuperCab, Vehicles With: Rear Power Windows](#) (501-11 Glass, Frames and Mechanisms, Removal and Installation).

2. Remove the rear door window regulator and motor.
 1. Remove the rear door window regulator bolt and nuts.
Torque: 93 lb.in (10.5 Nm)
 2. Disconnect the rear door window regulator motor electrical connector.
 3. Remove the rear door window regulator and motor.

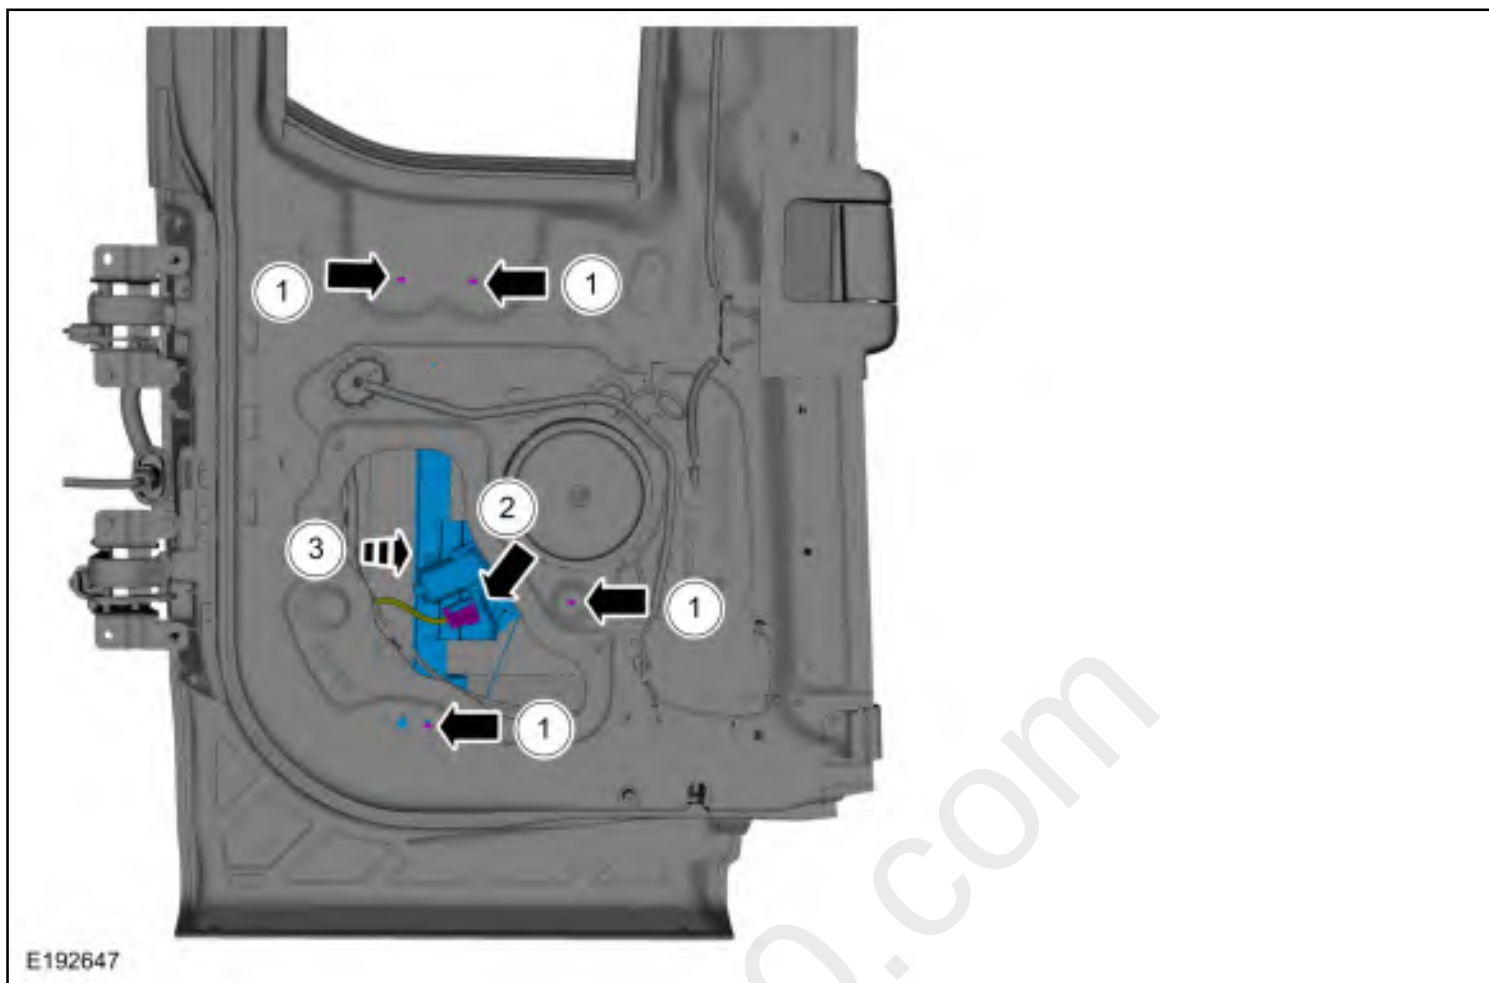

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company