

Rear Door Window Regulator and Motor - SuperCrew, Vehicles With: Rear Power Windows

Base Part Number: Base Part Number: R27144

Removal

NOTE: LH side shown, RH side similar.

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the rear door window control switch

Refer to: [Rear Door Window Control Switch - SuperCrew, Vehicles With: Rear Power Windows](#)
(501-11 Glass, Frames and Mechanisms, Removal and Installation).

2. Remove the watershield.



E192556



3. **NOTE:** For non-functional rear door window regulators and motors with the window in the 40 mm open to full closed position, cut the rear door window regulator cables to allow window movement.

Lower the rear door window glass.


1. Install the rear door window control switch.
2. Lower the rear door window glass.




E192666



4. Release the clips from rear door window glass.

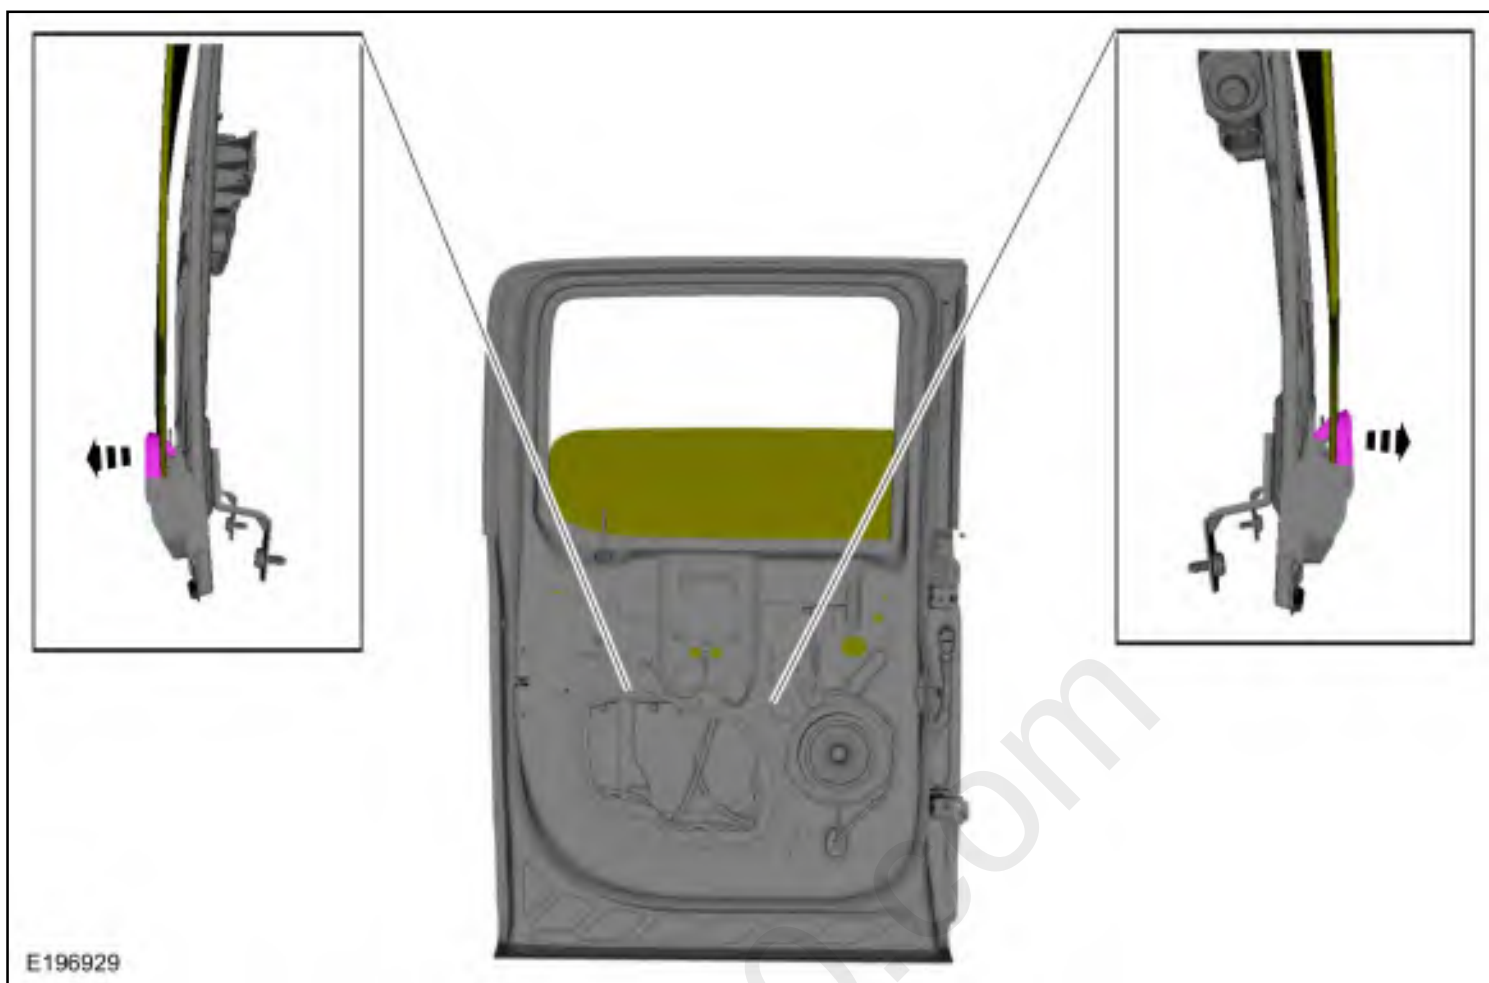

5. Remove the rear door speaker.
Torque: 22 lb.in (2.5 Nm)

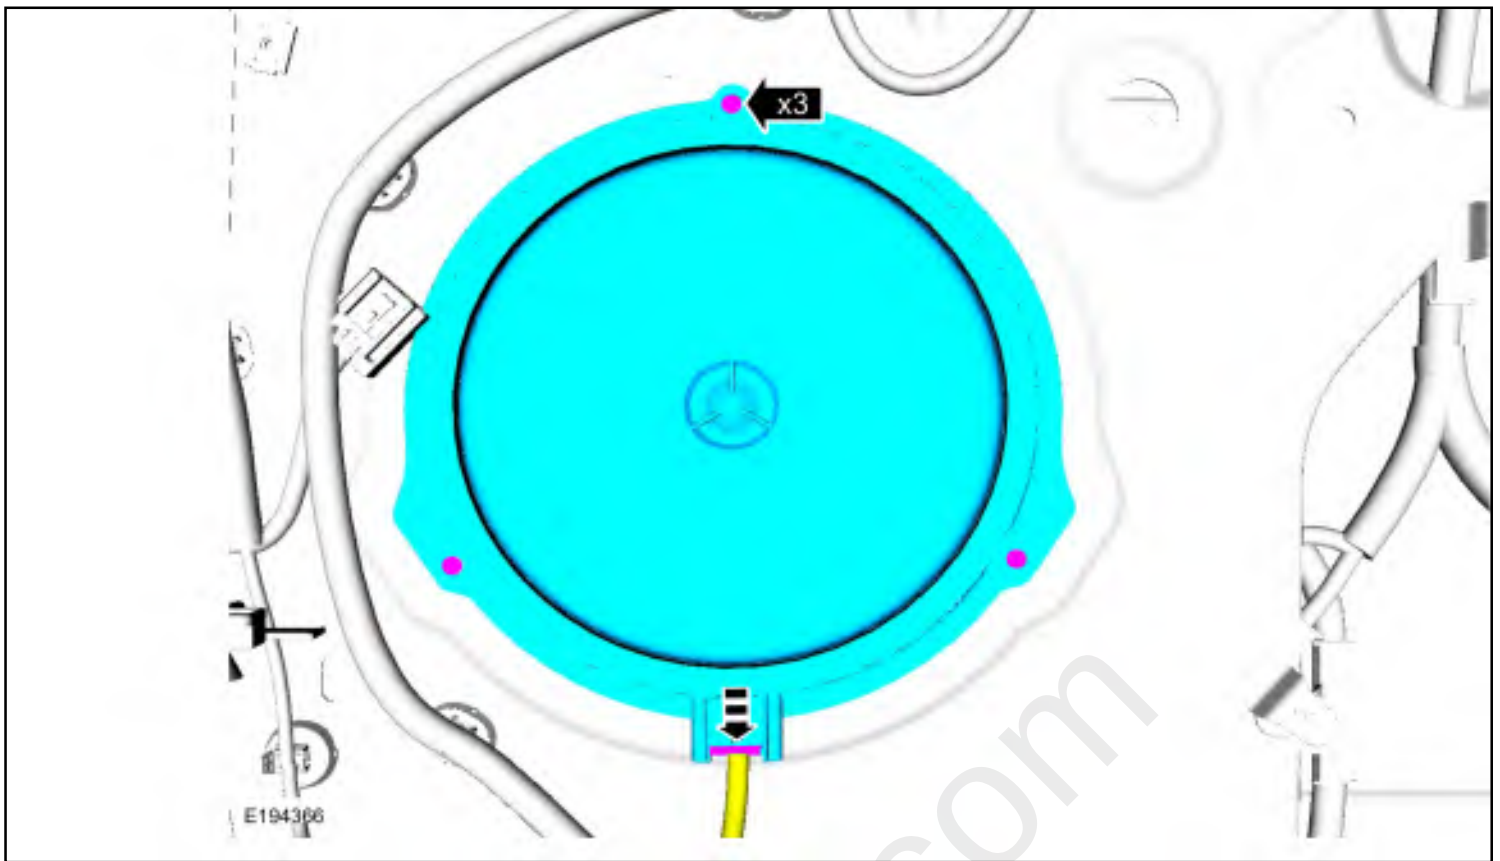

6. Raise the rear door window glass and tape in place.

1. Raise the rear door window glass.
2. Tape the rear door window glass in place.



E193877




7. Remove the rear door window regulator bolts and nuts.
Torque: 93 lb.in (10.5 Nm)



E196927



8. Disconnect the rear door window regulator motor electrical connector.

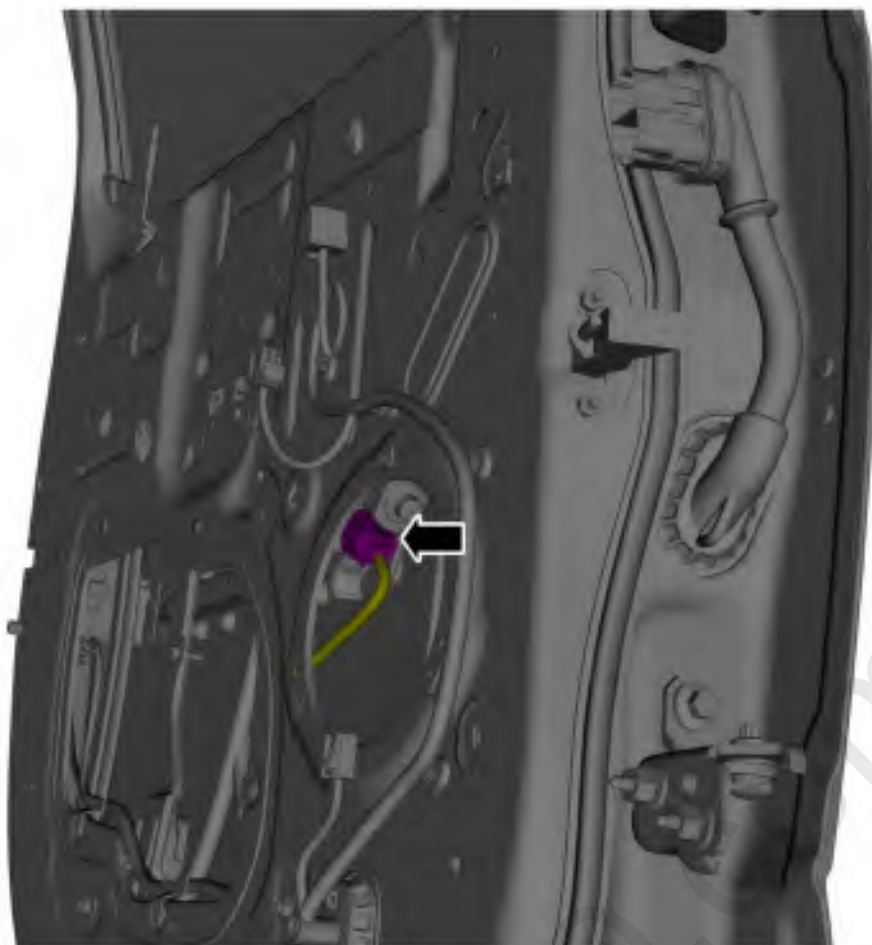

E192673



9. Remove the rear door window regulator and motor.



E196928



Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company
