

Floor Console

Base Part Number: Base Part Number: S043B04

Special Tool(s) / General Equipment


Interior Trim Remover

Removal


All vehicles

NOTE: Removal steps in this procedure may contain installation details.


1. Release the clips and remove the RH lower floor console trim panel.
Use the General Equipment: Interior Trim Remover

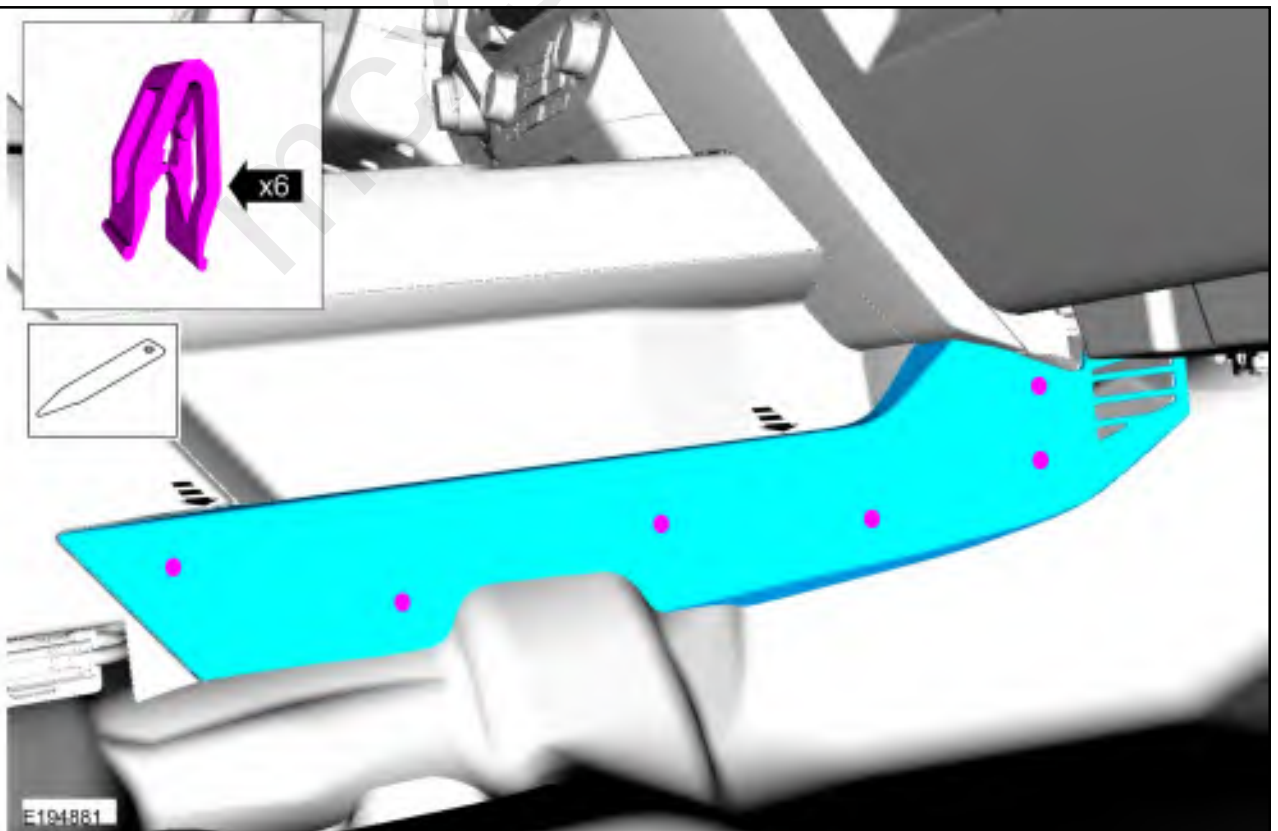


2. Remove the screw, release the clips and remove the LH lower floor console trim panel.
Use the General Equipment: Interior Trim Remover
Torque: 22 lb.in (2.5 Nm)

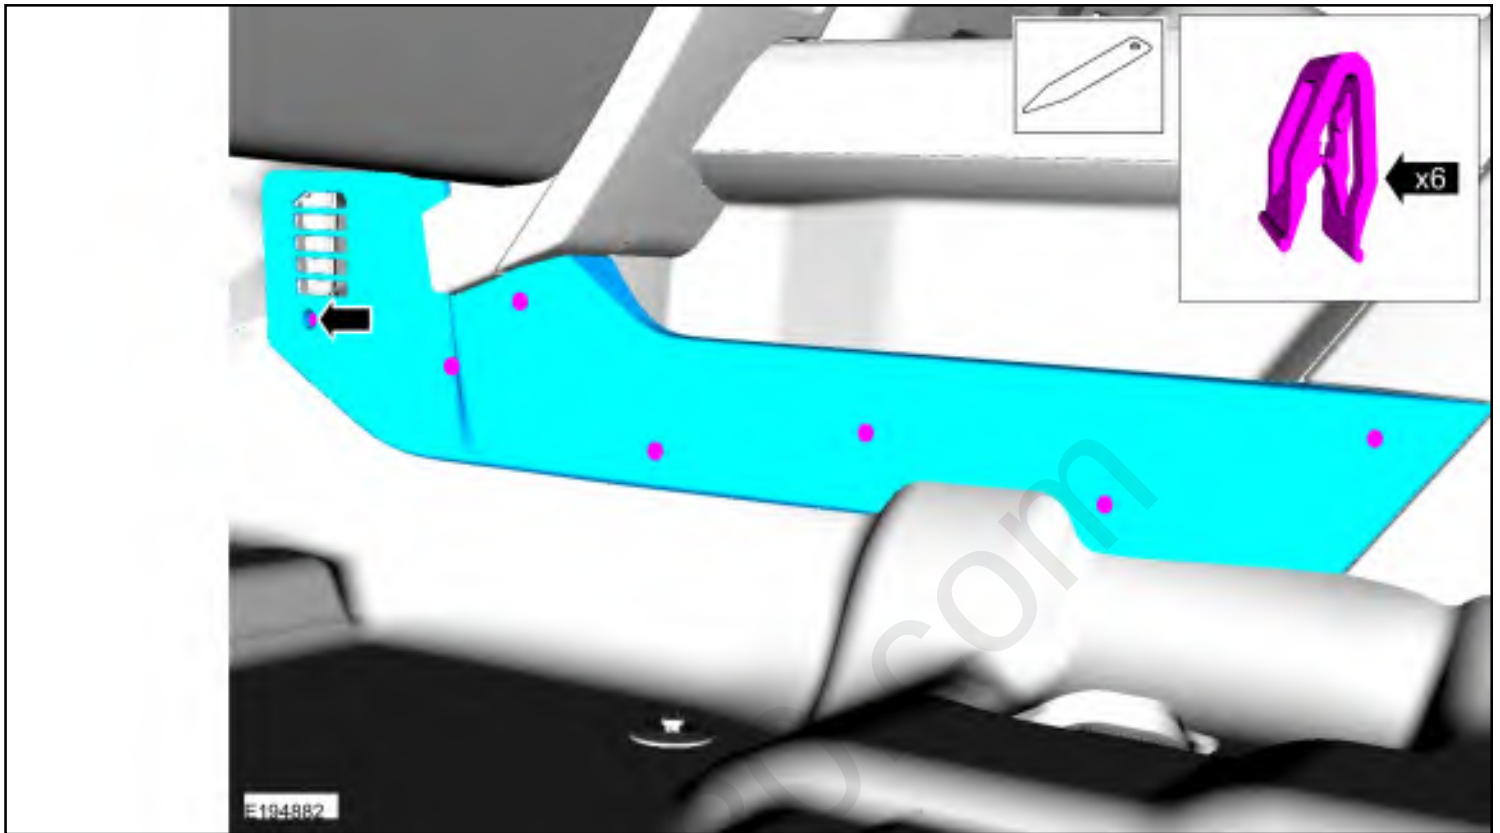

3. Remove the RH finish panel.
Use the General Equipment: Interior Trim Remover

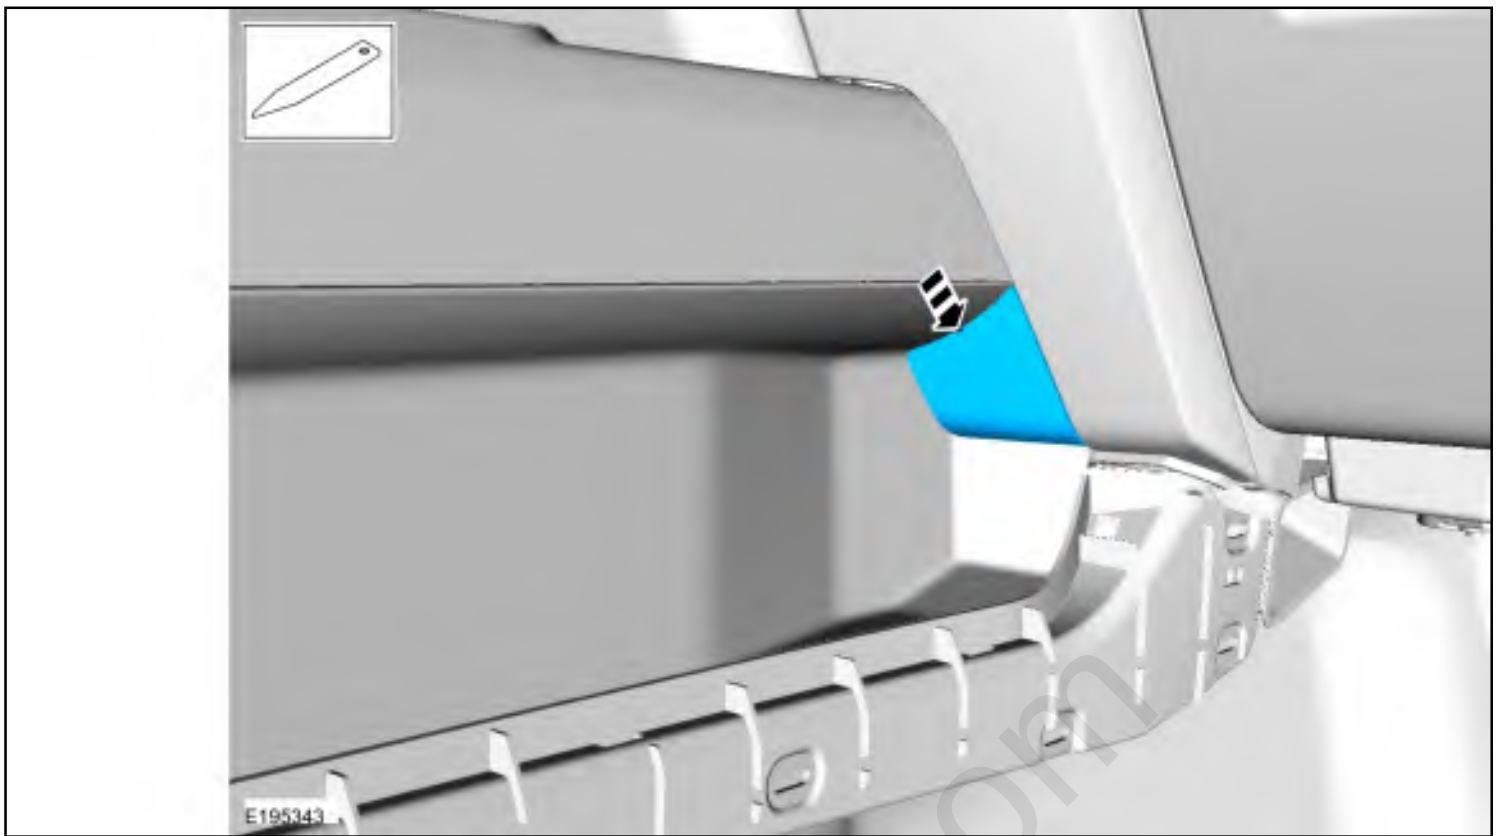

4. Remove the LH finish panel.
Use the General Equipment: Interior Trim Remover

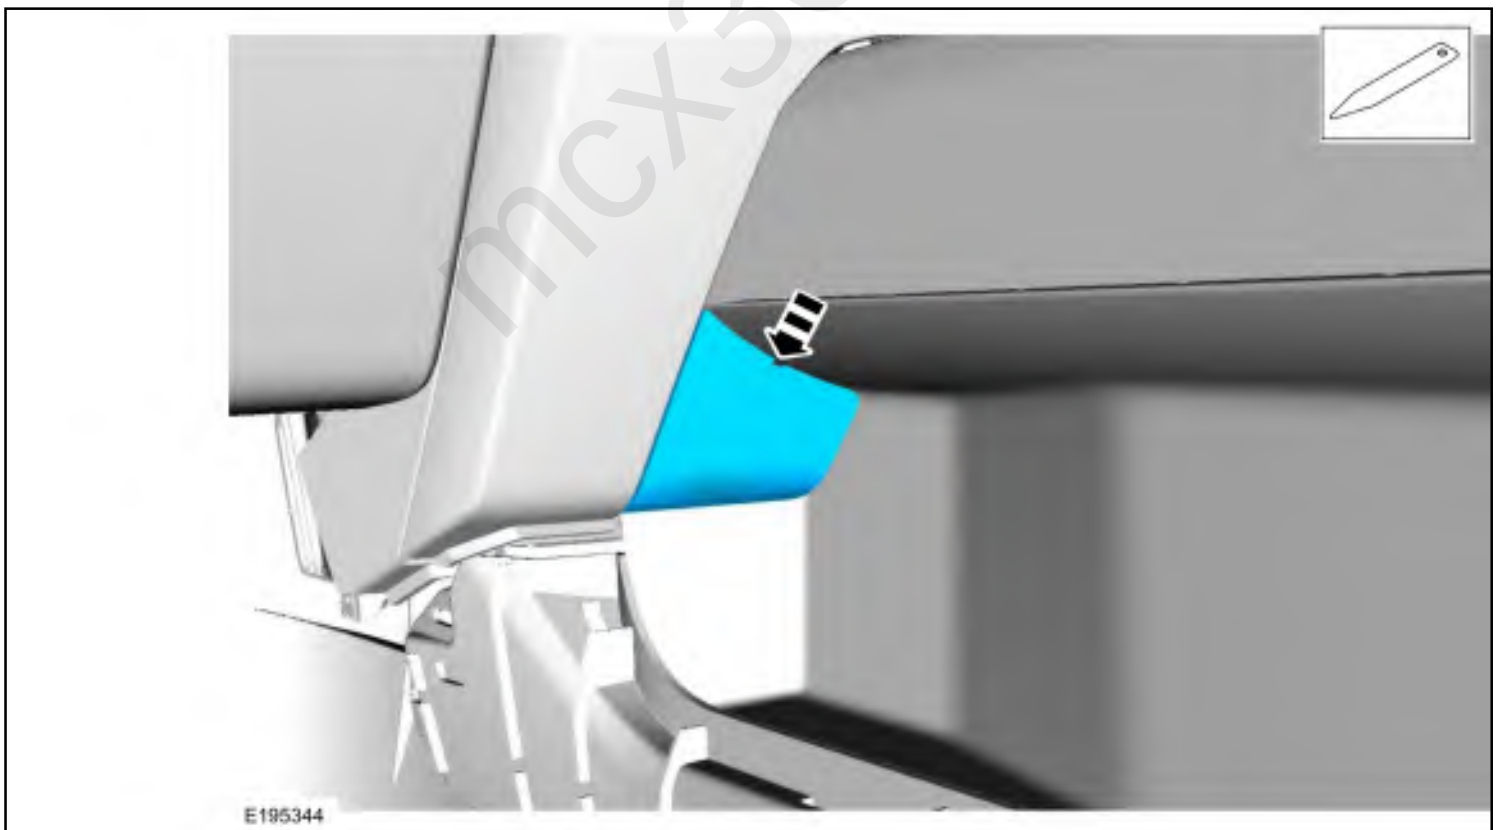


Vehicles with floor mounted selector lever

5. Remove the selector lever assembly.


Refer to: [Selector Lever Assembly - Vehicles With: Floor Shift](#) (307-05 Automatic Transmission External Controls, Removal and Installation).

Vehicles with steering column mounted selector lever

1. Release the 6 clips working from the rear of the trim panel forward.
2. Release the 2 clips that attach to the instrument panel by pulling rearward and remove the trim panel.

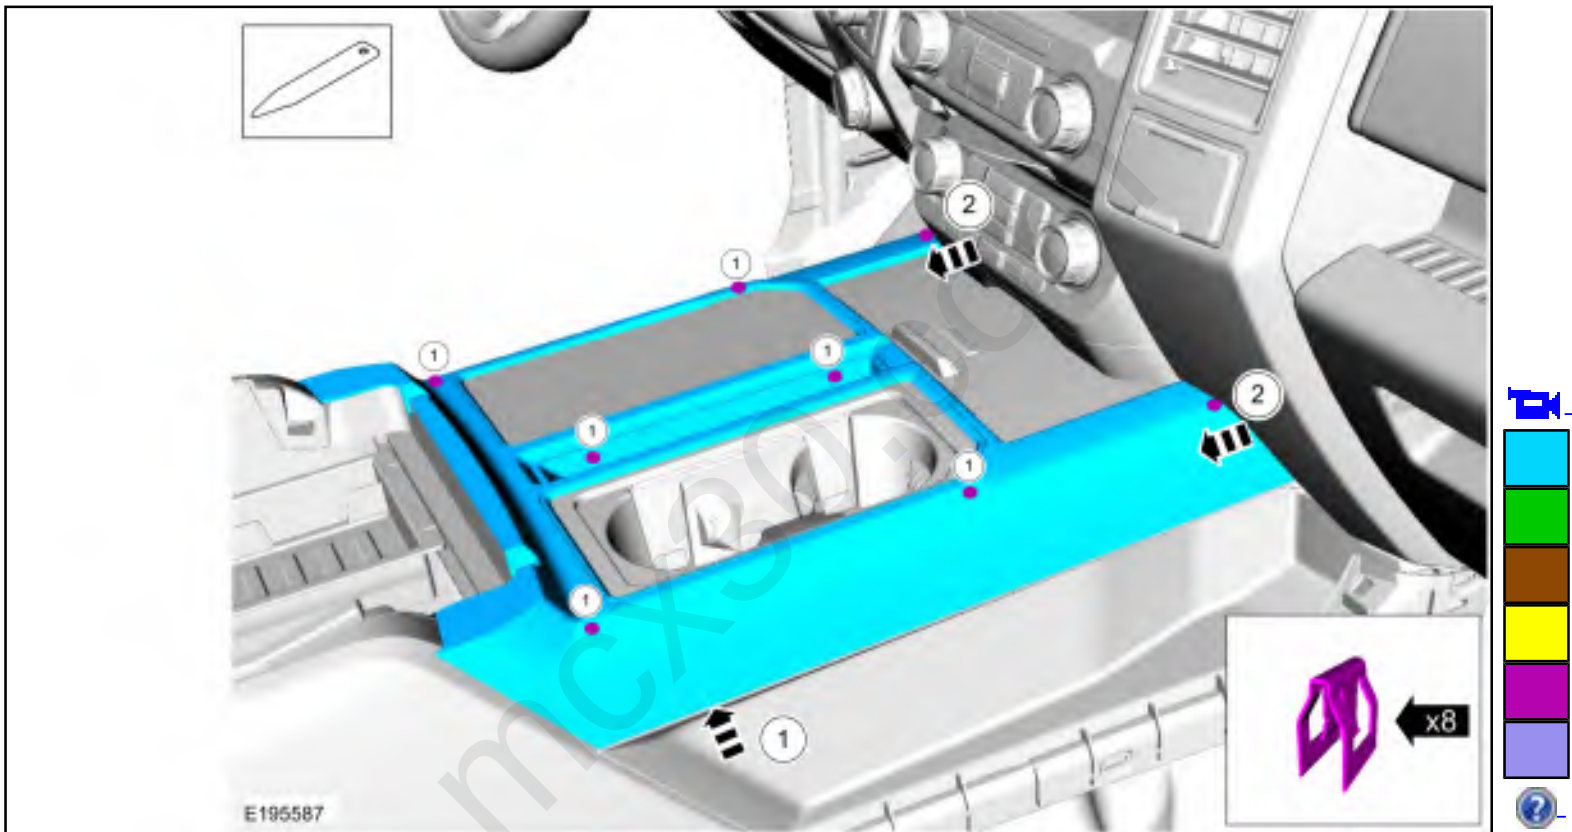

7. Remove the screws, release the clips and remove the floor console upper finish panel.
 - Disconnect the electrical connectors.

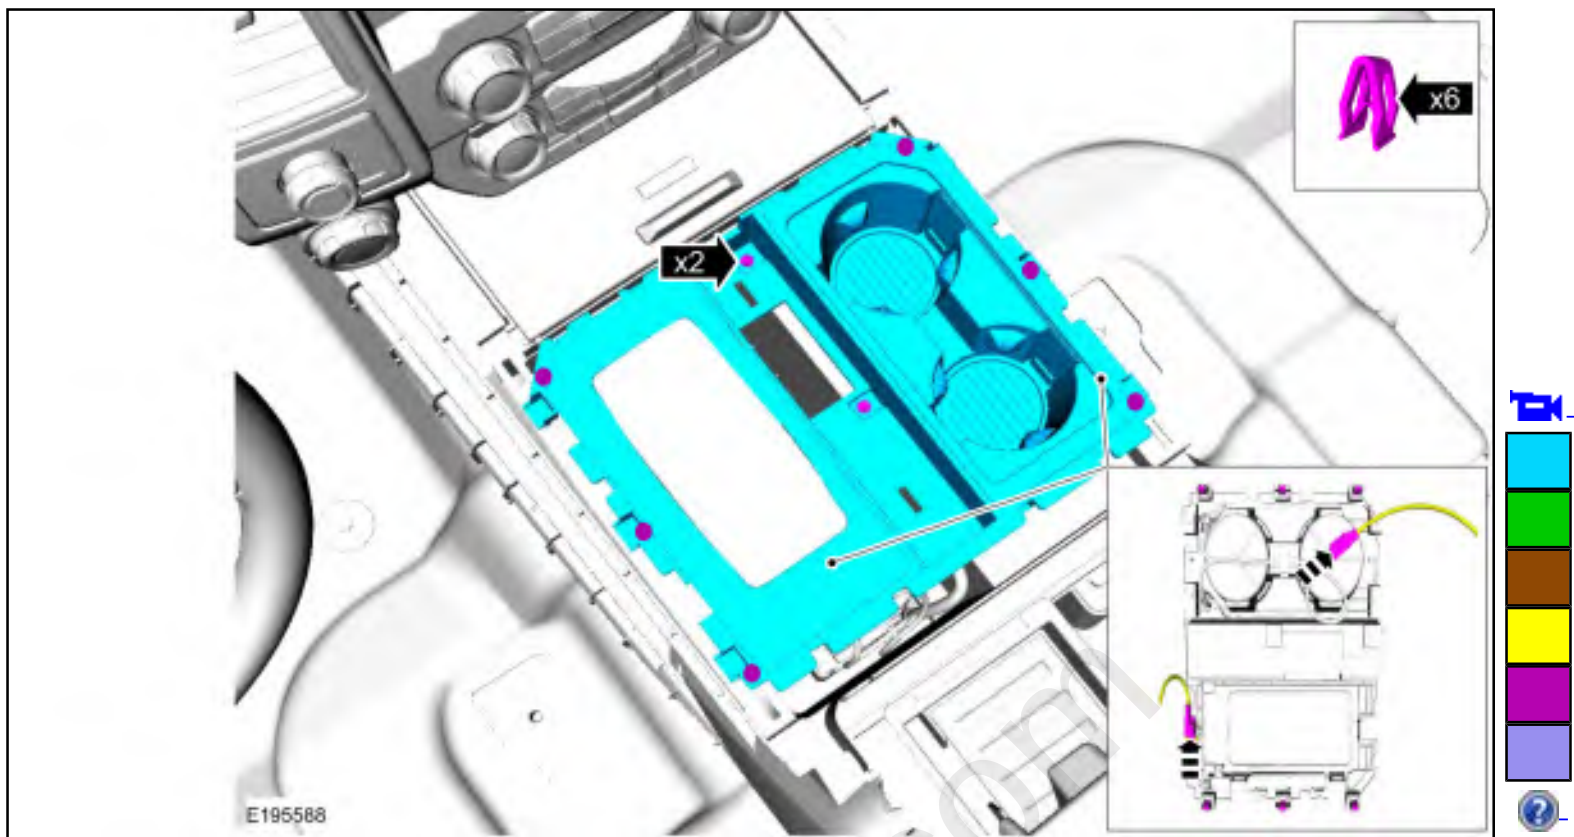


All vehicles

8. **NOTE:** *Position the front seats forward to access the rear bolts, and position the front seats rearward to access the center bolts.*


Remove the bolts and position the floor console rearward.

- Disconnect the electrical connector.

Torque: 48 lb.in (5.4 Nm)

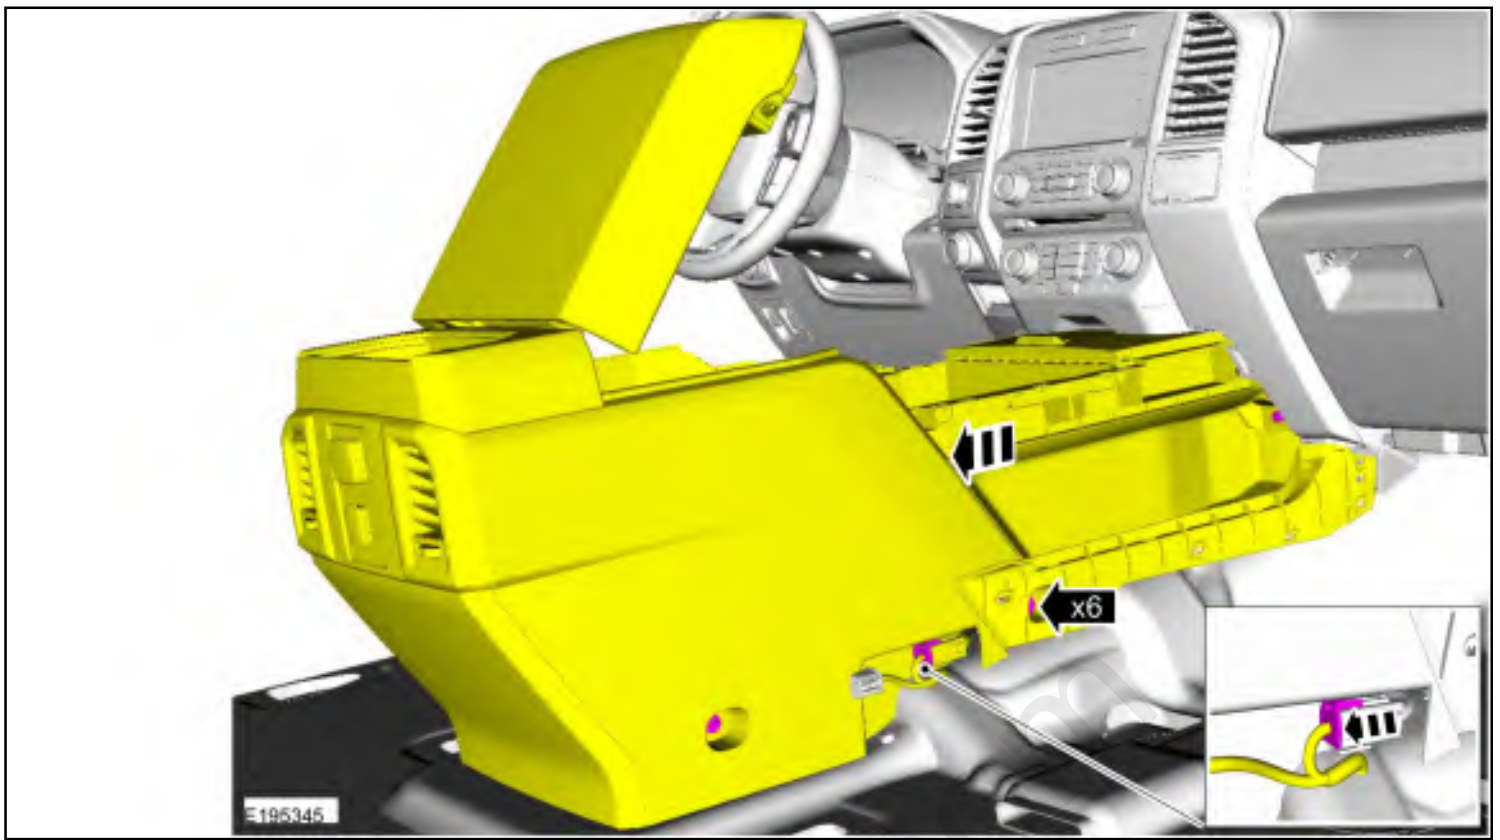

9. Disconnect the electrical connectors and remove the floor console.

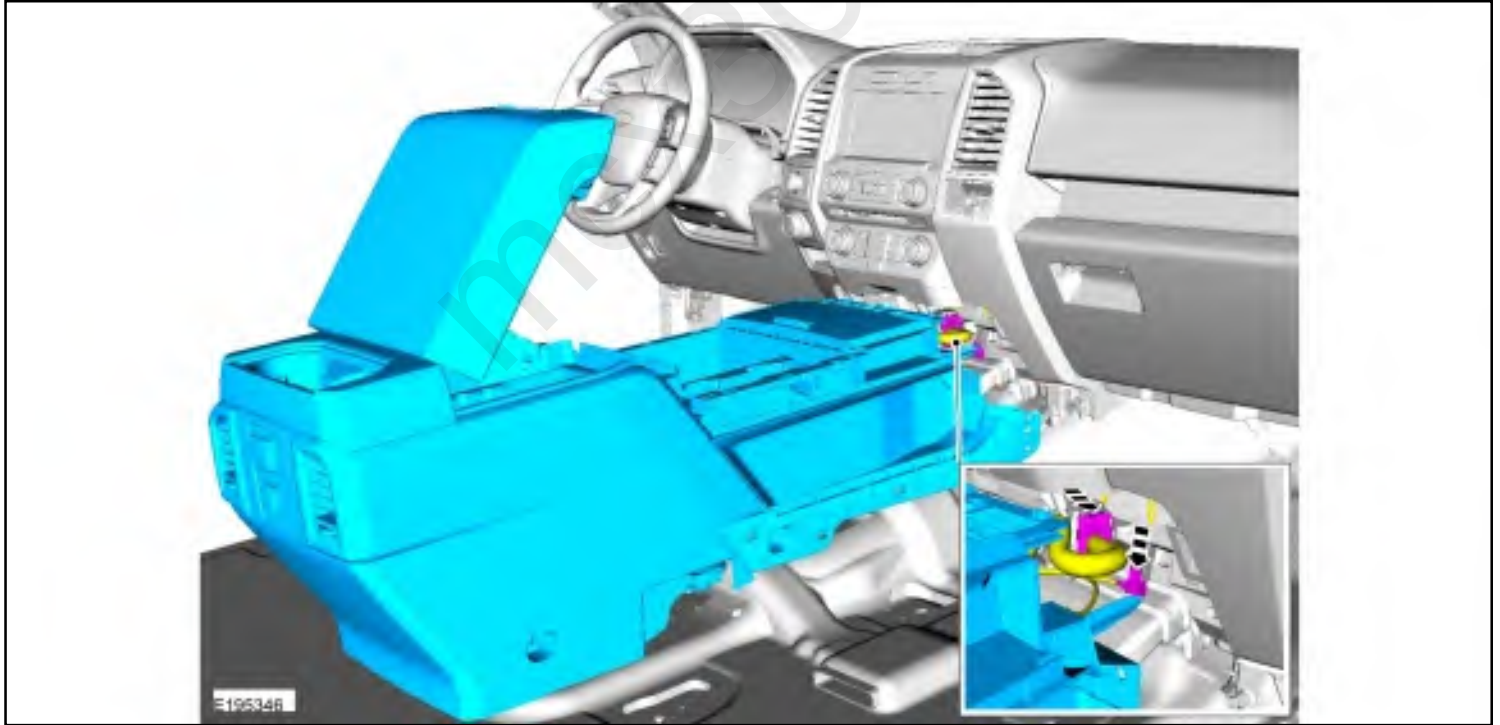

Installation

1. To install, reverse the removal procedure.

mcx30.com