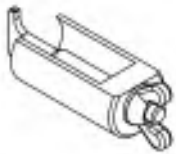


Auxiliary Power Point

Special Tool(s) / General Equipment

 E188627	501-194 Remover, Power Point TKIT-2014D-FL_ROW TKIT-2014D-ROW2
---	---

Removal

1. Open the power point cover.




2. Position the power point extractor so that it engages in the adjacent slots in the power point socket.
Use Special Service Tool: 501-194 Remover, Power Point.




E191767



1. Install the receiver cup.
2. Install and tighten the wing nut.
Use Special Service Tool: 501-194 Remover, Power Point.

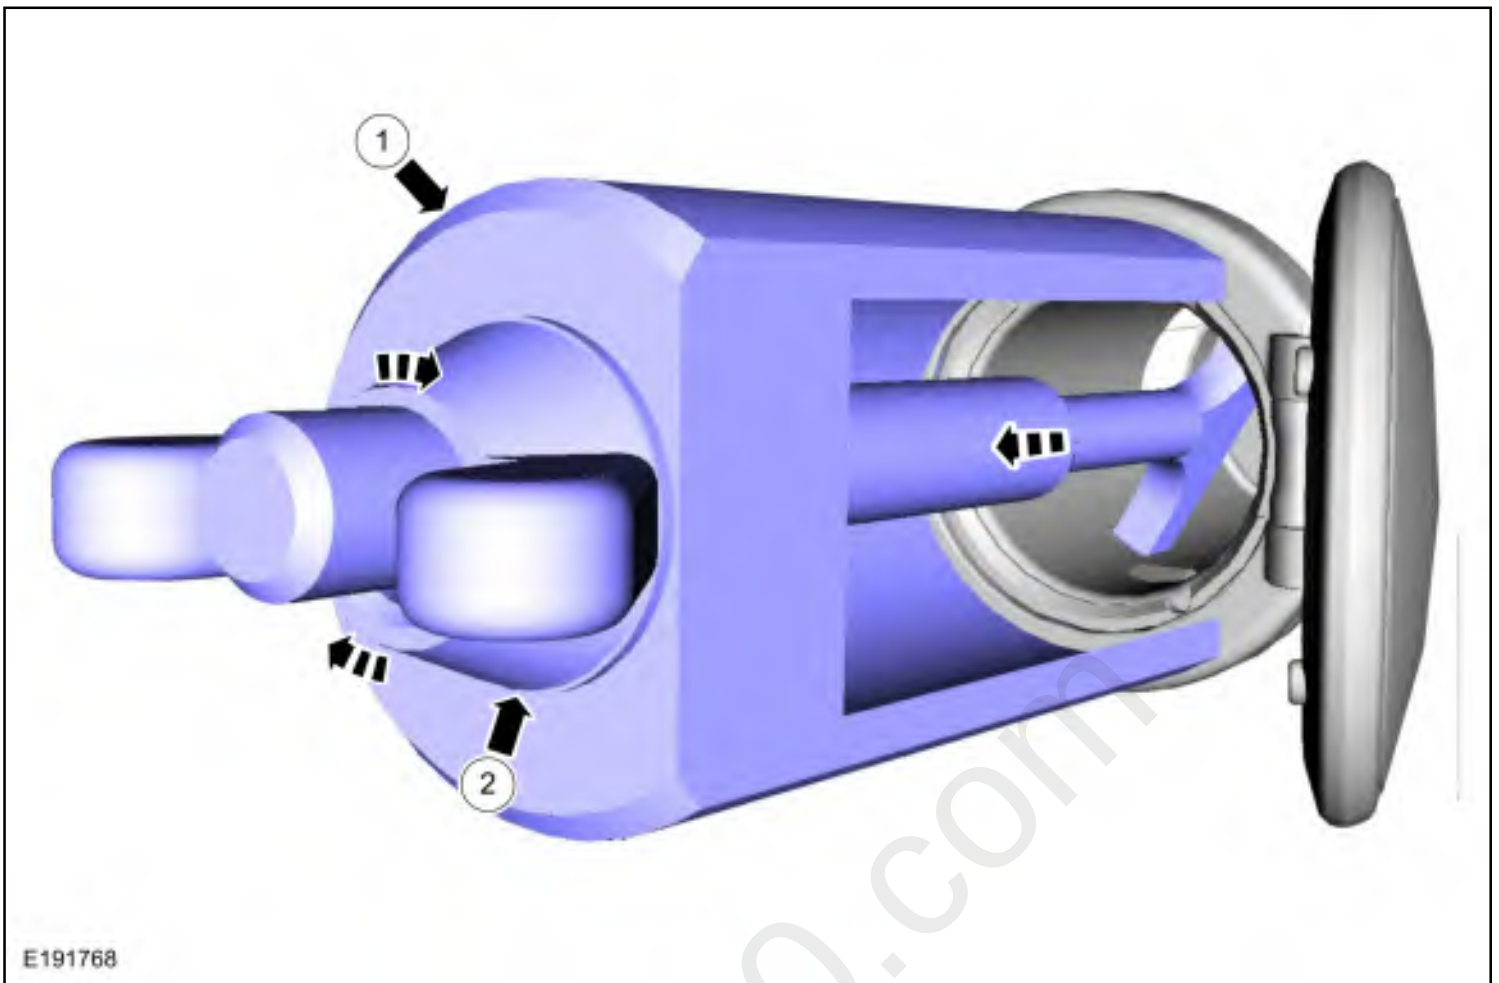


4. Tighten the wing nut to pull the power point socket out of the retainer.
Use Special Service Tool: 501-194 Remover, Power Point.

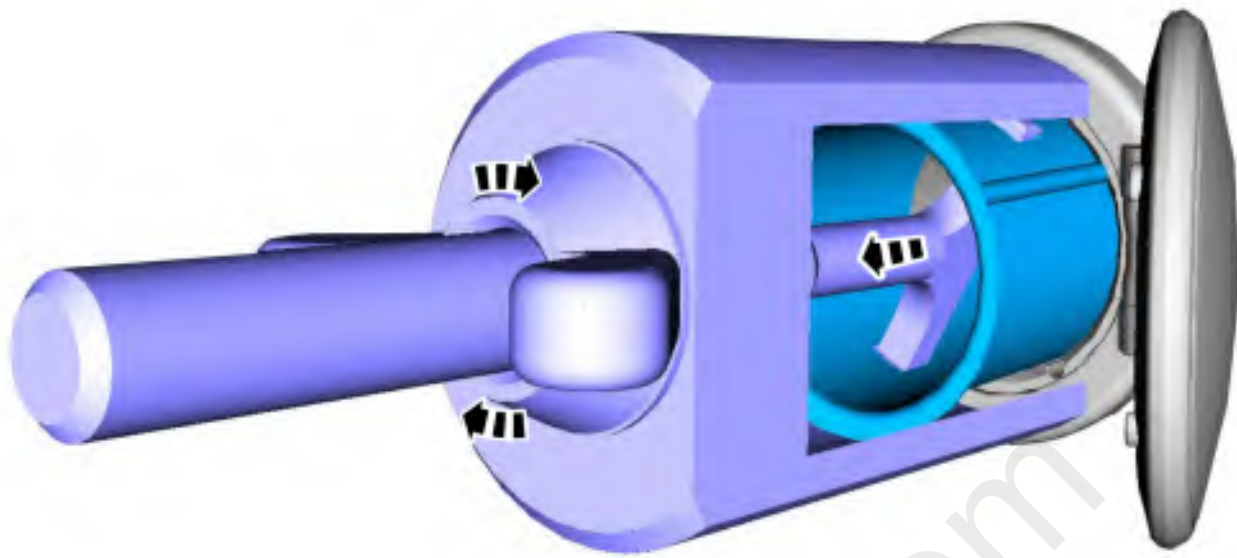

E191769



5. Disconnect the electrical connector.

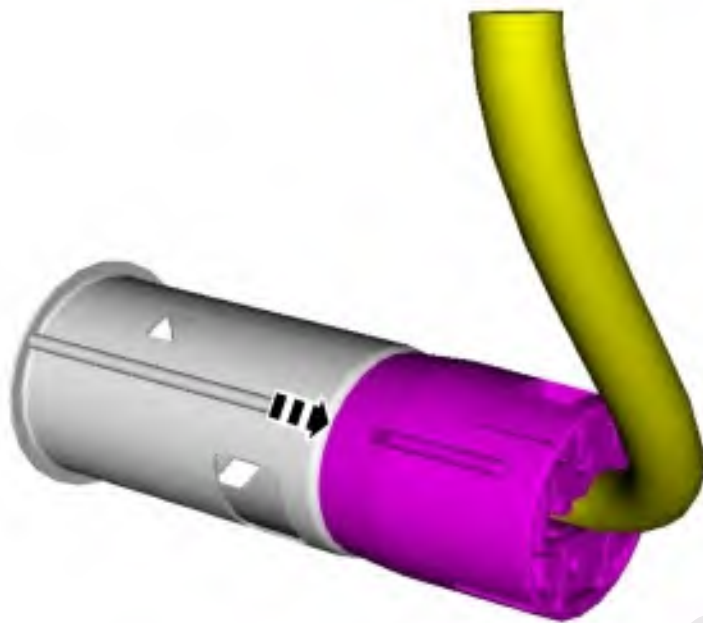

E191808



Installation

1. Connect the electrical connector and push the new power point socket into the retainer.

Copyright © 2018 Ford Motor Company
