


Tailgate Release Switch

Removal

1. Remove the tailgate release handle.
Refer to: [Tailgate Release Handle](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).
2. **NOTE:** This step is only necessary when installing a new component.

Remove the tailgate release switch.

1. Release the tailgate release switch retaining tab.
2. Remove the tailgate release switch from the tailgate release handle.

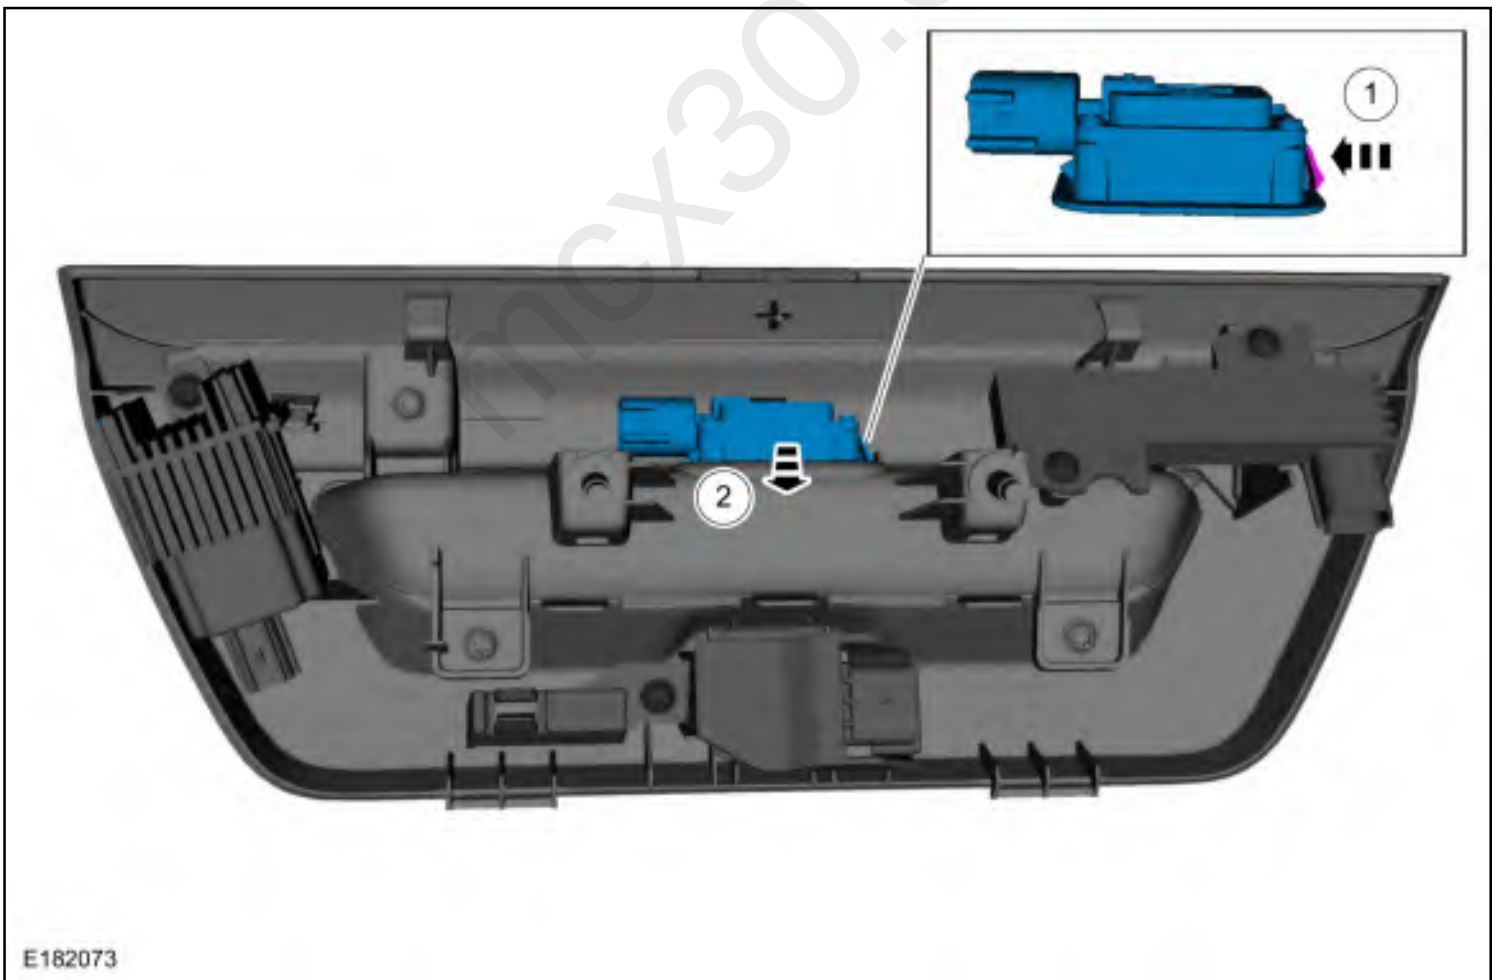

Installation

1. To install, reverse the removal procedure.
2. If equipped, align the rear camera.
Refer to: [360 Degree View Camera Alignment](#) (413-13B Parking Aid - Vehicles With: Parking Aid Camera, General Procedures).
3. If equipped, align the rear camera.
Refer to: [Pro Trailer Back Up Assist Camera Alignment](#) (413-13D Parking Aid - Vehicles With: Trailer Back Up Assist (TBA), General Procedures).

Copyright © 2018 Ford Motor Company
