

Tailgate Lock Cylinder

Removal


NOTE: Removal steps in this procedure may contain installation details.

NOTE: Repair the tailgate lock cylinder by discarding the inoperative tailgate lock cylinder and building a new tailgate lock cylinder using the appropriate lock repair service kit. The lock repair service kit includes a detailed instruction sheet to build the new lock to match the key cut pattern for the vehicle, thus allowing for single point replacement without needing to replace or reprogram other locks or keys.

1. Remove the tailgate release handle.
Refer to: [Tailgate Release Handle](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).
2. **NOTE:** This step is only necessary when installing a new component.

Remove the tailgate lock cylinder.

1. Remove the tailgate lock cylinder nut.
Torque: 28 lb.in (3.2 Nm)
2. Remove the tailgate lock cylinder.

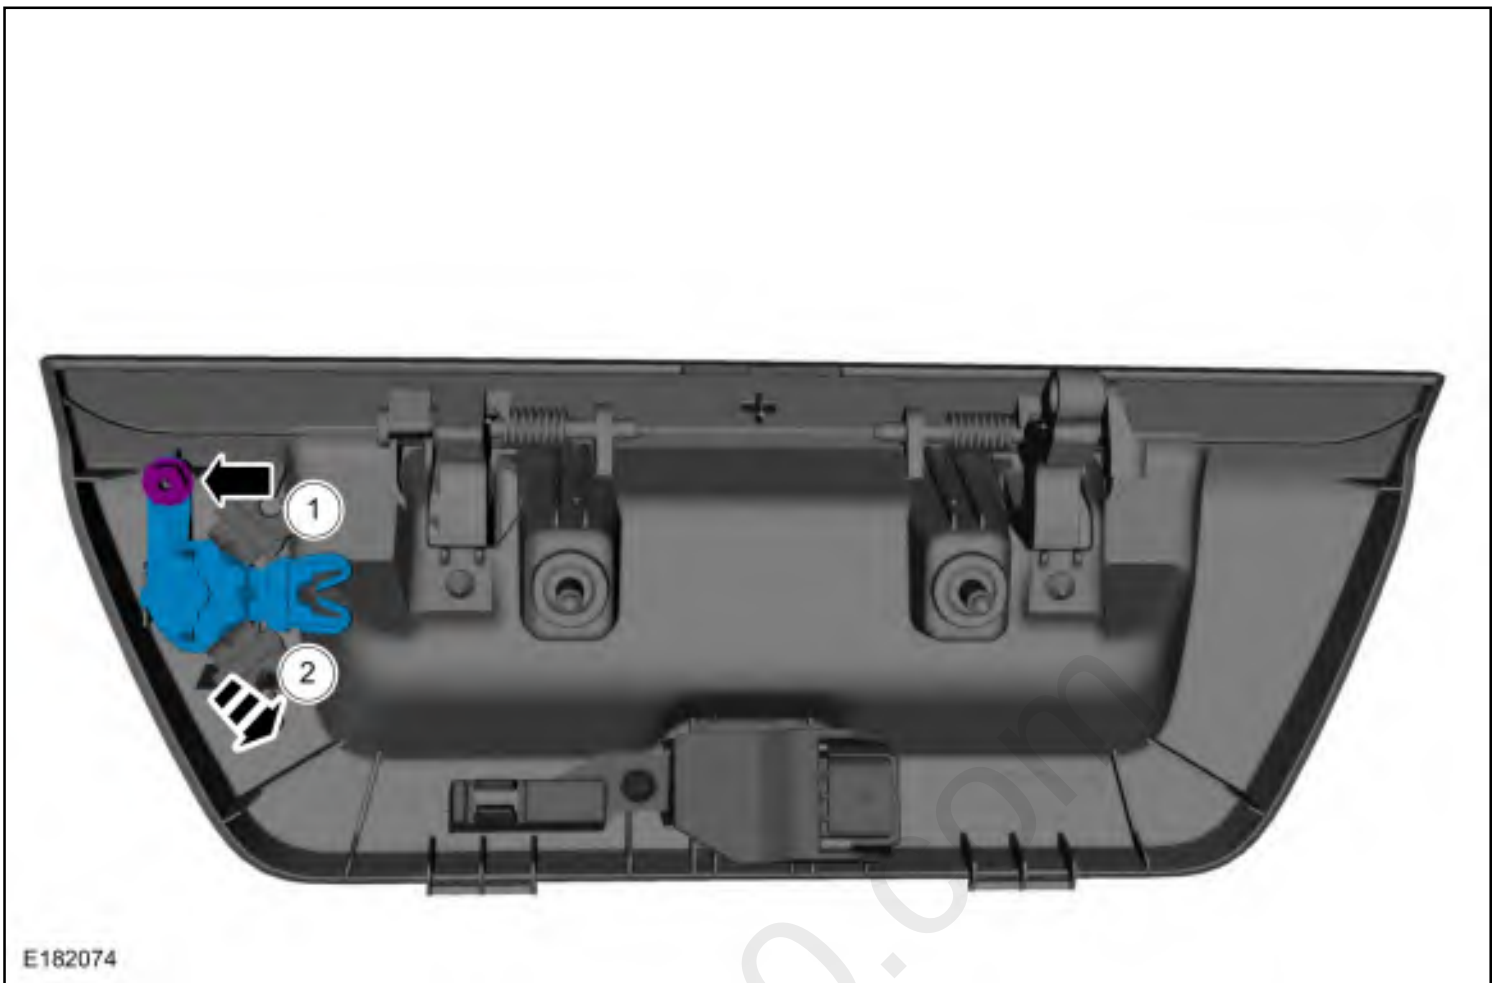

Installation

1. To install, reverse the removal procedure.
2. If equipped, align the rear camera.
Refer to: [360 Degree View Camera Alignment](#) (413-13B Parking Aid - Vehicles With: Parking Aid Camera, General Procedures).
3. If equipped, align the rear camera.
Refer to: [Pro Trailer Back Up Assist Camera Alignment](#) (413-13D Parking Aid - Vehicles With: Trailer Back Up Assist (TBA), General Procedures).